



Hillstone Networks

CloudEdge Deployment Guide

Version 5.5R11



Copyright 2025 Hillstone Networks. All rights reserved.

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of those agreements. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or any means electronic or mechanical, including photocopying and recording for any purpose other than the purchaser's personal use without the written permission of Hillstone Networks.

Hillstone Networks

Contact Information:

US Headquarters:

Hillstone Networks

292 Gibraltar Drive, Suite 105

Sunnyvale, CA 94089

Phone: 1-408-508-6750

<http://www.hillstonenet.com/about-us/contact/>

About this Guide:

This guide gives you comprehensive installation instructions of Hillstone NetworksCloudEdge .

For more information, refer to the documentation site: <http://www.hillstonenet.com/resources/>.

To provide feedback on the documentation, please write to us at:

TechDocs@hillstonenet.com

Hillstone Networks www.hillstonenet.com

TWNO: TW-DPL-VFW-EN-5.5R11-EN-V3.3-5/28/2025

Table of Contents

Table of Contents	1
Overview	14
About This Guide	14
Targeted Readers	14
vFW Models	14
System File	15
Supported Features	17
VMware Tools	17
Cloud-init	18
Licensing CloudEdge	19
Licenses	19
Platform Licenses	19
Sub Licenses	20
Function Licenses	21
Generating Application Code	24
Installing License	25
Verifying License	26
Deploying CloudEdge on KVM	28
System Requirements	28
How vFW Works on KVM Host	28

Preparation	29
Installing vFW on KVM Host	29
Step 1: Acquiring vFW software package	29
Step 2: Importing script and image files	30
Step 3: Initial login of vFW	31
Networking the vFW	32
Step 1: Viewing interfaces	33
Step 2: Connecting interfaces	34
Other Operations	35
Viewing vFW	35
Starting vFW	35
Shutting Down vFW	36
Upgrading vFW	36
Restarting vFW	36
Uninstalling vFW	36
Visiting vFW's WebUI	37
Deploying CloudEdge on OpenStack	38
Deployment Scenarios	38
System Requirements	39
Preparations	40
Deploying CloudEdge on OpenStack	40

Step 1: Import the Image File	41
Step 2: Create a Flavor	42
Step 3: Create a Network	43
Step 4: Start the Instance	45
Step 5: Login and Configure CloudEdge	46
Step 6: Reconfigure OpenStack's Router	47
Step 7: Disable OpenStack's IP checking of CloudEdge's interfaces	48
Step 8: Configure Routing, NAT, and Security policies on CloudEdge	49
Results	53
Deploying CloudEdge on VMware ESXi	54
Deployment Scenarios	54
System Requirements and Limits	54
Installing vFW	56
Installing vFW	56
Installing vFW by Importing OVA	56
Installing CloudEdge by Importing VMDK	57
Step 1: Importing VMDK	58
Step 2: Creating a Virtual Machine	60
Step 3: Selecting the CloudEdge VMDK File for VM	71
Starting and Visiting vFW	78
Visiting WebUI of StoneOS	79

Upgrading StoneOS	81
Deploying CloudEdge on Xen	82
System Requirements	82
Installing vFW	82
Step 1: Acquiring vFW software package	82
Step 2: Importing the VHD file	83
Step 3: Initial login of vFW	86
Visiting vFW's WebUI	86
Upgrading vFW	87
Deploying CloudEdge on Hyper-V	88
System Requirements	88
How vFW Works on Hyper-V Host	88
Preparation	89
Installing vFW on Hyper-V Host	89
Step 1: Acquiring vFW software package	89
Step 2: Creating a Virtual Machine	90
Step 3: Initial login of vFW	91
Visiting vFW's WebUI	91
Upgrading vFW	92
Deploying CloudEdge on AWS	93
Overview	93

Introduction to AWS	93
CloudEdge on AWS	94
Typical Scenarios	95
VPC Gateway	95
Corporate VPN	95
Server Load Balancing	96
Topology of CloudEdge on AWS for This Guide	96
Preparing Your VPC	97
Step 1: Log in Your AWS Account	98
Step 2: Adding Subnets into VPC	99
Step 3: Modifying Route Tables	100
Installing CloudEdge on AWS	101
1-Click Launching CloudEdge	101
Launching CloudEdge from EC2	104
Step 1: Selecting CloudEdge from AWS Marketplace	104
Step 2: Choosing AMI	105
Step 3: Choosing Instance Type	105
Step 4: Configuring Instance Details	105
Step 5: Adding Storage	106
Step 6: Tag Instance	106
Step 7: Configuring Security Group	106

Step 8: Launching Instance	107
Configuring Subnets and Interfaces	108
Allocating Elastic IP Addresses	108
Viewing vFW Instance Information	109
Purchase and Apply for License Software	110
Visiting CloudEdge	110
Visiting CloudEdge from Windows Using PuTTY	110
Step 1: Converting Your Private Key Using PuTTYgen	111
Step 2: Starting a PuTTY Session	111
Visiting WebUI of StoneOS	113
Basic Configurations of StoneOS	115
Creating a Policy Rule	115
Testing	115
Creating a Test Virtual Machine (Windows)	116
Step 1: Modifying Route Table	116
Step 2: Creating EC2 instance	117
Step 3: Acquiring Password of Test Instance	118
Step 4: Creating a DNAT rule	119
Step 5: Creating an SNAT rule	120
Step 6: Disabling Source/Dest. Check	121
Starting Test	122

Test 1: Visiting Private Server	122
Test 2: Internal Server to Access Internet	124
Test 3: Checking In/Out Traffic of vFW	125
Deploying HA Scenarios of CloudEdge on AWS	126
HA Typical Scenarios	126
Deployment Steps	126
Step 1: Creating VPC and Subnet	127
Step 2: Creating and Enabling Internet Gateway	127
Step 3: Creating Policies	129
Step 4: Creating IAM Roles	131
Step 5: Creating EC2 Instances	132
Step 6: Creating Network Interfaces	133
Step 7: Connecting and Configuring CloudEdge instances	135
Step 8: View HA Results	140
Step 9: Configuring the Routing of Web-server on AWS	141
Step 10: Configure Routing, NAT and Security Policies on CloudEdge	141
Results	142
Deploy CloudEdge through Amazon VPC Ingress Routing	144
Scenarios Introduction	144
Deployment Steps	145
Step 1: Creating VPC and Subnet	145

Step 2: Creating EC2 Instances	145
Step 3: Creating and Enabling Internet Gateway	145
Step 4: Creating Internet Gateway Route Table	146
Step 5: Creating Public Subnet Route Table	147
Step 6: Creating Internal Subnet Route Table	148
Step 7: Changing Source/Dest. Check	149
Step 8 : Allocating Elastic IP Addresses	150
Step 9 : Results	150
Deploying CloudEdge on Azure	153
Typical Scenarios	153
Installing CloudEdge	153
Step 1: Purchasing CloudEdge and Creating a virtual machine	154
Step 2: Viewing Public IP Address	158
Step 3: Visiting CloudEdge	158
To Login CloudEdge via SSH2	158
To Login CloudEdge via HTTPS	159
Step 4: Purchasing and Applying for License Software	159
Deploying CloudEdge on Alibaba Cloud	160
Preparation	160
Installing vFW	160
Step 1: Purchase vFW Images and Create an ECS Instance	161

Step 2: View initial configuration of vFW	162
Step 3: Set default route for VPC	163
Step 4: Purchase and Apply for License Software	164
Step 5: Visit the vFW	165
To Login vFW via SSH2	165
To Login vFW via HTTP	167
Deploying HA Scenarios of CloudEdge via HAVIP on Alibaba Cloud	168
HA Typical Scenarios	168
Deploying HA Scenarios of CloudEdge on Alibaba Cloud	169
Step 1: Create VPC	169
Step 2: Create VSwitches	171
Step 3: Create CloudEdge Instances	173
Steps 4: Create HAVIP Address	175
Step 5: Configure HA on CloudEdge.	176
Step 6: HA Results	179
Step 7: HA application	179
Deploying HA Scenarios of CloudEdgevia Secondary Private IP on Alibaba Cloud	181
HA Typical Scenarios	181
Deployment Steps	182
Step 1: Creating RAM Roles	182
Step 2: Creating Switches	184

Step 3: Creating CloudEdge Instances	186
Step 4: Adding Elastic Network Interfaces and Configuring Secondary Private IPs	187
Step 5: Purchasing an Elastic IP and Binding it to an Elastic Network Interface	189
Step 6: Configuring HA on CloudEdge	190
Step 7: View HA Results	193
Step 8: Configure Routing, NAT and Security Policies on CloudEdge	194
Results	195
Appendix	195
Applying for AccesKey	195
Deploying HA Peer Mode of CloudEdge on Alibaba Cloud	198
Topology	198
Required Versions	199
Deployment Steps	199
Step 1: Create RAM Roles	200
Step 2: Create VPC	202
Step 3: Create VSwitches	203
Step 4: Create CloudEdge Instances	206
Step 5: Add Elastic Network Interfaces	208
Step 6: Add Traffic Redirection Routes	211
Step 7: Purchase an Elastic IP and Binding it to an Elastic Network Interface	212
Step 8: Configure HA on CloudEdge	212

Step 9: Verifying HA Results	216
Step 10: Configuring Routing, NAT, and Security Policies on CloudEdge	217
Appendix	218
Applying for AccesKey	218
Deploying CloudEdge on Array AVX	222
System Requirements	222
Preparations	222
Installing CloudEdge	223
Step 1: Importing the Image	223
Step2: Creating the Instance	226
Step 3: Configuring CloudEdge	228
Deploying HA Scenarios of CloudEdge on Array AVX	230
HA Typical Scenarios	230
Preparations	230
Installing CloudEdge	231
Installing CloudEdge on AVX-A	231
Step 1: Importing the Image	231
Step 2: Creating the Instance	234
Step 3: Configuring CloudEdge	236
Installing CloudEdge on AVX-B	237
Configuring HA on CloudEdge.....	238

HA Results	239
Deploying CloudEdge on HuaweiCloud	240
System Requirements	240
Installation Steps	240
Step 1: Creating a Virtual Private Cloud(VPC)	240
Step 2: Creating a Cloud Server/ Deploying the CloudEdge	242
Step 3: Accessing CloudEdge	246
Accessing CloudEdge from the Internet	247
Logging in via SSH2	247
Logging in via HTTPS	247
Allowing Remote Users to Access VPC via SSL VPN	249
Step 1: Creating a User	249
Step 2: Configuring SCVPN Address Pool	250
Step 3: Creating Tunnel Interface	251
Step 4: Configuring SCVPN	252
Step 5: Creating Policy from VPN to trust	254
Step 6: Accessing the Resources in VPC	255
Change History	256
Version 3.3	256
Version 3.2	256
Version 3.1	256

Version 3.0	256
Version 2.0	256
Version 1.0	257

Overview

The virtualization product of Hillstone Networks is CloudEdge virtual firewall (vFW). vFW is a software product, a StoneOS system running on a virtual machine.

About This Guide

This guide introduces how to install CloudEdge on different virtualization platforms: KVM, Xen, Openstack, AWS, VMware ESXi, Hyper-V, Azure and Alibaba Cloud. This document does not cover how to configure StoneOS itself. For information of how to set up StoneOS, please refer to documents of StoneOS ([click here](#)).

Targeted Readers

This guide is intended for administrators who want to deploy CloudEdge of Hillstone Networks. Before deploying vFW on different platforms, the administrator should be familiar with the concept and components of KVM, Xen, OpenStack, AWS VMware ESXi (with vCenter and vSphere Client), Hyper-V, Azure or Alibaba Cloud. This document is written with readers in mind that have already known basic virtualization knowledge, and it will only introduce operations of how to install vFW.

vFW Models

vFW is available in multiple models. All models can be deployed on KVM, Xen, Openstack, AWS, ESXi, Hyper-V, Azure and Alibaba Cloud with formally purchased license (["Licensing CloudEdge" on Page 19](#)). The required minimum configuration of virtual machine and hard disk for each model is as follows:

Platform Models	Minimum Configuration Of Virtual Machine	Minimum Configuration Of Hard Disk	Recommended Configuration Of Hard Disk
SG-6000-VM01	2 vCPU,2 GB memory	4G	>10G

Platform Models	Minimum Configuration Of Virtual Machine	Minimum Configuration Of Hard Disk	Recommended Configuration Of Hard Disk
SG-6000-VM02	2 vCPU,4 GB memory		
SG-6000-VM04	4 vCPU,8 GB memory		
SG-6000-VM04	8vCPU,16GB memory		

Notes:

- The model of CloudEdge is determined by the CPU number authorized by the CPU license and the specification (CPU and memory) of the configuration of VM, and the model of CloudEdge is finally determined by the lower value of the two. If the configuration of VM does not reach the minimum configuration required above, the corresponding model cannot be started normally.
- All models of CloudEdge support up to 10 network cards, with each network card corresponding to one interface of the CloudEdge.

System File

System files, which are the image files required for deploying vfw of CloudEdge, are created by compiling a specific series of files into a single file format to facilitate your download and usage. Due to the limitations and requirements of the deployment environment, the CloudEdge-series vfw provides the following five formats of system files to meet different deployment scenarios.

- .img format: used for CloudEdge version upgrade scenarios.
- .ova format: used for deploying CloudEdge in the VMware ESXi environment.
- .qcow2 format: used for deploying CloudEdge in the KVM environment.
- .vhd format: used for deploying CloudEdge in Hyper-V and Xen environments.
- .vmdk format: used for deploying CloudEdge in the VMware ESXi environment.

In addition, to help you more accurately determine the applicable deployment scenarios for system files, the system files of the CloudEdge-series vfw products follow certain naming conventions, as described below:

- System files named “SG6000-CloudEdge-5.5R11-ARM-CLOUD” / “SG6000-CloudEdge-5.5R11-ARM-CLOUD-v6” : Suitable for deploying CloudEdge 5.5R11 in cloud environments based on ARM architecture CPUs.
- System files named “SG6000-CloudEdge-5.5R11-ARM-KVM” / “SG6000-CloudEdge-5.5R11-ARM-KVM-v6” : Suitable for deploying CloudEdge 5.5R11 in bare-metal KVM environments based on ARM architecture CPUs.
- System files named “SG6000-CloudEdge-5.5R11” / “SG6000-CloudEdge-5.5R11-v6” : Suitable for deploying CloudEdge 5.5R11 in cloud environments based on X86 architecture CPUs.

Note: If your deployment environment of CloudEdge supports both IPv4 and IPv6, you need to select a system file with the “-v6” identifier in the file name. If your deployment environment of CloudEdge supports only IPv4, you need to select a system file without the “-v6” identifier in the file name.

You need to obtain and download system files of corresponding file names and formats based on different deployment scenarios. If you cannot determine the required system files for your current deployment scenario, please consult Hillstone Networks technical support for assistance.

Supported Features

vFW supports the following features:

- Firewall (policy, zone, NAT, etc)
- Application Identification
- Attack Defense (AD)
- Intrusion Prevention System (IPS)
- IPSec VPN
- SSL VPN
- User Management
- Access Control
- High Availability (HA)
- Link Load Balance (LLB)
- Logging
- Statistics Set
- QoS

VMware Tools

CloudEdge is integrated with VMware Tools in order to be automatically deployed in VMware platform. After the CloudEdge deployment is complete, power on the virtual machine which is running with CloudEdge in vCenter, and then click this virtual machine's Summary page to view the basic information about the IP address of the management interface, CPU, memory, and interface traffic.

Cloud-init

Cloud-init is a tool developed for the initialization of virtual machines in the cloud environment, which reads data from a variety of data sources by the "URL" or "configdrive" mode and then configures the virtual machine accordingly. The common configuration includes setting the user name & password, policy, nat rule, routing and so on.

CloudEdge is integrated with cloud-init, which will run with CloudEdge's startup , so that CloudEdge can be deployed automatically in the virtualization platform.

Notes:

- There may be a delay when cloud-init configuration file is injected to CloudEdge virtual machine. You have to wait for a few minutes before viewing the virtual machine's configuration. If it is not injected yet in 10 minutes, you can make a soft restart to solve the problem.
- If there is a command which is not injected, check that whether the command is wrong or use the abbreviation.

Licensing CloudEdge

CloudEdge SG6000-VM provides license controlled capacities. Only after installing formal license can the CloudEdge reach the listed capacity. To purchase a license, please contact sales people ([click here](#)).

Licenses

CloudEdge licenses are categorized to platform licenses, sub licenses, and function licenses. A platform license is the base to install all other types of licenses. You can apply for all kinds of licenses through SN number (i.e., old version license mechanism). If the virtual firewall is reinstalled, due to the change of SN number, you have to re-apply for a license.

From the version 5.5R5, the CloudEdge license has been upgraded to the latest version, with a different licensing mechanism. After the installation of the new platform license, the SN number of the device will be changed to a virtual SN (vSN for short). If you want to continue to obtain function or sub licenses, they can be applied through the vSN number. For the new license does not depend on the SN number of the original system after the re-installation of system, the new license that was originally applied for can still be effective. At the same time, Hillstone provides LMS (license management system) to verify and manage licenses, which can ensure the security of licenses.

Notes: If your CloudEdge is a full license product, you do not need to purchase or install any license. It is already a full feature firewall when you purchase it.

Platform Licenses

CloudEdge is pre-installed with a free default license without application. You can apply for the platform license (the old version of the platform license) through the SN number or directly apply for the new version of the license. Old version platform license is divided into base license and trial license. The new platform license is divided into base license and sub license.

- **Default License**

CloudEdge has a built-in free default license. All features are available in system with default license,

such as SSL VPN, iQoS and IPS. However, performance is limited, e.g., only 2 IPSec VPN tunnels and 2 SSL VPN users are supported. The license is valid for 30 days. After expiration, all functions of the system can not be used, the OS version and all the signature databases can not be upgraded.

- **Platform Trial License**

After the installation of Platform Trial License, you will get the same features as system with Platform Base License. But the duration will be shorter. The duration is determined by the agreement you signed, which is a relative period, for example, one month. After expiration, the existing configuration can not be modified. After the reboot, the original configuration can not be displayed, the default configuration instead, and only the platform functions are available while the performance is limited. So, reboot is not recommended.

- **Platform Sub License**

After the installation of Platform Sub License, you will get the same features as system with Platform Base License. But the duration will be shorter. The duration is determined by the agreement you signed, which is an absolute period, for example, March 1 to March 31. After expiration, the existing configuration can not be modified. After the reboot, only the platform functions are available while the performance is limited.

- **Platform Base License**

When a CloudEdge is officially purchased, you can buy a Platform Base License. Platform Base License provides fundamental firewall features.

When it expires, the system can be normally functioning, but cannot be upgraded to higher version.

Sub Licenses

Sub licenses control whether corresponding functions are enabled or not and the time limit as well.

- **IPSec VPN Sub License**

IPSec VPN sub License enables IPSec VPN function and authorizes the maximum number of

IPSec VPN accesses. After installing multiple IPSec VPN licenses, you can increment the maximum number of IPSec VPN accesses. When the license expires, the IPSec VPN connection will be disconnected. IPSec VPN function will not be allowed to configure. Until the device is restarted, all the configurations of IPSec VPN will not be lost.

- **SSL VPN Sub License**

SSL VPN Sub License enables SSL VPN function and authorizes the maximum number of SSL VPN accesses. After installing multiple SSL VPN licenses, you can increment the maximum number of SSL VPN accesses. When the license expires, the SSL VPN connection will be disconnected. SSL VPN function will not be allowed to configure. Until the device is restarted, all the configurations of SSL VPN will not be lost.

- **iQoS Sub License**

iQoS sub license enables iQoS function. When the iQoS sub license expires, all the configurations of iQoS will not be lost until the device is restarted.

- **CPU Sub License**

CPU Sub License authorizes the maximum number of vCPUs available to the CloudEdge. The CPU license has both base and trial types, and the base CPU license does not expire. After the trial license expires, system will restart and the number of available vCPUs will revert to 2vCPU, which is the configuration of the minimum model SG-6000-VM01.

Function Licenses

Some functions are only enabled when that corresponding license is installed. The function service includes:

- **IPS (Intrusion Prevention System) License**

IPS License provides IPS function and its signature database upgrade. IPS License has its own validity. When it expires, the IPS function works normally, but IPS signature database cannot be upgraded.

- **IPS Trial License**

IPS trial license provides the trial use of IPS function and IPS signature database upgrade. It has an independent validity period. You can select an available duration when applying the license, which cannot exceed 90 days. Multiple IPS trial licenses can be used together. After the license is expired, you can no longer use the IPS function and upgrade the IPS signature database. Restart is required for the first installation. Do not require restart when you add more trial licenses. After the license is expired, restart is required for installing a new license.

- **Anti-Virus (AV) License**

Anti-Virus License provides anti-virus function, and antivirus signature database and antivirus intelligence file engine upgrade. Anti-Virus License has its own validity. When it expires, the anti-virus function and intelligence file engine detection function work normally, but Anti-Virus signature database and antivirus intelligence file engine database cannot be upgraded.

Note: Only CloudEdge that is deployed on X86-based or ARM-based server supports the antivirus intelligence file engine database.

- **AV Trial License**

Anti-Virus trial license provides the trial use of antivirus function, and antivirus signature database and antivirus intelligence file engine database upgrade. It has an independent validity period. You can select an available duration when applying the license, which cannot exceed 90 days. Multiple anti-virus trial licenses can be used together. After the license is expired, you can no longer use the anti-virus function and upgrade the antivirus signature database and antivirus intelligence file engine database. Restart is required for the first installation. Do not require restart when you add more trial licenses. After the license is expired, restart is required for installing a new license.

- **Botnet Prevention License**

Botnet Prevention license provides botnet prevention function and its signature database upgrade. Botnet Prevention license has its own validity. When it expires, the botnet prevention function works

normally, but botnet prevention signature database cannot be upgraded. Restart is required for the first installation. Do not require restart when you renew the subscription.

- **Botnet Prevention Trial License**

Botnet Prevention trial license provides the trial use of botnet prevention function, and botnet prevention signature database upgrade. It has an independent validity period. You can select an available duration when applying the license, which cannot exceed 90 days. Multiple botnet prevention trial licenses can be used together. After the license is expired, you can no longer use the botnet prevention function and upgrade the botnet prevention signature database. Restart is required for the first installation. Do not require restart when you add more trial licenses. After the license is expired, restart is required for installing a new license.

- **Cloud sandbox License**

Cloud sandbox License provides Cloud sandbox function, which controls the suspicious file quantity allowed to be uploaded to the cloud sandbox every day, also, it provides white list upgrade. Cloud sandbox License has its own validity. When it expires, the cloud analysis is stopped and the white list can not be upgraded. However, if the suspicious traffic still matches the analysis entries in the local cache, the sandbox function is still valid. After the system is restarted, the cloud sandbox function will not be used.

- **URL DB License**

URL DB License provides URL filter function and allows URL database to upgrade. URL DB License has its own validity. When it expires, the URL filter function works normally, but URL database cannot be upgraded.

- **APP signature License**

APP DB License allows APP database to upgrade. APP DB license is issued with platform license.

There is no need to apply for it. The validity of APP DB License also follows platform license. When the platform license expires, APP signature database cannot be upgraded.

- **SR-IOV Throughput License /Trial License**

SR-IOV Throughput License provides throughput improvements for SR-IOV network cards of CloudEdge. When the license is installed, the throughput of SR-IOV card will be improved. SR-IOV Throughput License will not be expired, but the trial license will expire. And the throughput will return to the default value after expired. The default throughput of SR-IOV network cards varies from platform, and the magnitude of increase after installing the license varies as follows:

SR-IOV Throughput	VM01	VM02	VM04	VM08
Default	2Gbps	4Gbps	8Gbps	16Gbps
After Installing License	10Gbps	20Gbps	40Gbps	80Gbps

Notes:

- Besides the licenses listed above, a hardware platform from Hillstone Networks can install other types of licenses, e.g. StoneShield, but currently, CloudEdge does not support licenses other than those listed here.
- Perimeter Traffic Filtering (PTF) function can be seen in StoneOS, but it is not available for the moment. Future versions will support the two functions.
- Currently, Anti-Virus (AV) License and Sandbox License are not available in CloudEdge for private cloud platform.

Generating Application Code

To install a license, log in the StoneOS and generate application code. After receiving the application code, the vendor or salesperson will send you license information. Before logging in your CloudEdge,

you need to refer to the installation instructions to set up your CloudEdge firewall first ([KVM](#), [Xen](#), [Openstack](#), [AWS](#), [Hyper-V](#) , [Azure](#), [Alibaba Cloud](#) or [VMware ESXi](#)).

To generate application code in WebUI:

1. Log in the StoneOS system.
2. Select **System > License** to enter the license page.
3. Fill in the required fields under the **License Request** section.
4. Click **Generate**, and a series of code appears.
5. Copy and send the code to salesperson or vendor. They will return the license to you soon.

Installing License

After receiving license, you need to upload the license to make it take effect.

To install a license:

1. Select **System > License** to enter the license page.
2. Under **License Request**, choose one of the following two methods:
 - **Upload License File:** select this radio button and click **Browse**, select the license plain text file (.txt) to upload it to the system.
 - **Manual Input:** Select this radio button, and copy and paste license code into the text box.
3. Click **OK** to save the license.
4. Go to **System > Device Management**, and click the **Option** tab.
5. Click **Reboot**, and select **Yes** in the prompt.
6. The system will reboot. When it starts again, installed license(s) will take effect.

Verifying License

For Hillstone CloudEdge virtual firewall, after installing the license, you need to connect to the license server to verify the validity of the license to prevent the license from being cloned. System supports two ways, one is connected to the public Internet license server check, another is by LAN connection to the LMS (License Management System), you can choose one of these ways according to need.

- The way by public Internet license server is suitable for some small private or public cloud scenarios. After the virtual firewall connects to the public server, the server will provide the validation of the license (currently the public network server does not provide the distribution and management of the licenses). If the cloned license is found or the virtual firewall is not checked by server, the virtual firewall will be restarted in 30 days.
- The way by LAN LMS is suitable for large private or industry cloud scenarios. After the virtual firewall connect to the LMS, the LMS not only provides license validation, but also provides automatic distribution and management of licenses. If the cloned license is found or the virtual firewall is not checked by server, the server will recover all virtual firewall(clone or be cloned firewall) license and restart the virtual firewall; if the virtual firewall does not connect to the server to check, virtual firewall will restart in 30 days.

To verify licenses, take the following steps:

1. Select System > License> License Verify.
|
2. At the top of the page is the License Server Status bar, which shows the server's connection status,IP Address, port, Virtual Router, and verify type.
3. Below the page is the License Verify Setting bar, you can use one of the following two ways according to need:

- Internet: select "Internet" and "Virtual Router", click OK. The virtual firewall will verify the license through the public server.
- Intranet: select "Intranet", and specify the server's "Address", "Port" and "Virtual Router", and click OK. The virtual firewall's license will be checked, distributed and managed through the LMS.

4. Go to System > Device Management, and click the Option tab.
5. Click Reboot, and select Yes in the prompt.
6. The system will reboot. When it starts again, installed license(s) will take effect.

Notes: When you verify your license through a public server, make sure that the VRouter used to connect to the public network server is bound to zone, and the interface bound to the zone can access the Internet. For more information about LMS, refer to <LMS User Guide>.

Deploying CloudEdge on KVM

Using a Linux server running Kernel-based Virtual Machine (KVM) to deploy vFW is the most usual method to use vFW on a single host.


System Requirements

To deploy vFW on KVM, the host should meet the following requirements:

- Require at least 2 vCPU and 2 GB memory.
- For KVM environment establishment, the Linux system should have installed KVM, qemu, bridge-utils, uml-utilities, libvirt, virtinst, virt-viewer and virt-manager (To install these components, use command: `sudo apt-get install kvm qemu bridge-utils uml-utilities libvirt-bin virtinst virt-manager virt-viewer`).

How vFW Works on KVM Host

vFW on a KVM host usually works as gateway for virtual machines. In order to be able to forward data from/to the internal virtual machines, you need to connect the vFW tap interface to the Open Switch or Linux bridge of KVM host, and the internal virtual machines define vFW as their gateway.

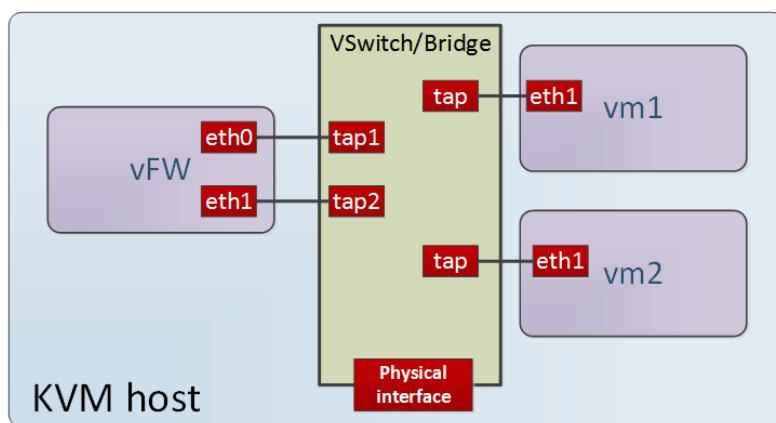

Preparation

Before installing vFW, make sure you have a Linux host running a Linux system (Ubuntu 14.02 is recommended), and you have installed KVM and its components, including qemu, bridge-utils, uml-utilities, libvirt, virtinst, virt-viewer and virt-manager).

To install those components, use the command:

```
sudo apt-get install kvm qemu bridge-utils uml-utilities libvirt-bin virtinst virt-manager virt-viewer.
```

Notes: Before installing, you need create a bridge on the KVM in advance and add the interface of the KVM to the bridge.

Installing vFW on KVM Host

To install vFW on a KVM host, take the following steps:

Step 1: Acquiring vFW software package

1. Enter the access URL for the Hilstone firmware download center ([https://im-ages.hillstonenet.com/](https://images.hillstonenet.com/)) in your browser to open and log in to the Hilstone firmware download center (Hilstonenet images).
2. In the left-side directory, click **StoneOS** to access the StoneOS page.
3. On the right side of the page, locate the **CloudEdge** folder. Obtain and download the CloudEdge KVM script file (named "hsvfw" or "hsvfw_v1.1") within this folder. The script file contains commands that can install, upgrade or restart CloudEdge. It should be noted that this script is not applicable to all KVM environments. Before using it, make sure that the KVM environment has already met the [system requirements](#).

4. Navigate back to the StoneOS page, and according to your requirements, click the corresponding version number on the right side of the page to obtain and download the CloudEdge image file (an .qcow2 file, e.g. SG6000-VFW02-V6-r1230.qcow2).

Step 2: Importing script and image files

The following steps use Windows system to access KVM host.

1. In Windows, log into KVM host, enter the following command, and a dialog box will prompt.

rz

2. In the dialog box, browse your computer and select script and image file respectively. The files will be uploaded to the root directory of KVM host.
3. Enter the following command to check if the files are uploaded.

ls

4. The output should display the following two files as below:

```
root@kickseed:~ # ls
hsvfw  SG6000-CloudEdge-VM02-5.5R4P2.qcow2
```

5. To install the image, use the following command:

sudo ./hsvfw install ./vfw_qcow2 [vm01|vm02|vm03|vm04|vm08] vm_name if_num

sudo	A tool to execute system admin command.
./hsvfw install	Execute the install command in the script "hsvfw" which is under root directory .
./vfw_qcow2	Define the vFW image name, includ-

	ing suffix ":".
vm01 vm02 vm03 vm04 vm08	Define the vFW model. Such as vm01 represents SG6000-VM01.
<i>vm_name</i>	Specifies a name for your vFW.
<i>if_num</i>	Specifies how many interfaces in your vFW. VM01 and VM02 can have up to 10 interfaces. VM04 and VM08 can have up to 20 interfaces. By default, your vFW has four interfaces.

For instance, use the following command to create a vFW named "vfwname" of model SG6000-VM02 with 4 interfaces.

```
./hsvfw install SG6000-CloudEdge-VM02-5.5R3P4-kvm.qcow2 vm02
vfwname -n 4
```

6. Linux will print the port number of Console.

Step 3: Initial login of vFW

A newly installed vFW only has Console access. You may visit vFW by accessing the Console port.

To access vFW Console port:

1. In Linux, use the following command:

```
telnet localhost port_num
```

<i>port_num</i>	Console port number. It is the printed Console number, like "7014" in the
-----------------	---

example above.

For instance, the command below will access to vFW of Console port 7014:

```
hillstone@vfw:~$ telnet localhost 7014
Trying ::1...
Trying 127.0.0.1...
Connected to localhost.
Escape character is '^]'.
login:
```

2. After login prompt, enter username and password "hillstone"/"hillstone".

login: hillstone


password: hillstone

3. From now on, you can use command line interface to manage vFW. It is recommended to change your password at earliest convenience. For information about how to configure StoneOS, refer to StoneOS documents ([click here](#)).

Networking the vFW

After installation, each interface becomes a virtual switch, and automatically connects to a vnet interface of KVM. If the vFW wants to access to other networks (internal network or Internet), place the vnet interface of vFW and the interface of intended network under the same vSwitch, the two networks will connect to each other.

Using the example below, we will introduce how to connect "vnet0" (vFW) to "90-eth0" (a physical interface of KVM host).

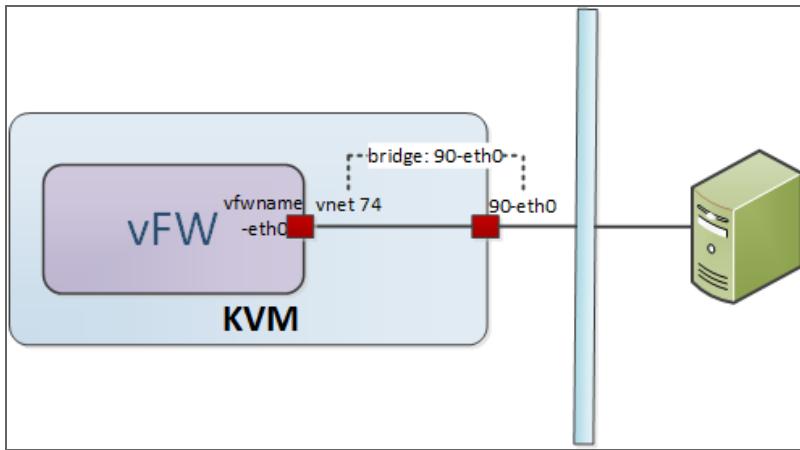

Step 1: Viewing interfaces

In this example, a physical network (e.g. company's internal network) is connected to the physical interface of KVM host. You may view the interface information of KVM host interface and vFW interfaces.

1. In Linux, use the command **ifconfig** to view interface. The KVM host interface is "90-eth0" as below:

```
billstone@vfw:~$ ifconfig
90-eth0  Link encap:Ethernet  HWaddr 52:54:00:ed:3e:e6
          inet addr:192.168.221.1  Bcast:192.168.221.255  Mask:255.255.255.0
                  UP BROADCAST MULTICAST  MTU:1500  Metric:1
                  RX packets:0  errors:0  dropped:0  overruns:0  frame:0
                  TX packets:0  errors:0  dropped:0  overruns:0  carrier:0
                  collisions:0  txqueuelen:0
                  RX bytes:0 (0.0 B)  TX bytes:0 (0.0 B)
```

2. In Linux, use command **brctl show** to show vSwitch and interfaces.

In this print message, vFW's "eth0" connects to KVM's "vnet74" under the bridge "vfwname-eth0", which means vFW's eth0 also belongs to bridge "vfwname-eth0". The physical interface 90-

eth0 belongs to bridge "90-eth0".

hillstone@vfw:~\$ brctl show			
bridge name	bridge id	STP enabled	interfaces
90-eth0	8000.525400ed3ee6	yes	90-eth0-nic
vfwname-eth0	8000.52540024d3cd	yes	vfwname-eth0-nic
vfwname-eth1	8000.525400968bad	yes	vfwname-eth1-nic
			vnet74
			vnet75

Step 2: Connecting interfaces

To allow two networks communicate, just put their interfaces under the same bridge. In this example, in order to connect VFW's eth0 and physical interface 90-eth0, you can either move vFW's vnet74 into physical interface's bridge "90-eth0", or you can place physical interface under vFW interface's bridge.

Normally, we move new interfaces into the old bridge, so we will remove vFW's interface from its auto-created bridge and move it under the physical interface's old bridge.

1. In Linux, to remove vFW's vnet74 from its auto bridge "vfwname-eth0", use the following command:

```
sudo brctl delif vfwname-eth0 vnet74
```

2. Add the just removed interface into the intend bridge:

```
sudo brctl addif 90-eth0 vnet74
```

3. Enter the command **brctl show** to check if the two interfaces belong to the same bridge now.

hillstone@vfw:~\$ brctl show			
bridge name	bridge id	STP enabled	interfaces
90-eth0	8000.525400ed3ee6	yes	90-eth0-nic
			vnet74

4. From now on, vFW can communicate with KVM host's network.

Other Operations

Viewing vFW

To view vFW information, use the command:

```
sudo ./hsvfw show vm_name
```

./hsvfw show	This is the show command in the script.
vm_name	Specify the name of vFW you want to view.

For instance, to view information of vFW whose name is "vfwname":

```
root@kickseed:~ # ./hsvfw show vfwname
VFW instance: 16
VFW instance name: vfwname
Version:SG6000-CloudEdge-VM02-5.5R3P4-kvm.qcow2
Status: running
Console port: 7014
VNC port: :4
Mgmt address: 192.168.146.2
Interface count: 2
Interface detail:
Interface  Type      Source      Model      MAC
-----
vnet11    network   vfwname-br0  virtio    52:54:00:47:a0:f5
vnet12    network   vfwname-br1  virtio    52:54:00:83:3c:0a
```

Starting vFW

To start an existing vFW on KVM host, use the command:

```
sudo ./hsvfw start vm_name
```

./hsvfw start	This is the start command in the script.
vm_name	Specify the name of vFW you want to start.

Shutting Down vFW

To shut down a vFW, use the command:

```
sudo ./hsvfw shutdown vm_name
```

./hsvfw shutdown	This is the shutdown command in the script.
vm_name	Specify the name of vFW you want to shut down.

Upgrading vFW

Since StoneOS 5.5R1P7.1, CloudEdge can be upgraded online. You can just visit StoneOS WebUI on **System > Upgrade Management** page to upgrade the firewall. This upgrade method is recommended. For detailed operations, you may refer to *StoneOS WebUI User Guide*.

Restarting vFW

To restart vFW, use the command:

```
sudo ./hsvfw reboot vm_name
```

./hsvfw reboot	This is the restart command in the script.
vm_name	Specify the name of vFW you want to restart.

Uninstalling vFW

To uninstall an existing vFW, use the command:

```
sudo ./hsvfw uninstall vm_name
```

./hsvfw uninstall	This is the uninstall command in the script.
vm_name	Specify the name of vFW you want to uninstall.

Visiting vFW's WebUI

The first interface of vFW, eth0/0, is enabled with DHCP by default. If vFW is connected to a network with DHCP server, eth0/0 will get an IP address automatically. You can open vFW's WebUI interface by visiting eth0/0's address in a browser.

To visit vFW's WebUI:


1. Use telnet to visit vFW's Console interface (refer to ["Deploying CloudEdge on KVM" on Page 28](#))
2. To view IP address of eth0/0, use the command:
show interface ethernet0/0
3. Configure a route , the destination address is 0.0.0.0/0 , and the next hop is the getway of the KVM host(192.168.221.254).
4. Open a browser (Chrome is recommended), enter eth0/0's IP address in the address bar.
5. Enter login name and password (hillstone/hillstone).
6. Click **Login**, and you will enter StoneOS's WebUI manager.
7. About how to use StoneOS, refer to StoneOS related documents ([click here](#)).

Deploying CloudEdge on OpenStack


This example describes how to deploy CloudEdge at the edge of the router of OpenStack platform to protect the server in the original virtual network.

Deployment Scenarios

There was a server **cirros** deployed on the OpenStack platform connected with the external public network **exit** through the router **admin-vr**. The following is the original virtual network topology:

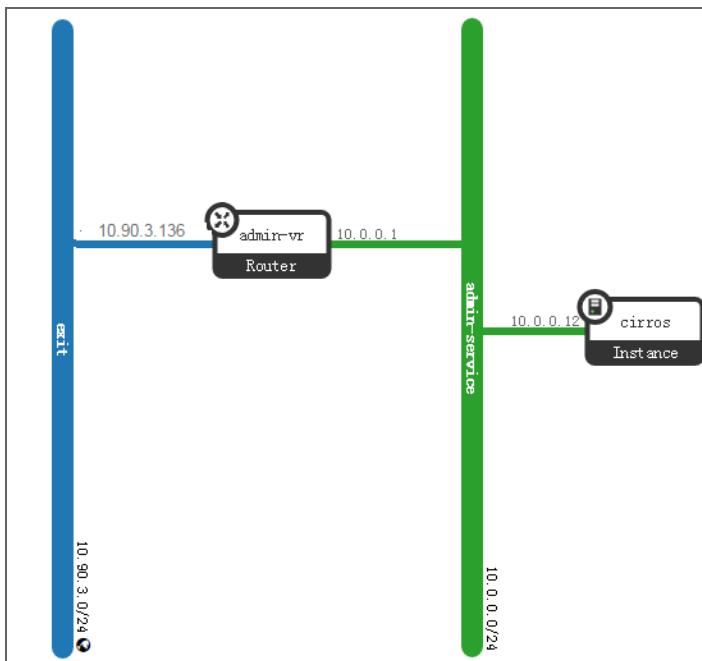

In this example , a CloudEdge instance **vfw** is deployed at the edge of the router **admin-vr**, and then it is connected with the external public network **exit**. At the same time, SNAT, DNAT rules and security policies are configured on CloudEdge **vfw** to protect the server **cirros**.

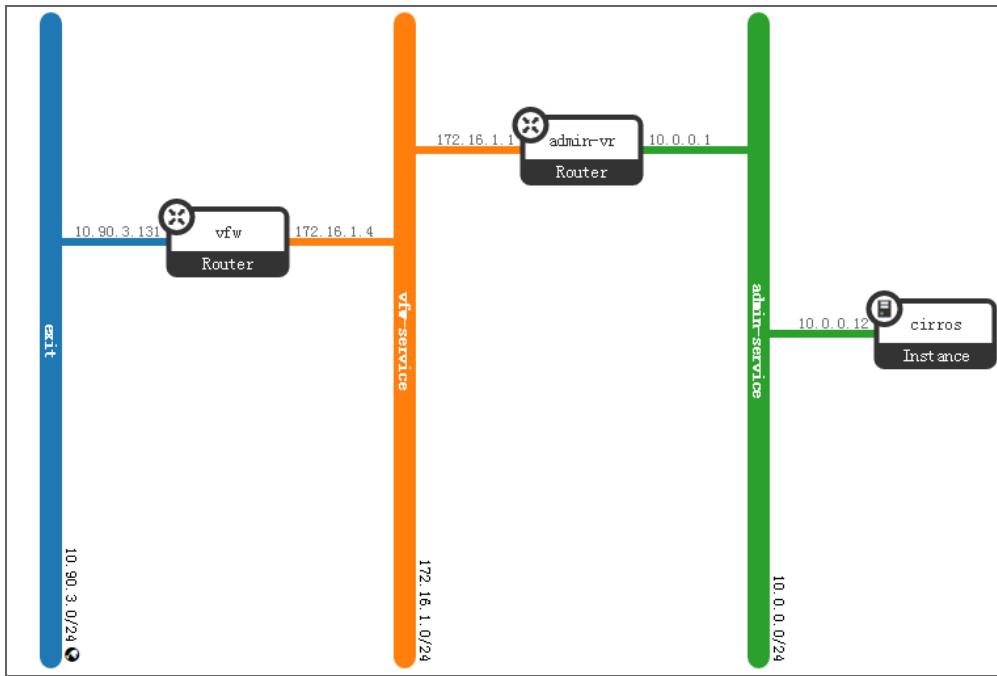

Note: For user reference, the parameters such as subnet, interface, and IP addresses described in this example's steps are exactly the same as those in the topology diagram.

System Requirements

To deploy CloudEdge on an OpenStack platform, the following requirements should be met:

- CloudEdge requires at least 2 vCPU and 2 GB memory. For the specification of product models, refer to [the vFW Models](#) .
- The Linux system is installed with OpenStack (Icehouse version), and its components, including Horizon, Nova, Neutron, Glance and Cinder (For OpenStack installation guide, refer to <http://docs.openstack.org/icehouse/install-guide/install/apt/content/>).
- OpenStack is required to provide KVM virtual machine.

Preparations

Take the following steps to obtain and download the image file required for deploying the CloudEdge on OpenStack (an .qcow2 file).

1. Enter the access URL for the Hilstone firmware download center (<https://images.hillstonenet.com/>) in your browser to open and log in to the Hilstone firmware download center (Hilstonenet images).
2. In the left-side directory, click **StoneOS** to access the StoneOS page.
3. According to your requirements, click the corresponding version number on the right side of the page to obtain and download the CloudEdge image file.

Notes: Different deployment environments require different formats of CloudEdge system files.

Please obtain the system file format that corresponds to your current deployment scenario. See [System Files](#). If you cannot determine the required system files for your current deployment scenario, please consult Hillstone Networks technical support for assistance.

Deploying CloudEdge on OpenStack

- [Step 1: Importing Image File](#)
- [Step 2: Creating a Flavor](#)
- [Step 3: Create a Network](#)
- [Step 4: Starting the Instance](#)
- [Step 5: Login and Configure CloudEdge](#)
- [Step 6: Reconfigure OpenStack's Router](#)

- [Step 7: Release OpenStack's IP checking of CloudEdge's interfaces](#)
- [Step 8: Configure Routing, NAT, and Security policies on CloudEdge](#)

Step 1: Import the Image File

To import the CloudEdge image file into the OpenStack platform as an image , take the following steps:

1. Log in to the OpenStack W WebUI with a normal account, and select **Project > Compute> Images**.
2. Click **Create Image** on the top right corner.

Image Details
Specify an image to upload to the Image Service.

Image Name*
vfw

Image Source

Source Type
File

File*
Browse... SG6000-CloudEdge-5.5R6-v6.qcow2

Format*
QCOW2 - QEMU Emulator

3. In the <Create Image> dialog, configure following options.

Option	Description
Image Name	Enter the image name, such as "vfw".
Image Source	Click Browse , and select the image file in the qcow2 format from the local PC.
Format	Select QCOW2-QEMUEmulator from the Format dropdown list.

4. Click **Create Image**. The image file will be imported successfully and displayed in the list.

Step 2: Create a Flavor

Normally, a non-admin user cannot change the properties of an instance, including core, and memory. If you want to change an instance, you can change the flavor it belongs to, since the instance inherits what its flavor has. To create a flavor, take the following steps:

1. Log in to OpenStack WebUI with the admin account.
2. Select **Admin> System> Flavors**, and click **Create Flavor** on the top right corner.
3. In the <Create Flavor> dialog, configure the flavor.

Name *	VM01
ID	auto
VCPUs *	2
RAM (MB) *	2048
Root Disk (GB) *	4

In the <Flavor Information> tab, set the basic information.

Name	Enter the flavor name, such as "VM01".
ID	Skip this step since ID is automatically generated by OpenStack.
VCPUs	Specify the number of CPU cores as 2.
RAM (MB)	Specify the RAM size of the virtual machine as 2048MB.
Root Disk (GB)	Specify the size of root disk .The minimum is 4 GB.

4. Click **Create Flavor**.

Step 3: Create a Network

To create a network, take the following steps:

1. Log in to OpenStack WebUI with the admin account.
2. Select **Project > Network > Networks** and click **Network** on the top right corner.

To create a network, take the following steps:

1. Log in to OpenStack WebUI with the admin account.
2. Select **Project > Network > Networks** and click **Network** on the top right corner.
3. In the < Create Network> Dialog box, create a network as "vfw-service", click **Next** and continue to configure the subnet information.

Subnet Name
vfw-service

Network Address ?
172.16.1.1/24

Gateway IP ?
172.16.1.1

Disable Gateway

In the <Subnet> tab, set the flowing information

Network Name	Enter the subnet name as “vfw-service” .
Network Address	Enter the network address as “172.16.1.0/24” .
Gateway IP	Enter the Gateway IP as “172.16.1.1” .

4. Click **Next**, and then click **Create** to complete configurations.

Step 4: Start the Instance

Log in to OpenStack WebUI with admin account. To boot the CloudEdge instance, take the following steps:

1. Select Project > Compute > Instance, and click **Launch** after the image list created in step 1.



2. In the <Launch Instance> dialog box, configure the followings.

3. In the <Details> tab, enter the **Instance Name** as "vfw".

4. In the <Flavor> tab, select the flavor "VM01" configured in step 2.

In <Networks> tab, select the network "exit" and "vfw-service".

Allocated 2						Select networks from those listed below.
Network	Subnets Associated	Shared	Admin State	Status		
1 > vfw-service	vfw-service-sub	No	Up	Active	<input type="button" value="-"/>	
2 > exit	ext-net	Yes	Up	Active	<input type="button" value="-"/>	

5. In the <Security Groups> tab, the selected security group needs to be configured with the rules that allow both internal and external traffic to enter the instance. CloudEdge will provide the more comprehensive access control policies than security groups.
6. Click **Launch Instance**.

Step 5: Login and Configure CloudEdge

After the above steps, you can take the following steps to login CloudEdge :

1. Log in to OpenStack WebUI, select **Project > Compute > Instance**.
2. In the instance list, click **vfw** to enter the details page. Click **Console** tab, and you can access CloudEdge via the embedded command interface..
3. You can also open the browser (Chrome browser is recommended and the HTTPS management is enabled by default), and enter the IP address of the “exit” network (such as <https://10.90.3.131>). In the login interface, type the username and password. The default username and password is hillstone and hillstone. Click **Login**, and the device system will initiate.
4. Click **Network > Interface**, select ethernet 0/1, and configure the **Binding Zone** as "Layer 3 zone" and IP configuration as "DHCP". The interface ethernet 0/1 will get the IP address assigned by

OpenStack automatically.

Basic Configuration

Interface Name: ethernet0/1

Description: (0 - 63) chars

Binding Zone: Layer 2 Zone Layer 3 Zone TAP No Binding

Zone: trust

HA sync: Enable

NetFlow Configuration: -----

IP Configuration

Type: Static IP DHCP PPPoE

Set gateway information from DHCP server as the default gateway route

Advanced DDNS

Step 6: Reconfigure OpenStack's Router

Log in to Openstack WebUI with admin account. To reconfigure the router, take the following steps:

1. Select Project > Network > Network Topology, click the router "admin-vr", and delete the interface originally connected to the "exit" network.

Add Interface

Subnet *

vfw-service: 172.16.1.0/24 (vfw-service-sub)

IP Address (optional) ?

Router Name *

admin-vr

Router ID *

68a33f63-7048-40d5-9bb7-e342d666c889

2. Click **Add Interface** to reconnect to the network "vfw-service".

Add Interface

Subnet *
exit: 10.90.3.0/24 (ext-net)

IP Address (optional) ?
[empty input field]

Router Name *
admin-vr

Router ID *
68a33f63-7048-40d5-9bb7-e342d666c889

3. Click **Submit**.
4. Select **Project > Network >Routers**, and click on the route name to view the details.
5. Click <Static Routes>tab, and add a static routing to the "vfw" instance.

Add Static Route

Destination CIDR *
0.0.0.0/0

Next Hop *
172.16.1.4

Step 7: Disable OpenStack's IP checking of CloudEdge's interfaces

To disable OpenStack's IP checking of CloudEdge's interfaces take the following steps:

1. Select **Project > Network > Network**, click the "exit" network to view the details .
2. Select the <Port> tab, click the port whose IP address is 10.90.3.131. On the port details page, copy the port ID.

Overview		Allowed Address Pairs	
Name	None		
ID	d271715b-8230-460c-9912-112bf4b30b08		
Network Name	exit		
Network ID	36a66eab-5a49-41ae-aee5-22c43d01930f		
Project ID	d17d6870def74ed5b132035b275e697f		
MAC Address	fa:16:3e:5d:03:b2		
Status	Build		
Admin State	UP		
Port Security Enabled	True		
DNS Name	None		
DNS Assignment			
None			
Fixed IPs			
IP Address	10.90.3.131		
Subnet ID	a9058d63-1112-4da7-824c-48b4ae3add6c		

3. Execute environment variables on the control node, and then execute command:**neutron port-update 15acbc6f-c6d6-46fa-af54-28cdf6807150 --allowed-address-pairs type=dict list=true ip_address=0.0.0.0/0**("15acbc6f-c6d6-46fa-af54-28cdf6807150" is the port ID coped in the last step.)


```
root@ubuntu:/home/ubuntu# neutron port-update 15acbc6f-c6d6-46fa-af54-28cdf6807150 --allowed-address-pairs
neutron CLI is deprecated and will be removed in the future. Use openstack CLI instead.
Updated port: 15acbc6f-c6d6-46fa-af54-28cdf6807150
```

4. Repeat steps 1-3 above to disable OpenStack's IP checking of another interface of CloudEdge.

Step 8: Configure Routing, NAT, and Security policies on CloudEdge


To protect the "cirros" server instances, you need to continue to configure static routing, source NAT, destination NAT and access control policies on the CloudEdge instances. For the detailed configurations, take the following steps:

1. Log in to the CloudEdge instance **vfw** via WebUI.
2. Select **Network > Routing > Destination Route**, and configure a static route connected to the **cirros** server.
 - Destination: 10.0.0.0
 - Netmask: 24
 - Next-hop: Gateway 172.16.1.1

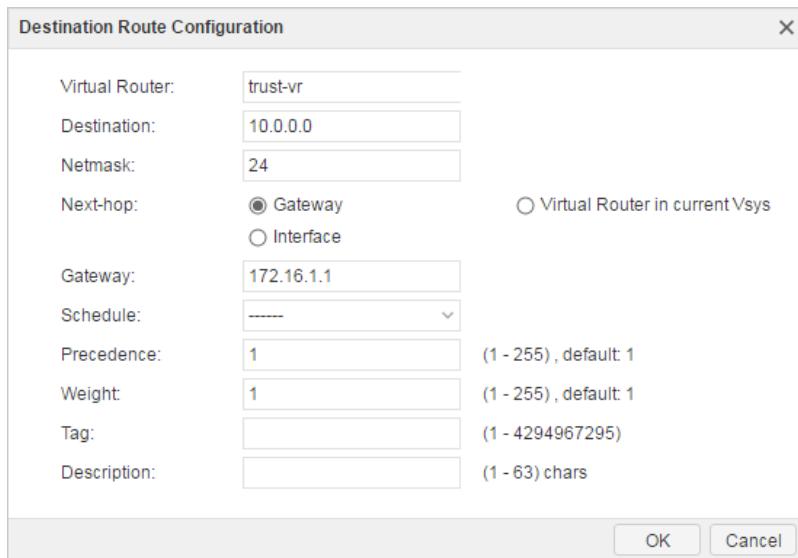

3. Select **Policy > NAT > SNAT**, and configure a source NAT rule.
 - Source Address: Any
 - Destination Address: Any
 - Ingress Traffic: All Traffic
 - Egress Traffic: Egress Interface etherent 0/0

- Translate to : Egress IF IP

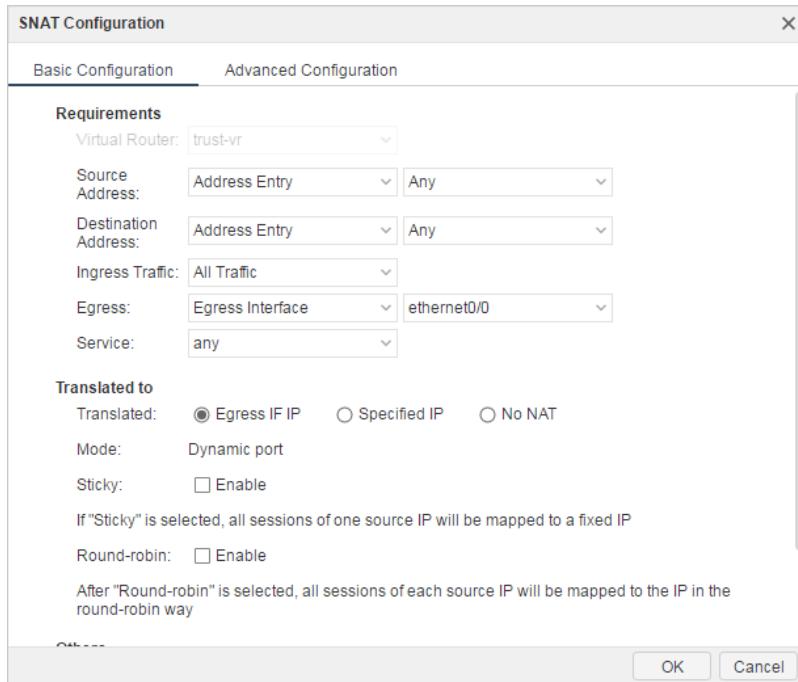

4. Select **Policy > NAT > DNAT**, and configure a destination NAT rule.

- Source Address: Any
- Destination Address: 10.90.3.129/32
- Action: NAT

- Translate to IP: 10.0.0.12

DNAT Configuration

[Basic Configuration](#) [Advanced Configuration](#)

Requirements

Virtual Router:

Source Address:

Destination Address: /

Service:

Translated to

Action: NAT No NAT

Translate to:

Translate Service Port to

Port: Enable Port:

Load Balance: Enable If enabled, traffic load will be balanced to different Intranet servers.

Others

Redirect: Enable


HA group: 0 1

Description: (0 - 63 chars)

5. Select **Policy > Security Policy**, and configure a security policy.

- Source: Any
- Destination: Any

- Action: Permit

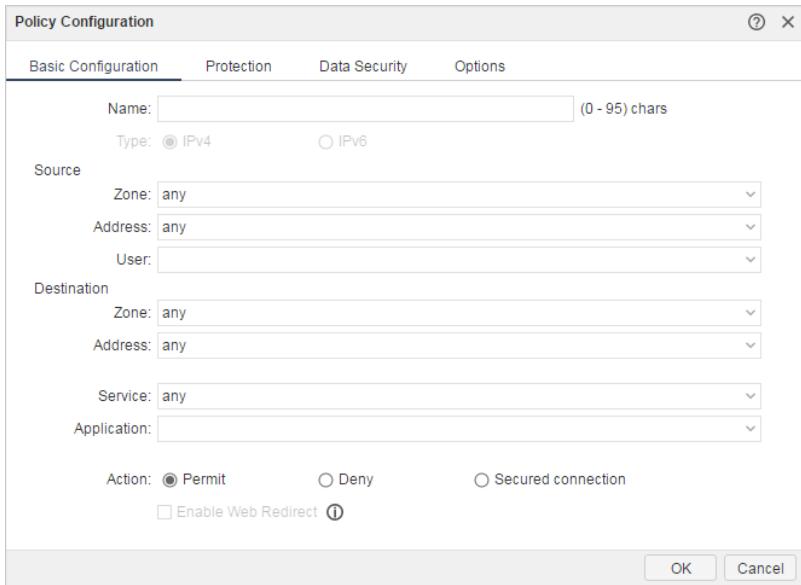

6. For more information about how to set up StoneOS, refer to StoneOS documentation ([click here](#)).

Results

After above configurations, the IP address of the cirros server will be translated to a public IP address through DNAT rules for the access of Internet users. At the same time, the source IP address of the cirros server's traffic sending to the Internet will be translated to the IP address of the CloudEdge's exit interface through SNAT rules, so as to protect the server from external attacks.


Deploying CloudEdge on VMware ESXi

CloudEdge is packed in VMDK and OVA file, and can be installed on a VMware ESXi server in a X86 device.

Before deploying vFW, you should be already familiar with VMware vSphere hypervisor, ESXi host and VMware virtual machines.

Deployment Scenarios

You can deploy one or more virtual firewalls on ESXi servers.

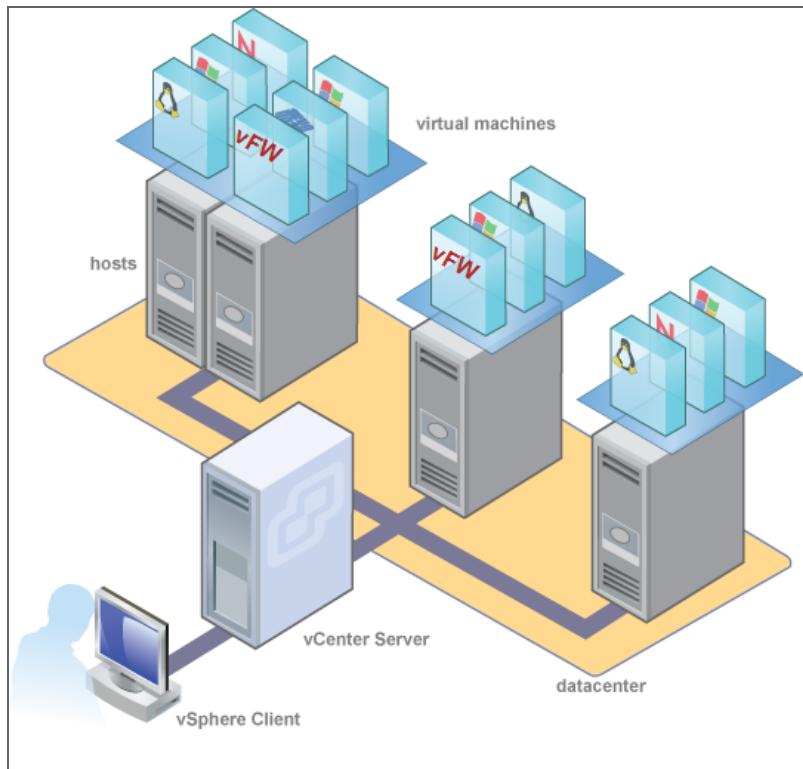

System Requirements and Limits

To deploy CloudEdge , the VMware ESXi server should be:

- VMware ESXi 6.0 or later versions.
- Requires at least 2 vCPU and 2 GB memory.
- It is suggested to create at least three vmNICs on a vFW: a management interface, a date ingress and a data egress.
- NIC type must be E1000 or vmxnet3. It is recommended that each VM can only be installed the same type of NIC, not both E1000 and vmxnet-3.

Installing vFW

To improve manageability and make full use of vSphere Hypervisor, we suggest you use vCenter and vSphere Client to manage ESXi servers.

You can deploy vFW by importing VMDK file or OVA file(VMDK and OVA file only from 5.5R4), importing OVA file is recommended, and then you can upgrade online using .img file; if the version of VMware vSphere Hypervisor is 6.0, deploying vFW by importing OVA file is recommended.

Installing vFW

Installing vFW by Importing OVA

Set up your ESXi Server, vCenter Server and vSphere Client host before installing vFW, and then get the OVA file.

1. Save the OVA file in your local computer.
2. Double click the local Sphere Client to enter the login page. In the login page, enter the IP address/Name , username and password of vCenter, and click **Login** to enter the main interface.
3. After logging in vCenter, click the localhost node in the left pane, then select **File > Deploy OVF Template**.
4. In the pop-up dialog box, click **Browse**, browse your PC and import vFW's OVA file to vCenter, click **Next**.
5. Confirm the details of the OVF template, click **Next**.
6. Enter the name of the OVF template, and select the location of list, click **Next**.
7. Select the host or cluster to deploy the OVF template on it, click **Next**.
8. Select the resource pool to run the OVF template in it, click **Next**.

This page is displayed only when the cluster contains a resource pool.

9. The data storage to store the deployed OVF template has been selected by default, then click **Next**.
10. Select the VM networks which OVF template use, then click **Next**.
11. Configure the service binding to vCenter Extension vService, click **Next**.
12. Click **Finish** to start the deployment.

Wait for a while, and your vFW will be deployed successfully.

Installing CloudEdge by Importing VMDK

Contact Hillstone sales persons to get the trial or official CloudEdge VMDK file before installing.

1. Enter the access URL for the Hilstone firmware download center ([https://im-ages.hillstonenet.com/](https://images.hillstonenet.com/)) in your browser to open and log in to the Hilstone firmware download center (Hilstonenet images).
2. In the left-side directory, click **StoneOS** to access the StoneOS page.
3. According to your requirements, click the corresponding version number on the right side of the page to obtain and download the CloudEdge image file.


Notes: Different deployment environments require different formats of CloudEdge system files. Please obtain the system file format that corresponds to your current deployment scenario. See [System Files](#). If you cannot determine the required system files for your current deployment scenario, please consult Hillstone Networks technical support for assistance.

Then you can install CloudEdge by importing VMDK using three steps:


- Step 1: Importing VMDK
- Step 2: Creating a Virtual Machine
- Step 3: Selecting the CloudEdge VMDK File for VM

Step 1: Importing VMDK

1. Save the CloudEdge VMDK file in your local computer.
2. Double-click the local Sphere Client to enter the login page. In the login page, enter the IP address/Name , username and password of vCenter, and click **Login** to enter the main interface.

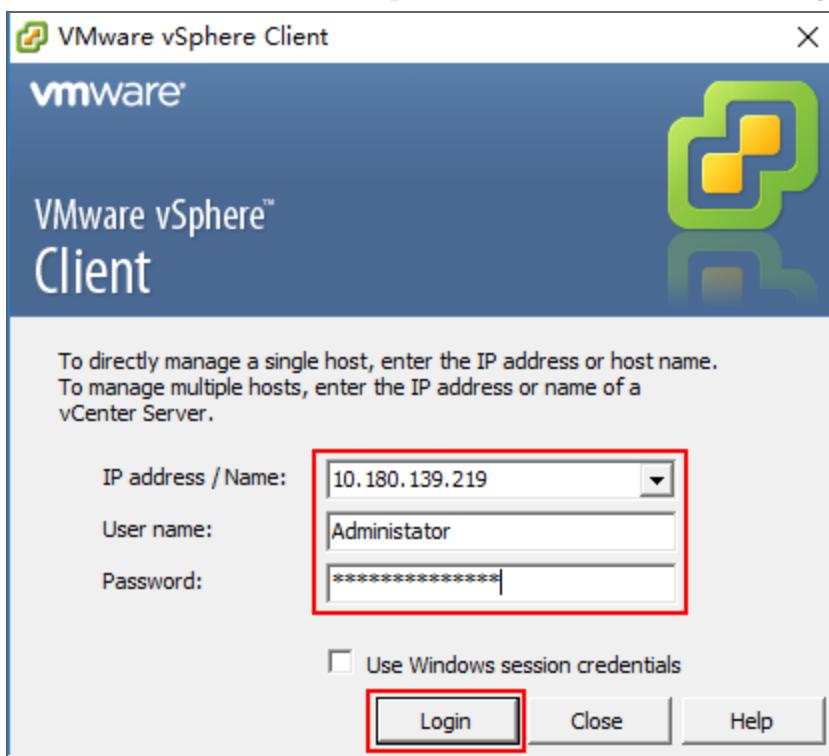


- In the main interface, select **Home > Inventory > Hosts and Clusters** to enter the Hosts and Clusters page.

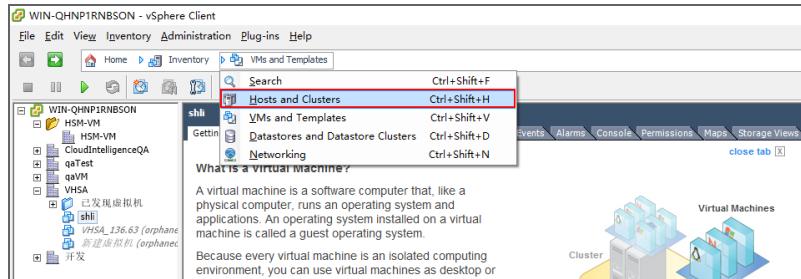

- In the Hosts and Clusters page, choose the ESXi host which CloudEdge will belong to, and click the **Configuration** tab appears on the right pane to enter the configuration page.




- Under the **Configuration** tab, click **Storage** to enter the storage pane. In the storage pane, right-click the datastore you want to browse, and select **Browse Datastore** to enter the Datastore Browse page.

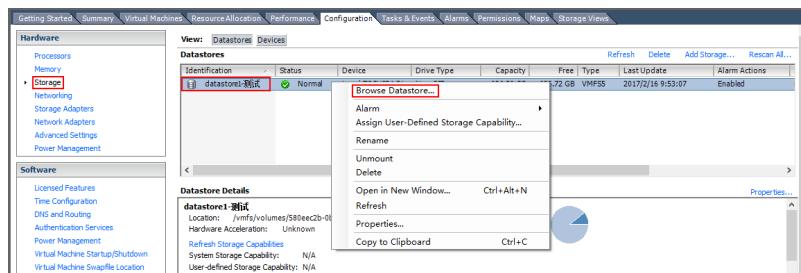


- In the Datastore Browse page, select the folder to save file and click upload button . In the drop-down list, click **Upload File** to browse your PC to import CloudEdge's VMDK file to the

datastore.

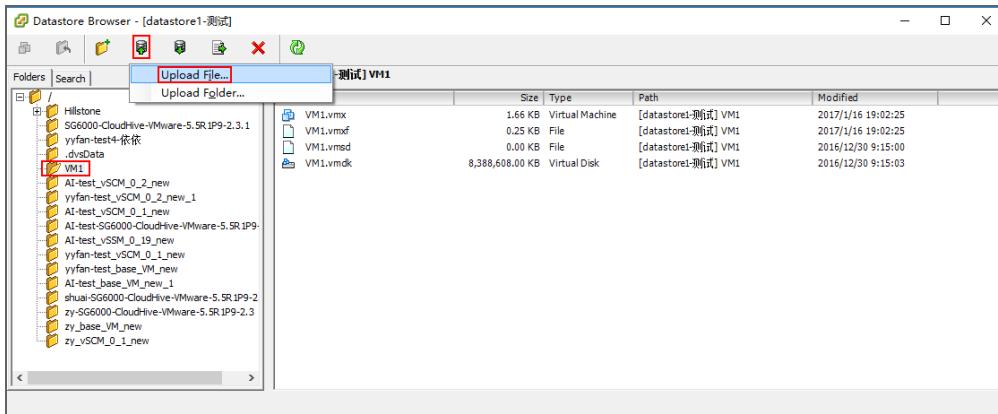


Step 2: Creating a Virtual Machine


1. In the vSphere Client main interface, select **Home > Inventory > VMs and Templates** to enter the VMs and Templates page.

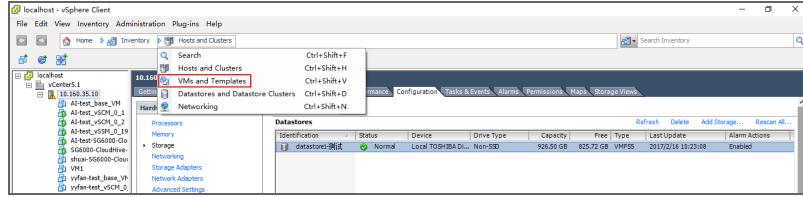


2. In the VMs and Templates page, select a datacenter in the left pane and click **Create a new virtual machine** appears in the right pane. The Create New Virtual Machine wizard pops up.

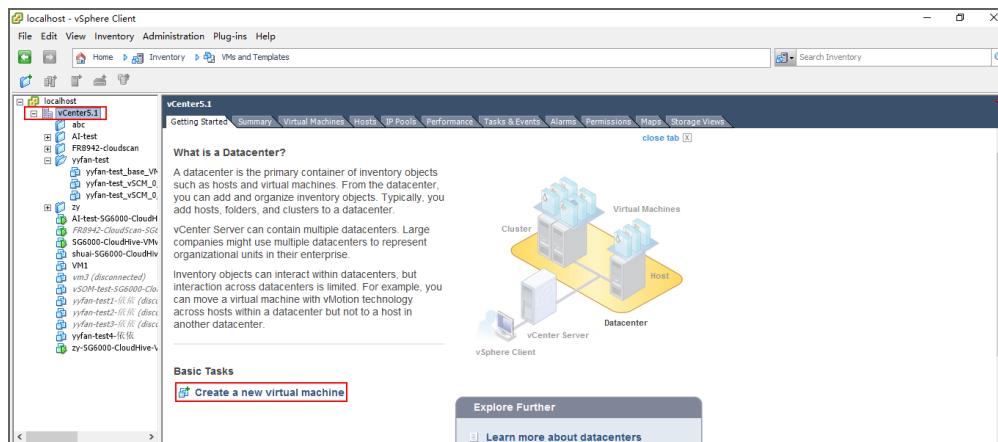


3. In the Create New Virtual Machine wizard, select **Custom** under the **Configuration** tab, and click **Next**.

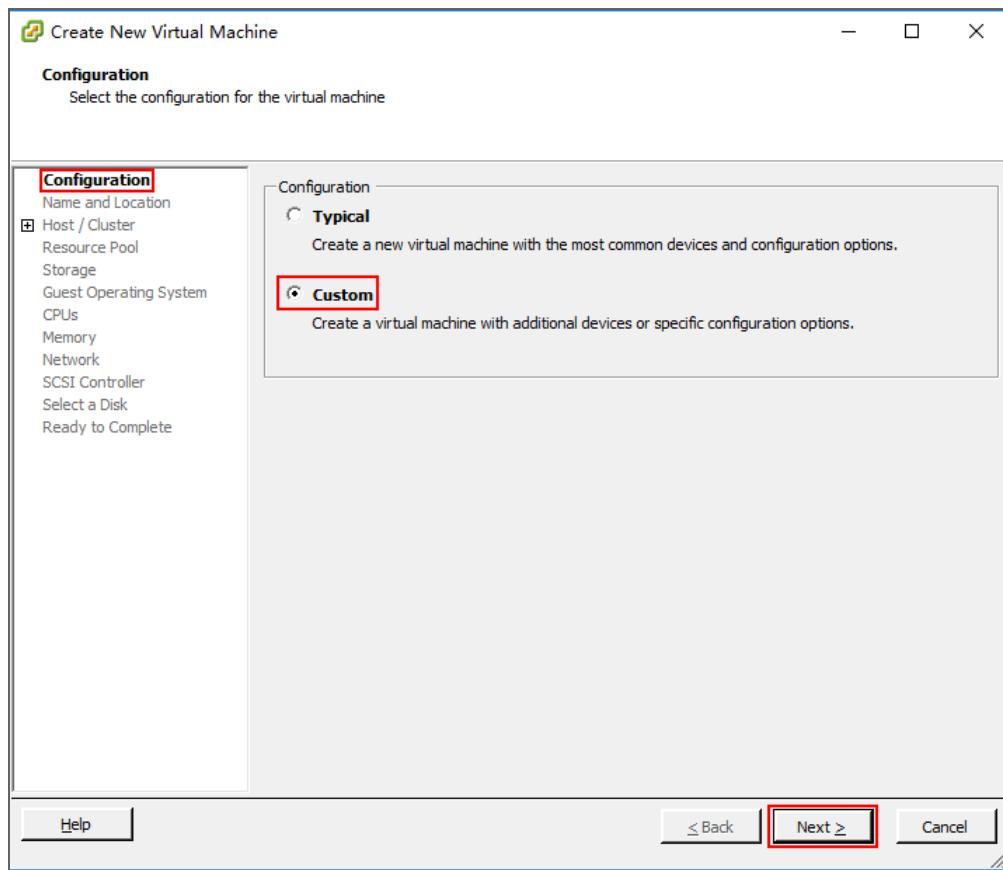


4. Under the **Name and Location** tab, enter a name and select the inventory location for virtual machine , and click **Next**.

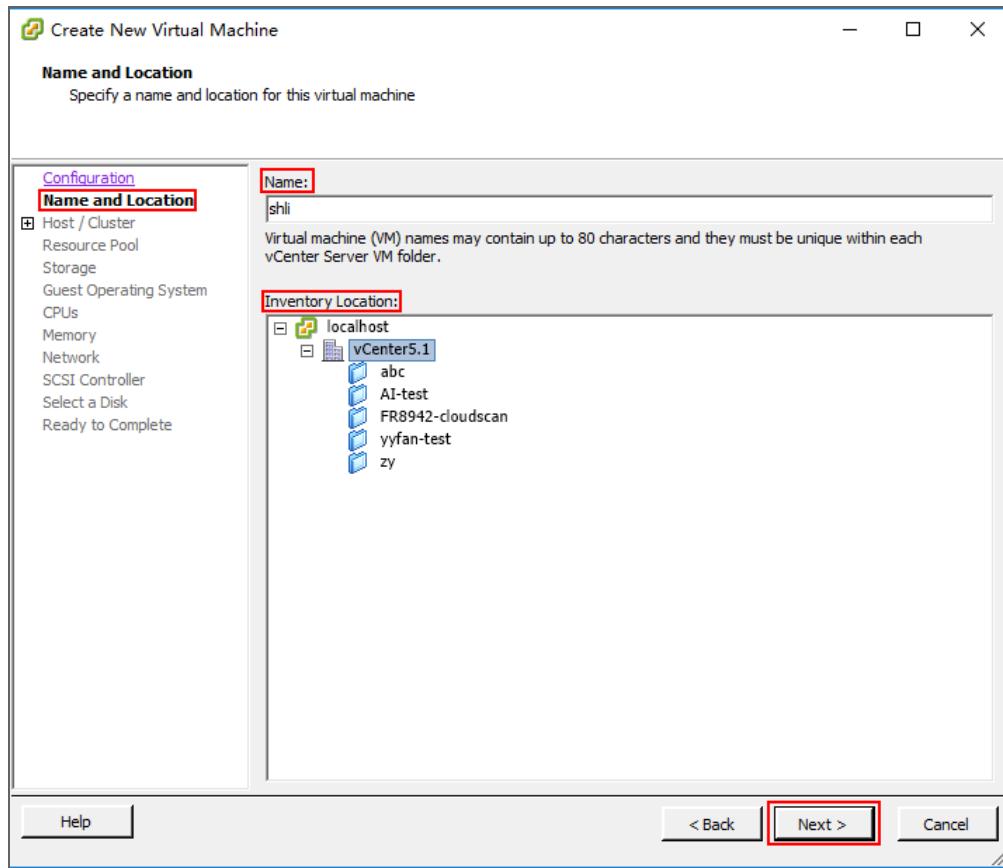


5. Under the **Host/Cluster** tab, select your target ESXi host, and click **Next**.

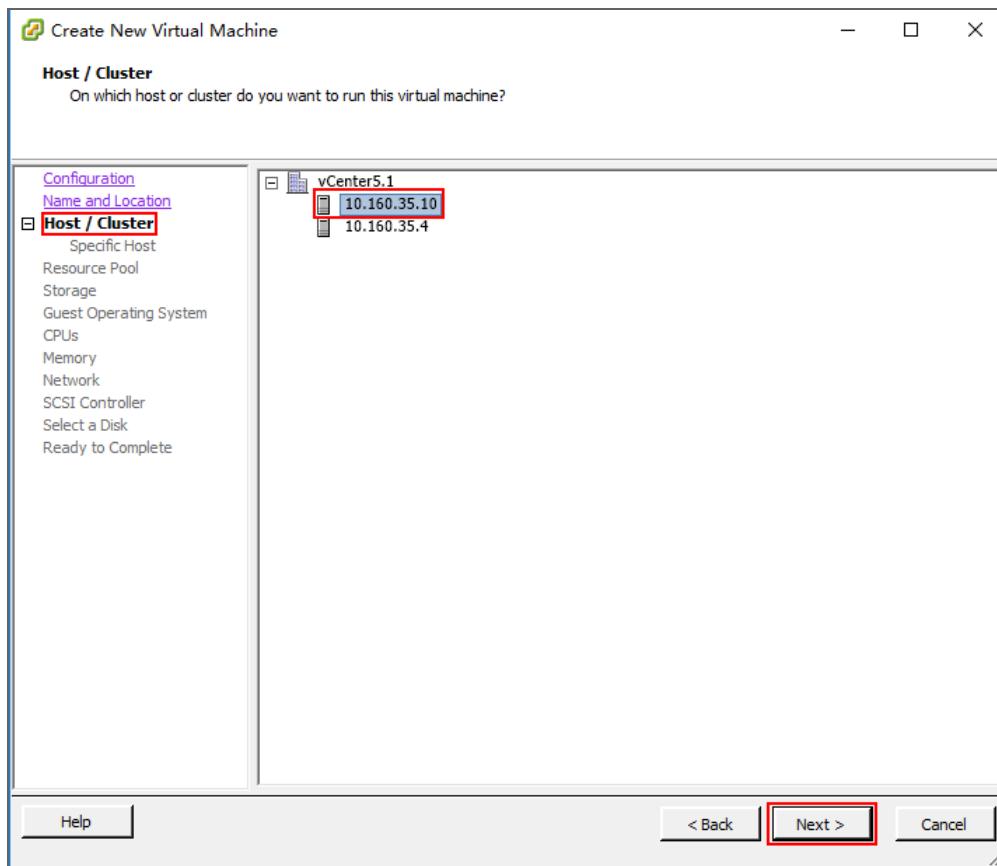


6. Under the **Storage** tab, select a datastore for virtual machine files, and click **Next**.

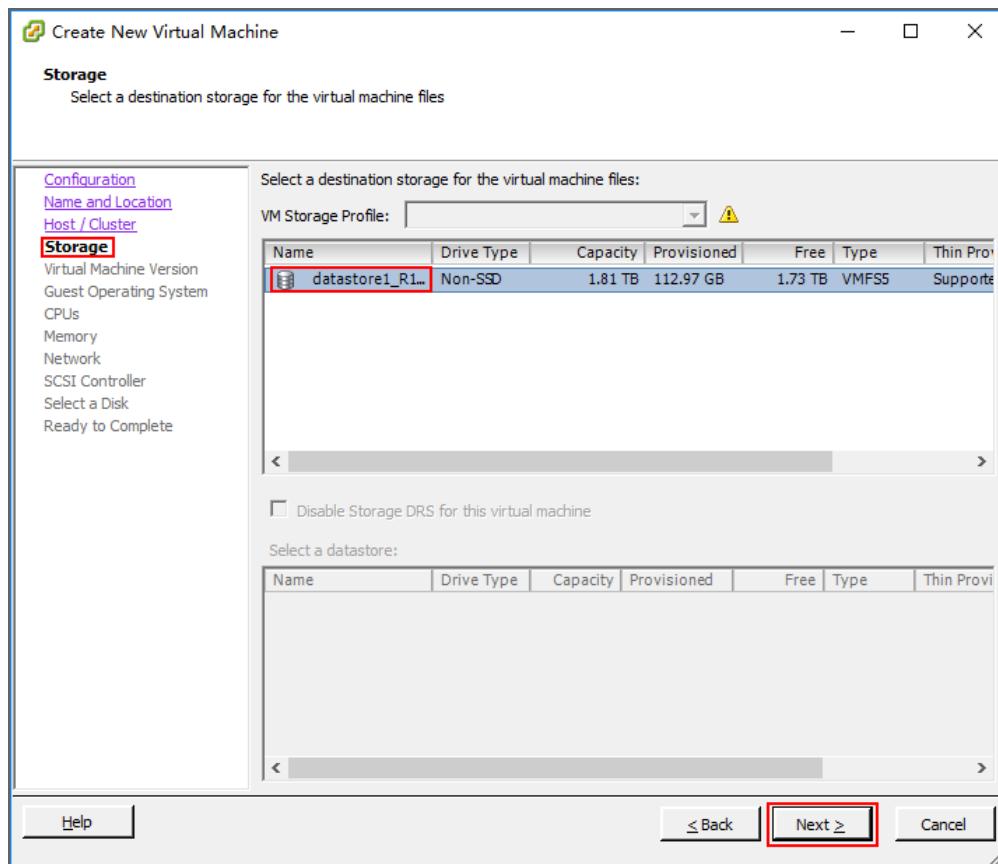


7. Under the **Virtual Machine Version** tab, select **Virtual Machine Version: 8**, and click **Next**.

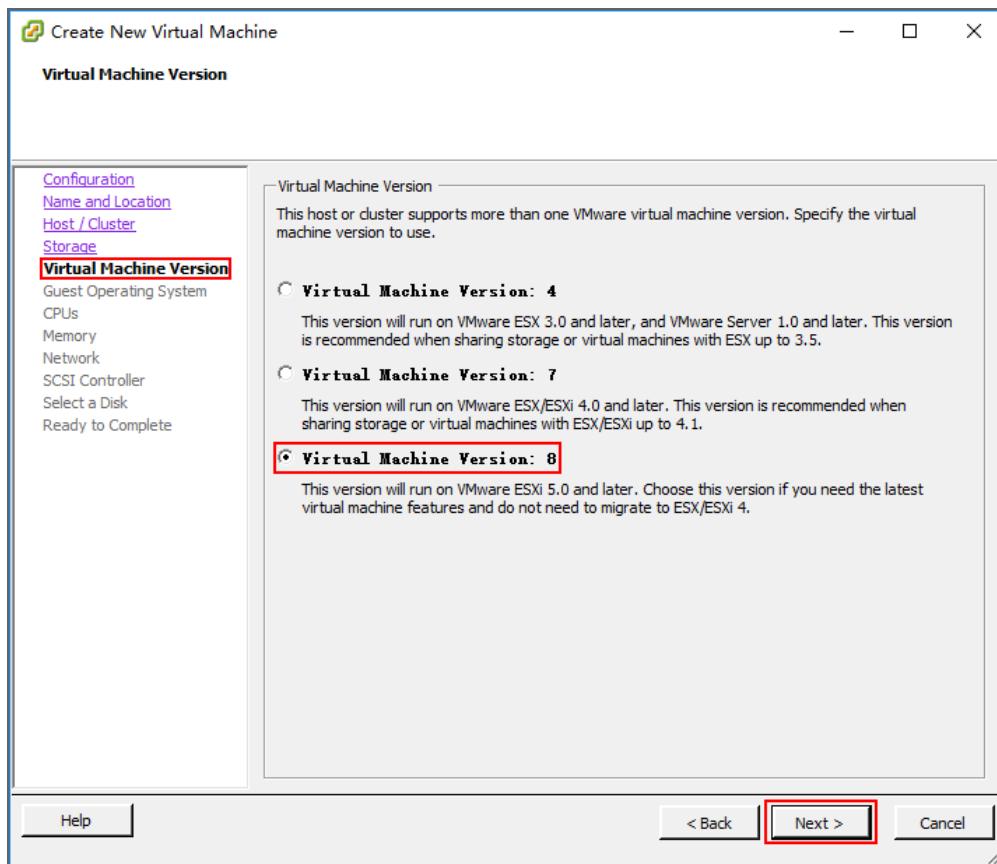


8. Under the **Guest Operating System** tab, select **Windows**, and click **Next**.

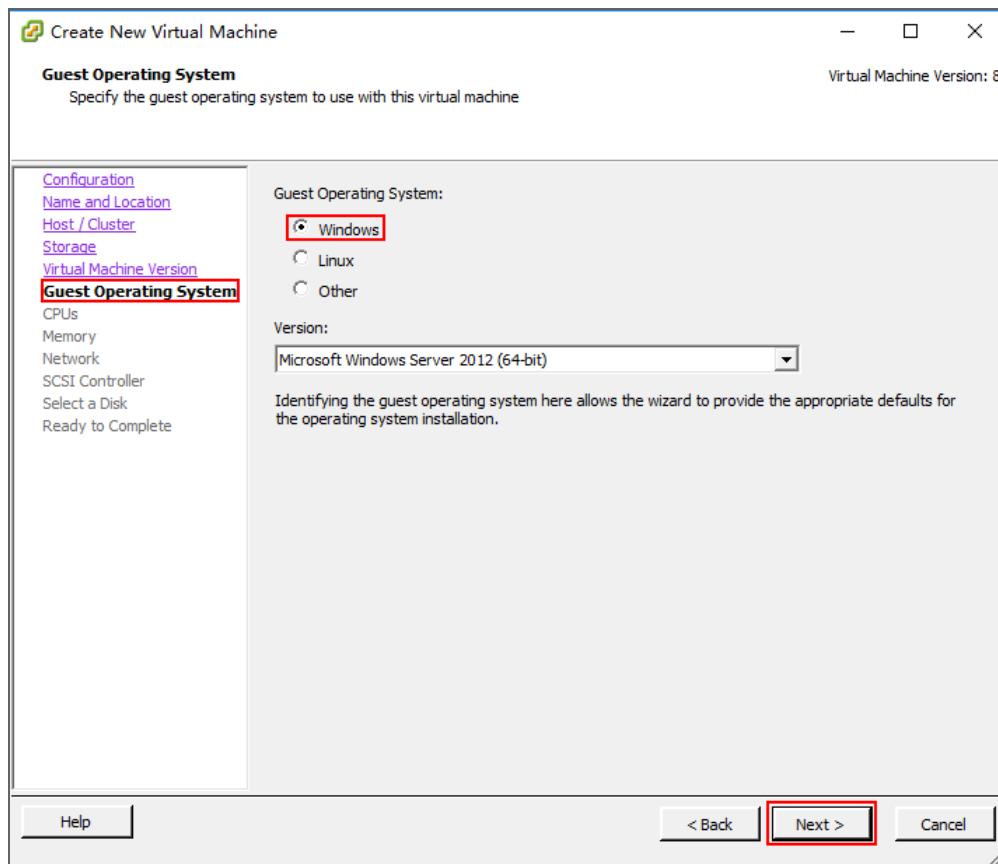


9. Under the **CPUs** tab, apply appropriate value for CPU and core. Click **Next**.

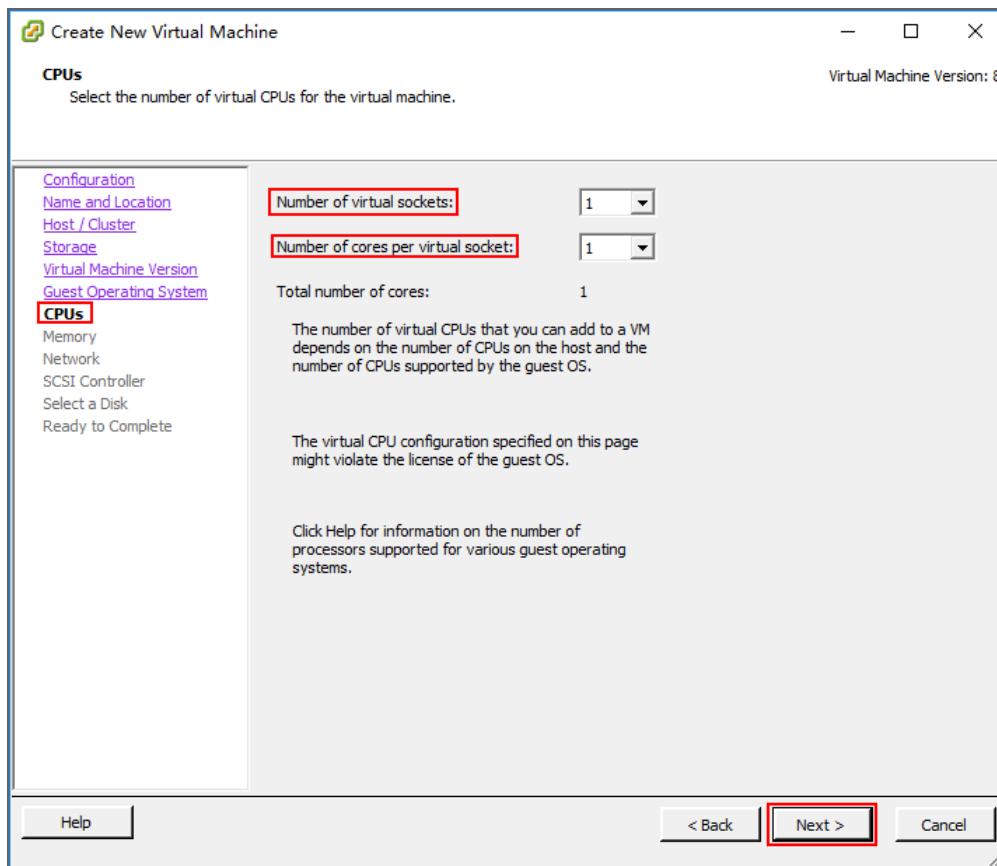


10. Under the **Memory** tab, assign a memory value for CloudEdge . Click **Next**.

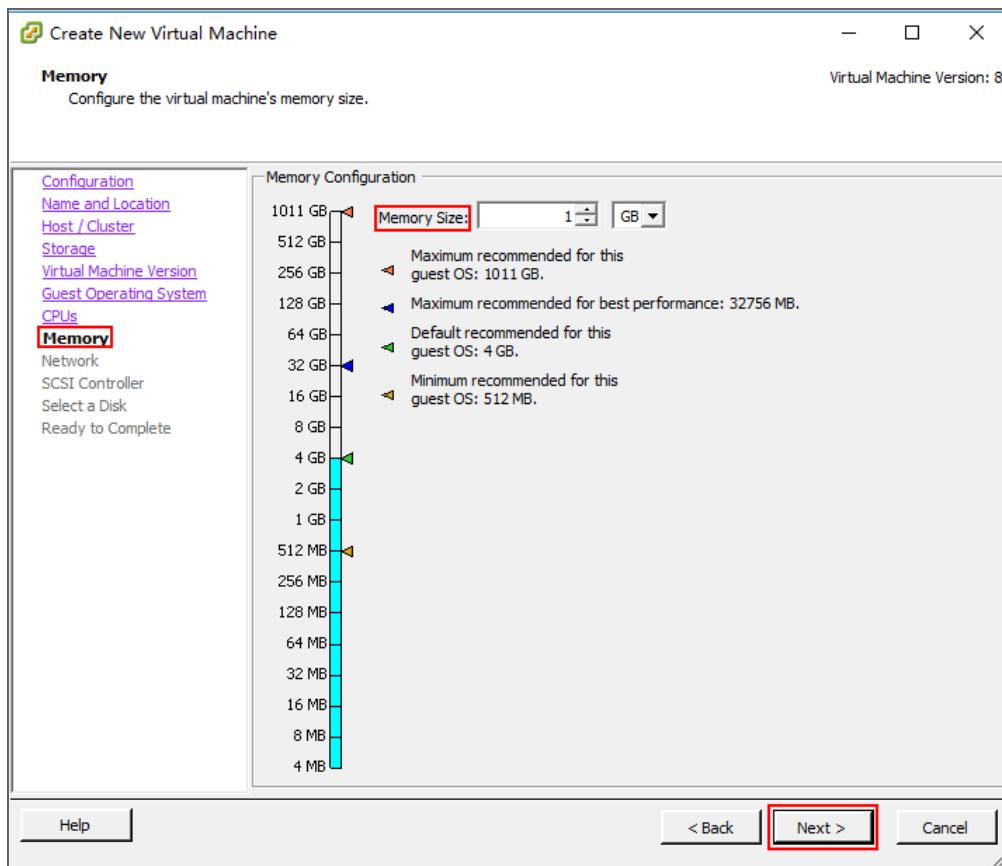


11. Under the **Network** tab, select at least 3 NICs, including management interface, data ingress and data egress. All NIC types should be E1000 or VMNET3. Click **Next**.

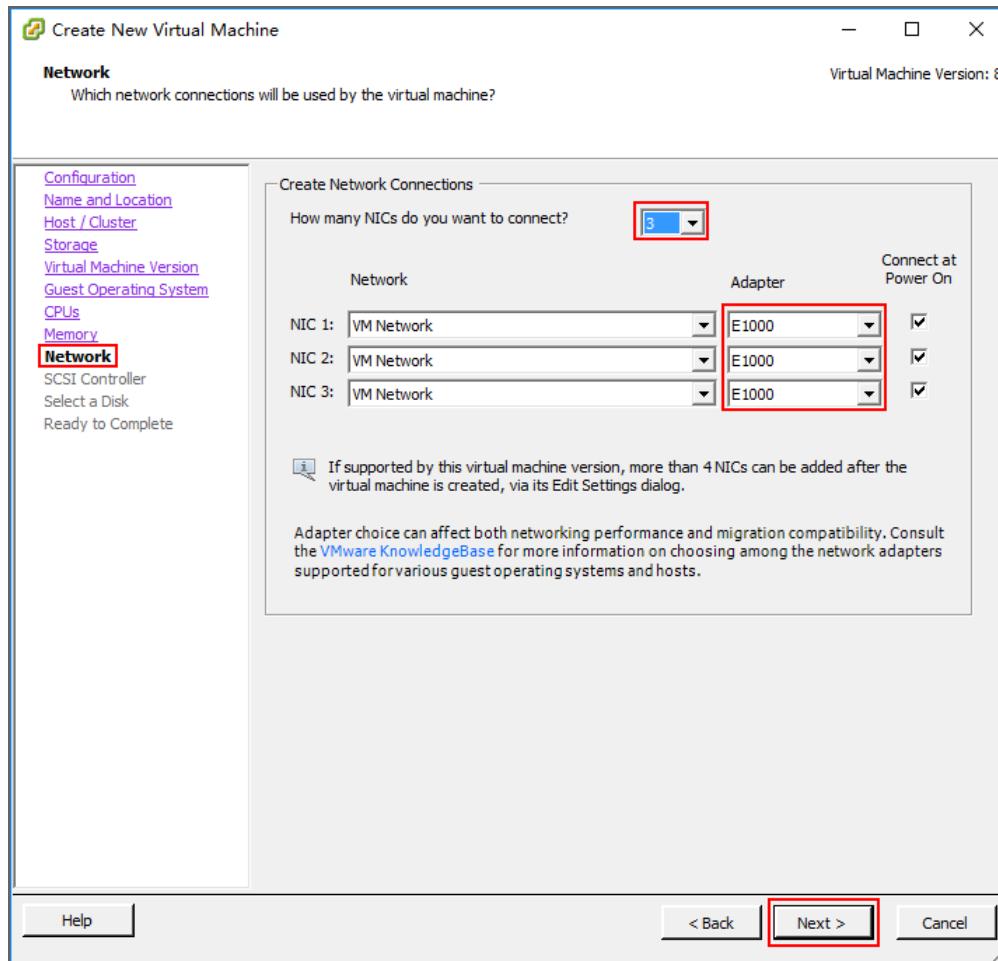

12. Under the **SCSI Controller** tab, keep the default value, and click **Next**.

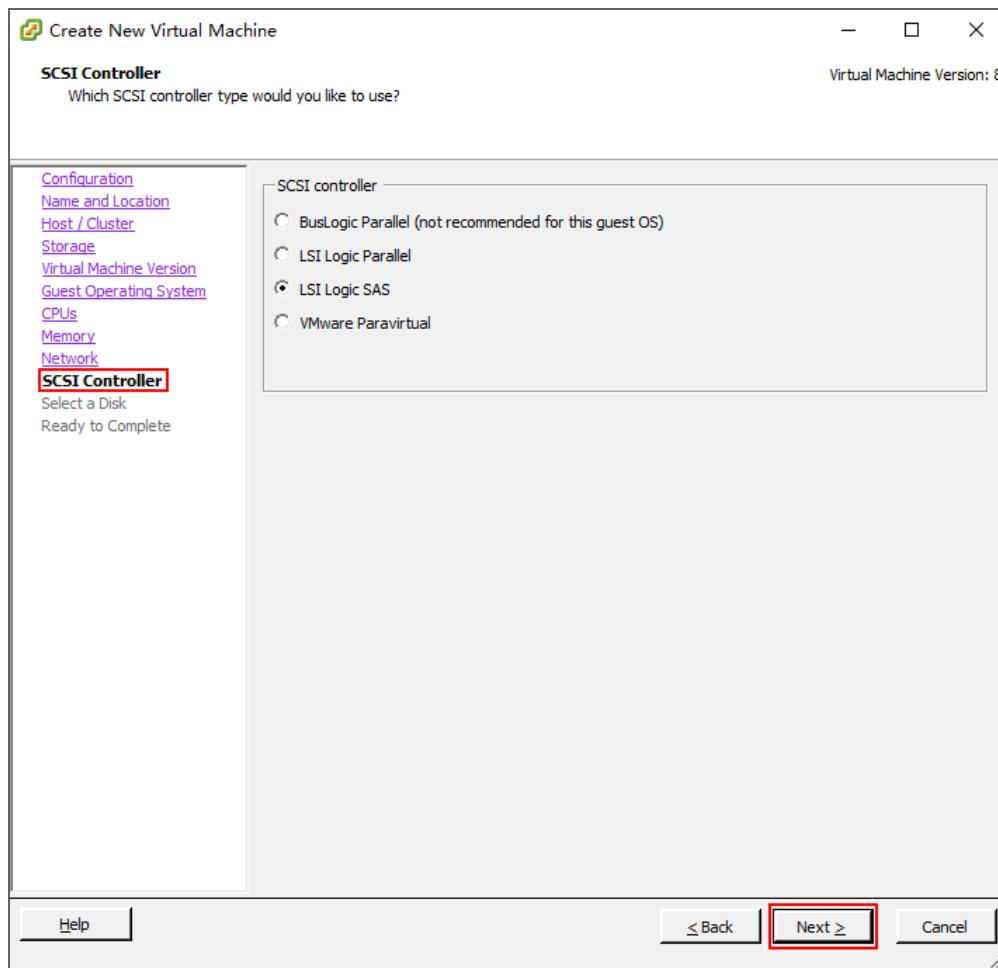


13. Under the **Select a Disk** tab, select **Do not create disk**, and click **Next**.

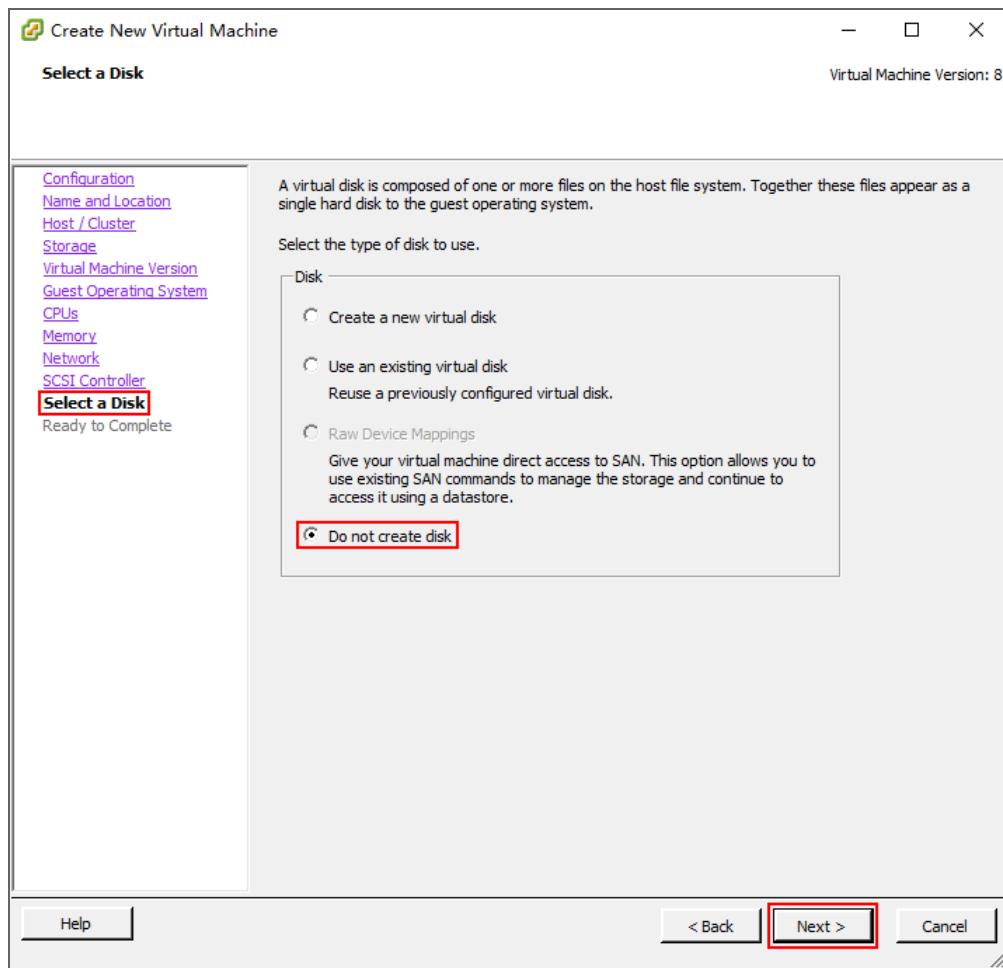


14. Click **Finish** to complete.

Step 3: Selecting the CloudEdge VMDK File for VM


1. In the vSphere Client main interface, select **Home > Inventory > VMs and Templates** to enter the VMs and Templates page.

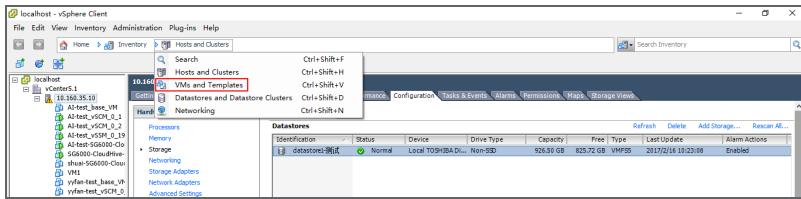


2. In the VMs and Templates page, click the CloudEdge virtual machine created in Step 2, and select **Editing virtual machine settings** appears in the right pane. The **Virtual Machine Properties** dialog pops up.

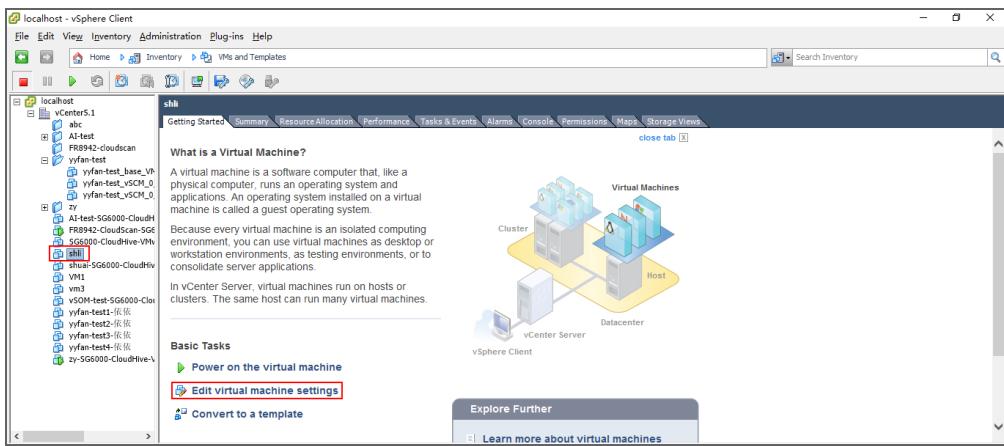


3. In the **Virtual Machine Properties** dialog, click **Add** to enter the Add Hardware wizard.

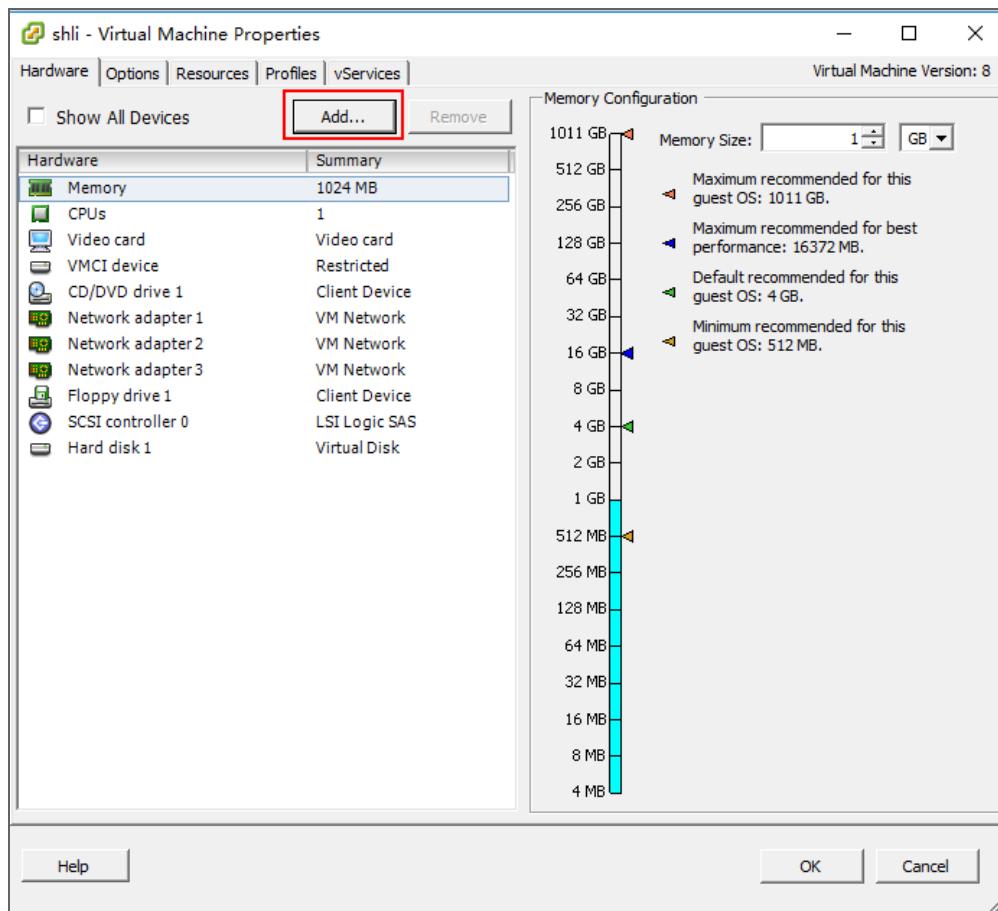

4. In the **Add Hardware** wizard, select **Hard disk** under the **Device Type** tab, and click **Next**.

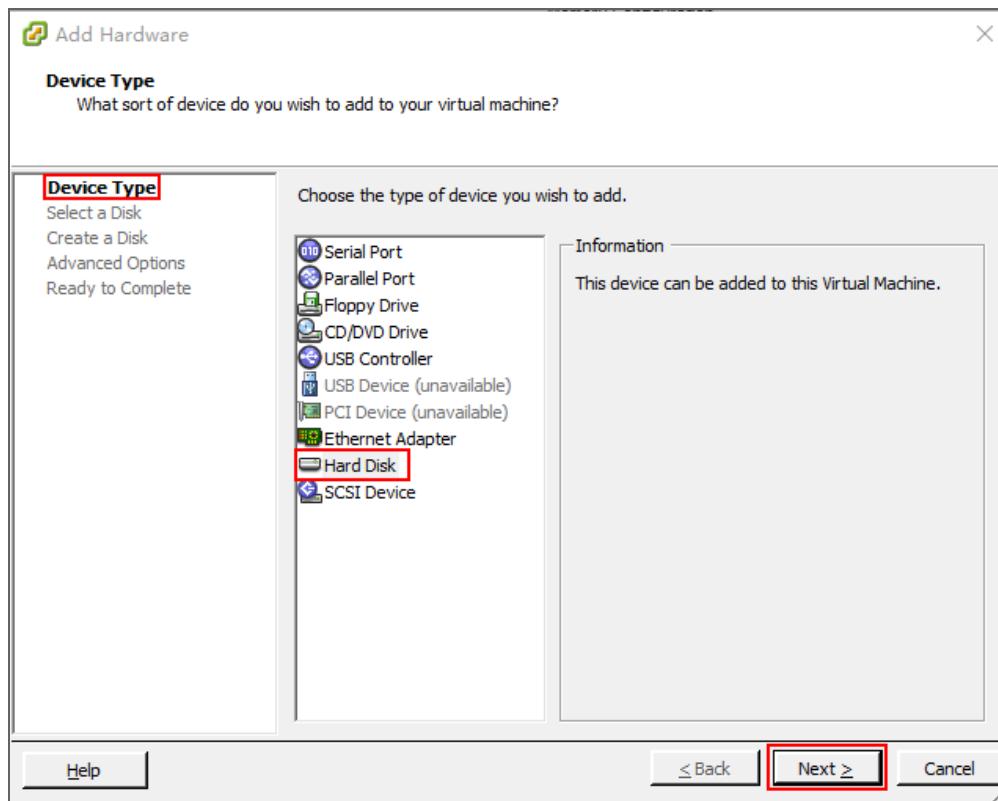


5. Under the **Select a Disk** tab, select **Use an existing virtual disk**, and click **Next**.

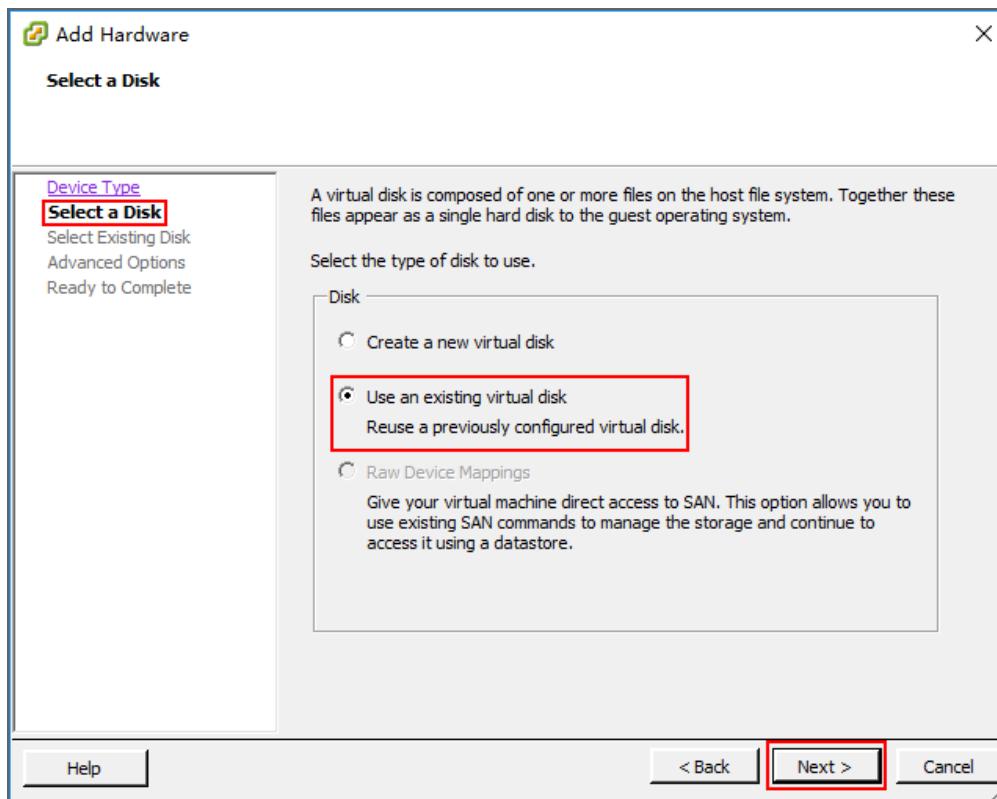


6. Under the **Select Existing Disk** tab, click **Browse** and the **Browse Datastores** dialog pops up. In the **Browse Datastores** dialog, select the VMDK file imported in Step 1, and click **OK**. Then click


Next.

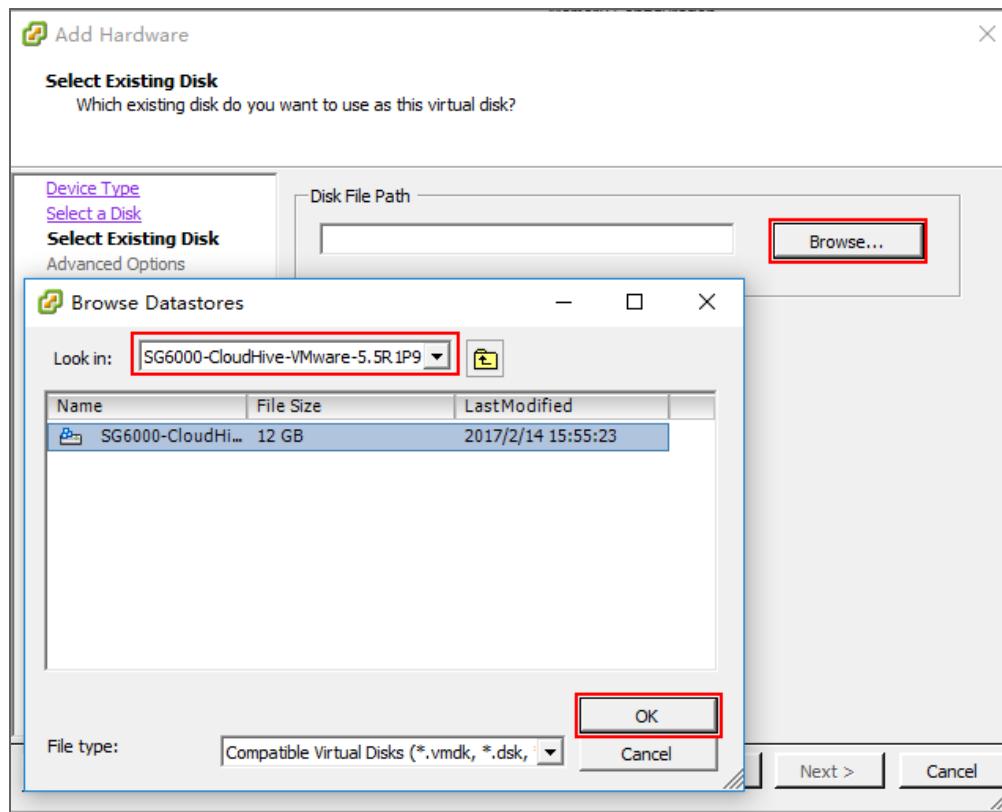

7. Under the **Advanced Options** tab, keep the default value, and click **Next**.

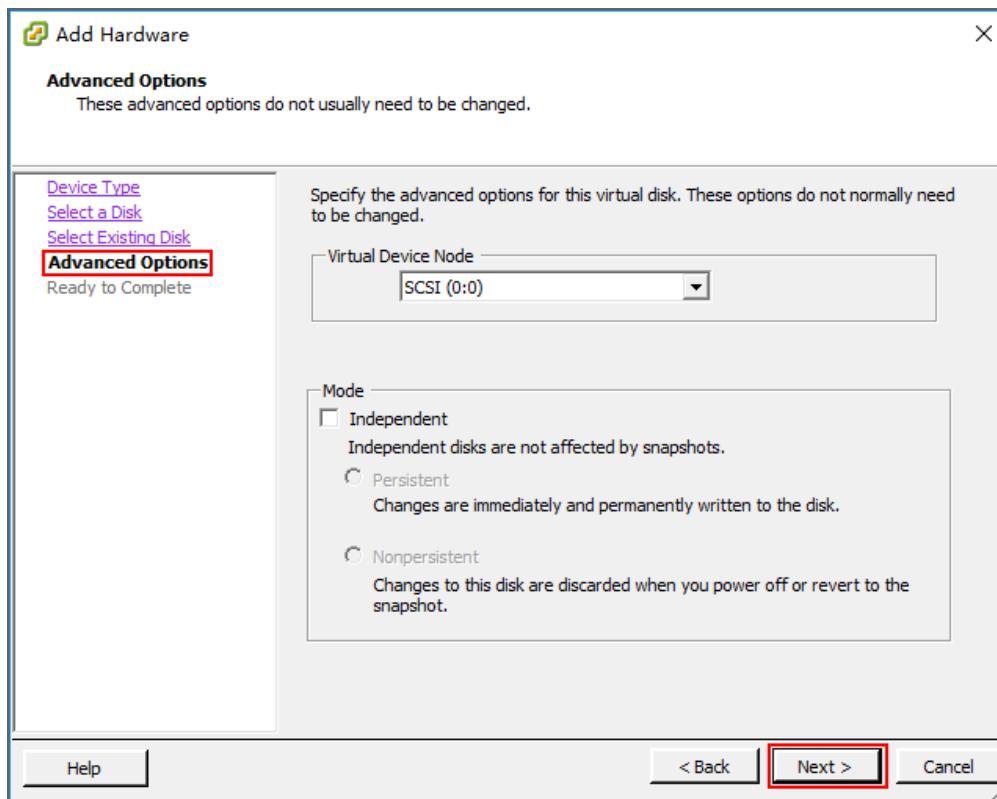

- Under the **Ready to Complete** tab, click **Finish** to complete.

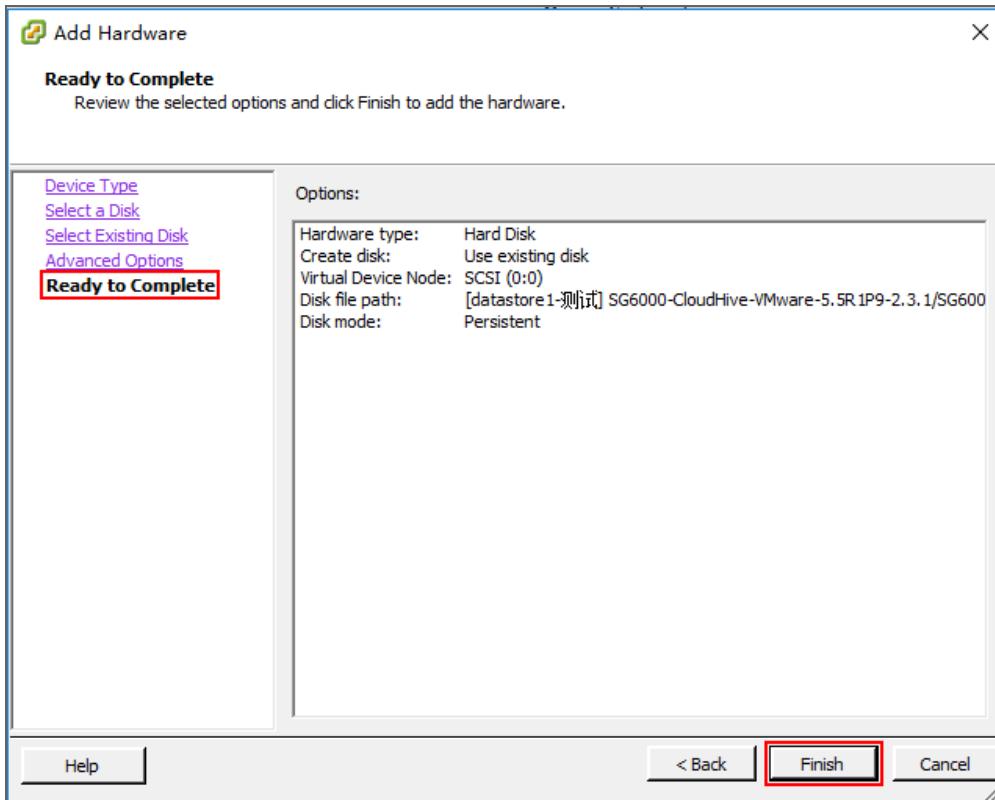

After the above three steps, you will deploy CloudEdge by importing VMDK successfully.

Starting and Visiting vFW

After all the setups above, you can now start your vFW.

- In vSphere Client, click **Home > Inventory > VMs and Templates**.
- Right click vFW, and select **Open Console**. In the prompt, you are accessing to vFW's console port.
- Click the green button to start the vFW virtual machine.



4. Wait for a while, and the system will be up.
5. When the prompt shows the command line interface below, enter default username and password (hillstone/hillstone) to log in StoneOS.

```

      W e l c o m e
      H i l l s t o n e   N e t w o r k s
-----
Hillstone StoneOS Software Version 5.5
Copyright (c) 2006-2015 by Hillstone Networks, Inc.

change_monitor_stat, can not find the Moni_appinfo_t object for appid 66
login: hillstone
password:
SG-6000# 

```

Visiting WebUI of StoneOS

After logging in StoneOS, you will be able to manage StoneOS via vSphere Client. However, you need to configure vFW's management interface before you can visit its Web interface.

1. Collect necessary information from your network administrator. You need to have the management interface's IP address, network mask, and gateway IP address.
2. Configure the vFW's management IP address. By default, eth0/0 is the management interface and it is enabled with DHCP. To assign an IP address to eth0/0, you need to disable its DHCP and allocate a static IP address you collected from administrator.

Use the following command:

```

SG-6000# config
SG-6000(config)# interface ethernet0/0
SG-6000(config)# no ip address dhcp
SG-6000(config-if-eth0/0)# ip address a.b.c.d/netmask
SG-6000(config-if-eth0/0)# manage http | https | telnet | snmp | ssh
SG-6000(config-if-eth0/0)# exit

```

no ip address dhcp	Disable this interface's DHCP.
ip address a.b.c.d/netmask	Enter a static IP address for this interface.
manage {http https telnet snmp ssh ping}	This command allows access via http, https, telnet, snmp, SSH and ping.

3. Add a static route. Use the command below to add a route whose next hop is the gateway.

```
SG-6000(config)# ip vrouter trust-vr
SG-6000(config)# ip route a.b.c.d/netmask A.B.C.D
SG-6000(config)#
```

<i>a.b.c.d/netmask</i>	Specify the destination. If you may visit any destination, enter 0.0.0.0/0.
<i>A.B.C.D</i>	Enter the next hop's address. In this case, this is the gateway's IP address.


4. Save the settings.

```
SG-6000# save
```

5. Test if the gateway is accessible.

```
SG-6000(config-if-eth0/0)# ping 192.168.1.6
Sending ICMP packets to 192.168.1.6
  Seq      ttl      time(ms)
    1        64      4.28
    2        64      10.0
    3        64      10.0
    4        64      9.96
    5        64      10.1
```

6. Enter eth0/0 IP address in the address bar of your browser. You will see the WebUI login page (make sure you have used **manage http** command to enable http access).

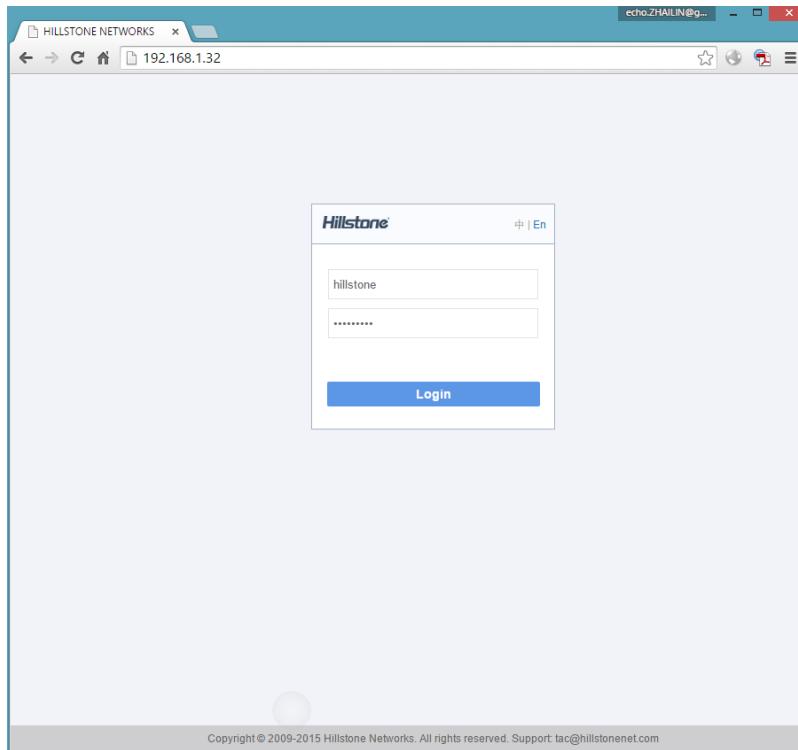

Upgrading StoneOS

Since StoneOS 5.5R1P7.1, CloudEdge can be upgraded online. If CloudEdge is deployed by importing ISO file, you can not upgrade the system through the online method. You can just visit StoneOS WebUI on **System > Upgrade Management** page to upgrade the firewall when CloudEdge is deployed by importing OVA file or VMDK file. This upgrade method is recommended. For detailed operations, you may refer to *StoneOS WebUI User Guide*.

Deploying CloudEdge on Xen

CloudEdge is packed in an VHD file, and can be installed on a Citrix XenServer.

Before deploying vFW on Xen platform, you should be already familiar with knowledge about Xen.

System Requirements

vFW has to be installed on a X86-based XenServer host. The XenServer host should meet the following requirements:

- Support Intel VT or AMD-V
- Be able to allocate at least two virtual network cards and the speed can be up to 100MB/s
- 64 bit CPU and the frequency can be up to 1.5GHz
- 2G memory is recommended
- 16G hard disk or above, whose type can be SATA, SCSI and PATA

Installing vFW

Before installation of vFW, you have to complete the configuration of the XenServer host and the XenCenter client.

Step 1: Acquiring vFW software package

Take the following steps to obtain and download vFW software package, and save the VHD image into your local host.

1. Enter the access URL for the Hilstone firmware download center ([https://im-ages.hillstonenet.com/](https://images.hillstonenet.com/)) in your browser to open and log in to the Hilstone firmware download center (Hilstonenet images).

2. In the left-side directory, click **StoneOS** to access the StoneOS page.
3. According to your requirements, click the corresponding version number on the right side of the page to obtain and download the CloudEdge image file.

Notes: Different deployment environments require different formats of CloudEdge system files.

Please obtain the system file format that corresponds to your current deployment scenario. See [System Files](#). If you cannot determine the required system files for your current deployment scenario, please consult Hillstone Networks technical support for assistance.


Step 2: Importing the VHD file

Using the Import wizard, you can import a disk image into a resource pool or into a specific host as a VM.

1. Double-click the XenCenter client, and then click the **Add new server** button on toolbar, enter a XenServer IP address or name in the pop-up dialog box, and then enter the user name and password, click **Add**.
2. on the **File** menu, select **Import**, the Import wizard dialog box appears.
3. On the first page of the wizard, locate the disk image file you want to import, click **Next** to continue.
4. Specify the VM name and allocate CPU and memory resources, click **Next** to continue.
5. Specify where to place the new VM and choose a home server(optional) , click **Next** to continue.

6. Configure storage for the new VM , click **Next** to continue.


On the **Storage** page, select a storage repository (SR) where the imported virtual disk will be placed.

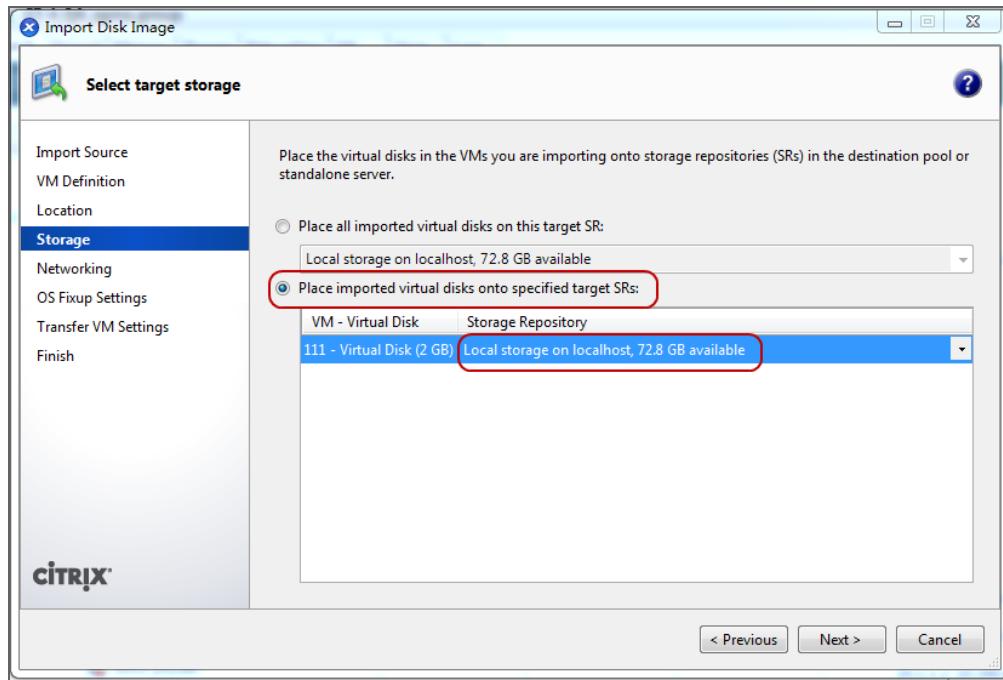

7. Configure networking for the new VM, click **Next** to continue.

On the **Networking** page, select a target external network which can visit the Internet in the des-

tion pool/standalone server for the new VM's virtual network interface.

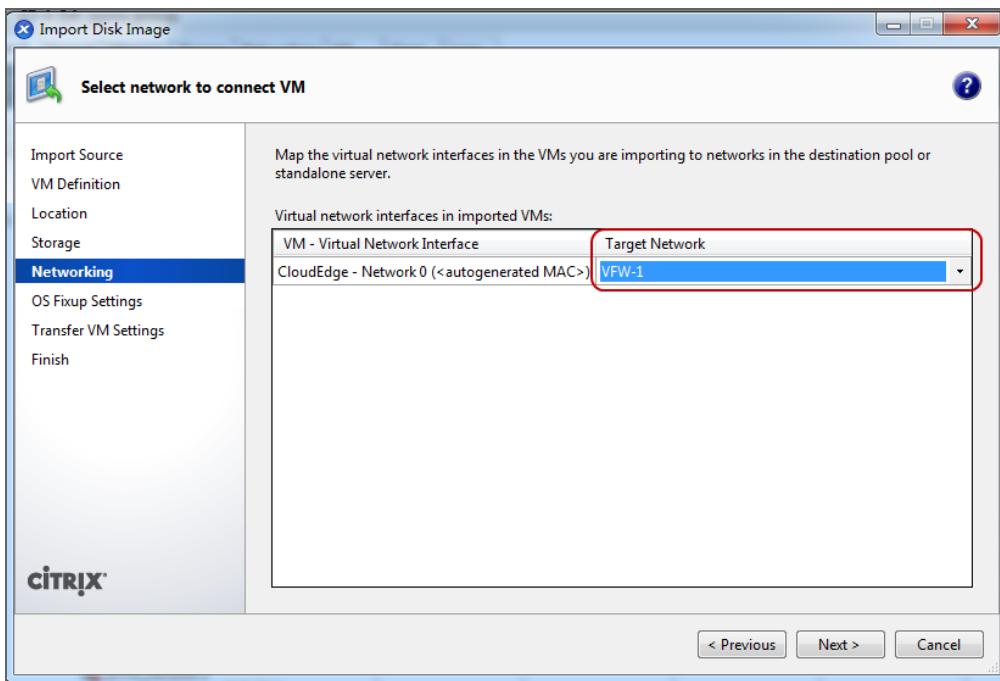

8. Select **Don't use Operating System Fixup** check box, click **Next** to continue.
9. Configure Transfer VM(temporary VM) networking, click **Next** to continue.
 - To use automated Dynamic Host Configuration Protocol (DHCP) to automatically assign networking settings including the IP address, subnet mask and gateway, select **Automatically obtain network settings using DHCP**.
 - If there is no DHCP service deployed on your network, select **Use these network settings** to configure them manually. Make sure the Transfer VM is in the same network segment as XenCenter client.
10. On the **Finish** page, review all the import settings and then click **Finish** to begin the import process and close the wizard.

Step 3: Initial login of vFW

To access vFW initially:

1. In the left Resources pane, select the virtual machine which vFW is located in, right click it and select **Start**.

Waiting for a while, the virtual machine will start successfully.

2. After login prompt, press the Enter key and enter username and password "hillstone"/"hillstone".

login: hillstone

password: hillstone

3. From now on, you can use command line interface to manage vFW. It is recommended to change your password at earliest convenience.

Visiting vFW's WebUI

The first interface of vFW, eth0/0, is enabled with DHCP by default. If vFW is connected to a network with DHCP server, eth0/0 will get an IP address automatically. You can open vFW's WebUI interface by visiting eth0/0's address in a browser.

To visit vFW's WebUI:

1. Visit vFW referring to "[Deploying CloudEdge on Xen](#)" on Page 82
2. To view IP address of eth0/0, use the command:
show interface ethernet0/0
3. Open a browser (Chrome is recommended), enter eth0/0's IP address in the address bar.
4. Enter login name and password (hillstone/hillstone).
5. Click **Login**, and you will enter StoneOS's WebUI manager.
6. About how to use StoneOS, refer to StoneOS related documents ([click here](#)).

Upgrading vFW

Since StoneOS 5.5R1P7.1, CloudEdge can be upgraded online with .img format file. You can visit StoneOS WebUI on **System > Upgrade Management** page to upgrade the firewall. For detailed operations, you may refer to *StoneOS WebUI User Guide*.

Deploying CloudEdge on Hyper-V

Hyper-V is a Microsoft virtualization product based on hypervisor. To deploy CloudEdge in Microsoft Azure, CloudEdge should be deployed in Hyper-V at first.


System Requirements

To deploy vFW on Hyper-V, the host should meet the following requirements:

- Support Intel VT or AMD-V
- 64 bit CPU which can provide two virtual cores
- Data execution protection (DEP) function of the hardware must be enabled for CPU
- Be able to allocate at least two virtual network cards
- Windows Server 2012R2 system
- 2G memory at least

How vFW Works on Hyper-V Host

vFW on a Hyper-V host usually works as gateway for virtual machines. In order to be able to forward data from/to the internal virtual machines, you need to connect the vFW tap interface to the Virtual Switch of Hyper-V host, and the internal virtual machines define vFW as their gateway.

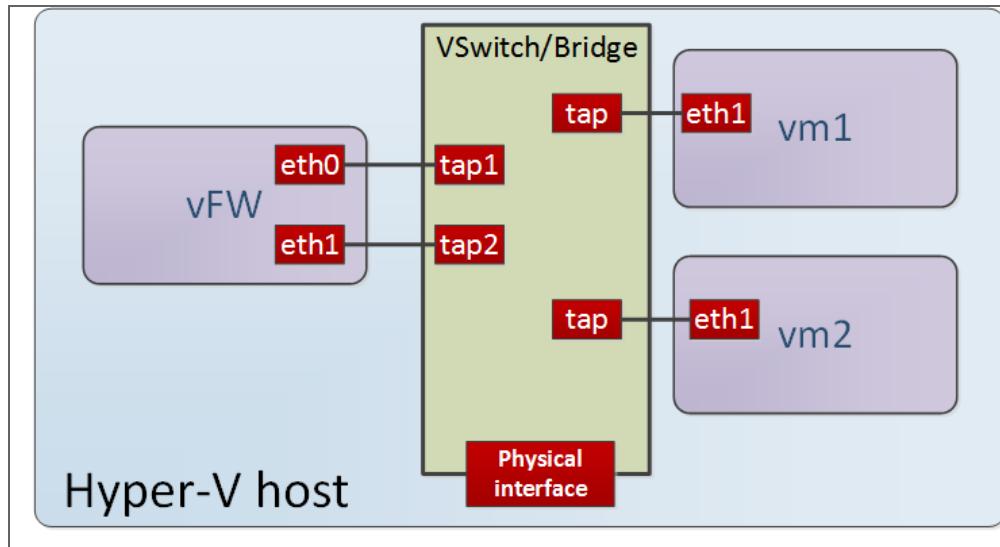

Preparation

Before installing vFW, make sure you have a host running a Windows Server system (Windows Server 2012R2 is recommended) and Hyper-V function is added.

Installing vFW on Hyper-V Host

To install vFW on a Hyper-V host, use the following steps:

Step 1: Acquiring vFW software package

Take the following steps to obtain and download the image file with the .vhdx extension, and save the VHD image file to the file system of the Hyper-V host.

1. Enter the access URL for the Hilstone firmware download center (<https://images.hillstonenet.com/>) in your browser to open and log in to the Hilstone firmware download center (Hilstonenet images).
2. In the left-side directory, click **StoneOS** to access the StoneOS page.

3. According to your requirements, click the corresponding version number on the right side of the page to obtain and download the CloudEdge image file.

Notes: Different deployment environments require different formats of CloudEdge system files.

Please obtain the system file format that corresponds to your current deployment scenario. See [System Files](#). If you cannot determine the required system files for your current deployment scenario, please consult Hillstone Networks technical support for assistance.

Step 2: Creating a Virtual Machine

1. Open Hyper-V Manager, click **Operation > New > Virtual Machine** in menu bar, the New Virtual Machine Wizard dialog box will prompt.
2. In the dialog box, click **Next** to create an user-defined virtual machine.
3. Specify the name and storage location of virtual machine, click **Next**.
4. Configure the memory in the Allocate Memory page, click **Next**.
5. On the right **Operation** panel of the Hyper-V manager home page, select **Virtual Switch Manager** to create a virtual network card.
6. Select **External** type, and then click **Create Virtual Switch** button.
7. Configure switch name in **Virtual Switch Attribute** area, and select **External Network** in **Connection Type** area, then click **OK**.
8. In the **Configure Network** page of New Virtual Machine Wizard, select the virtual switch that was created just now in the drop-down menu, then click **Next**.
9. Select **Use the existing virtual hard disk**, browse the local PC, select the VHD file in step 1.
10. Click **Finish** button in **Summary** page.

11. If the virtual firewall you installed requires two vCPUs, right click the new created virtual machine in the virtual machine list and then select **Settings**, click the **CPU** node to set the vCPU value to 2.

Step 3: Initial login of vFW

To access vFW initially:

1. Right click the new created virtual machine in the virtual machine list and then select **Connect**, click the  button in the toolbar of the dialog box.
Waiting for a while, the virtual machine will start successfully.
2. After login prompt, press the Enter key and enter username and password "hillstone"/"hillstone".
login: hillstone
password: hillstone
3. From now on, you can use command line interface to manage vFW. It is recommended to change your password at earliest convenience.

Visiting vFW's WebUI

The first interface of vFW, eth0/0, is enabled with DHCP by default. If vFW is connected to a network with DHCP server, eth0/0 will get an IP address automatically. You can open vFW's WebUI interface by visiting eth0/0's address in a browser.

To visit vFW's WebUI:

1. Visit vFW referring to "[Deploying CloudEdge on Hyper-V](#)" on Page 88
2. To view IP address of eth0/0, use the command:
`show interface ethernet0/0`
3. Open a browser (Chrome is recommended), enter eth0/0's IP address in the address bar.
4. Enter login name and password (hillstone/hillstone).

5. Click **Login**, and you will enter StoneOS's WebUI manager.
6. About how to use StoneOS, refer to StoneOS related documents ([click here](#)).

Upgrading vFW

Since StoneOS 5.5R1P7.1, CloudEdge can be upgraded online. You can visit StoneOS WebUI on **System > Upgrade Management** page to upgrade the firewall. For detailed operations, you may refer to *StoneOS WebUI User Guide*.

Deploying CloudEdge on AWS

Overview


This chapter introduces how to install CloudEdge virtual firewall (abbr. vFW) on Amazon Web Service.

Introduction to AWS

Amazon Web Services (AWS) is a cloud computing platform to provide remote web services.


Among all the AWS components, VPC and EC2 are used in deploying vFW.

- Virtual Private Cloud (VPC) is a logical virtual network. VPC users can have their own private IP ranges and subnets, with routing tables and gateways.
- Elastic Compute Cloud (EC2) provides cloud hosting service. EC2 can be used as virtual machine services. When EC2 is connected through VPC, it can provide strong networking capabilities for computing resources.

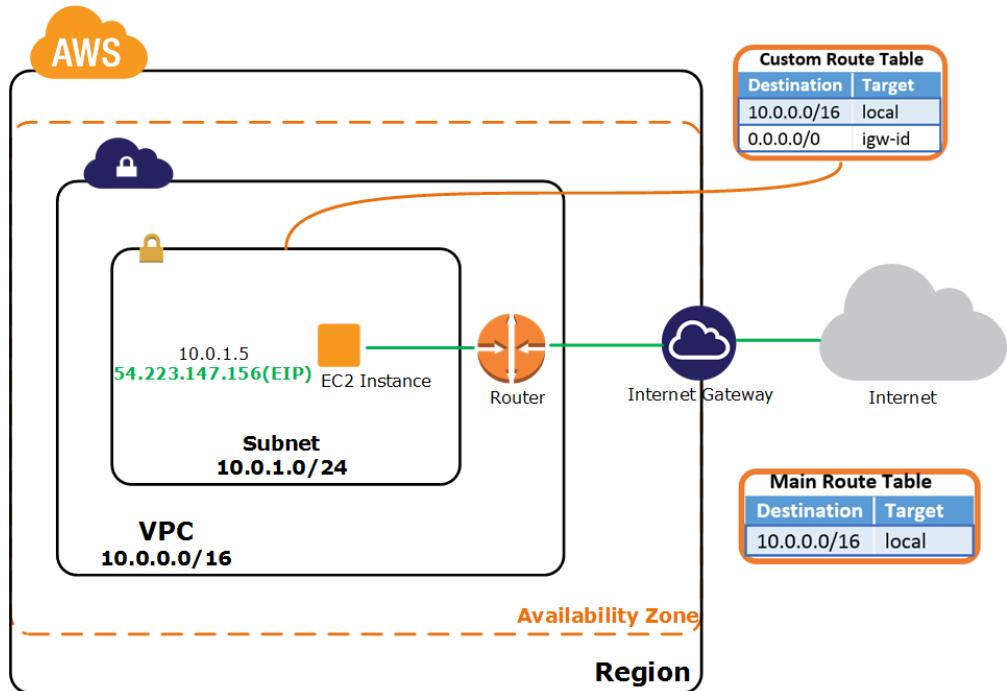

CloudEdge on AWS

CloudEdge is a virtual firewall product. vFW is installed as an EC2 instance to provide firewall function to virtual services in VPC subnets.

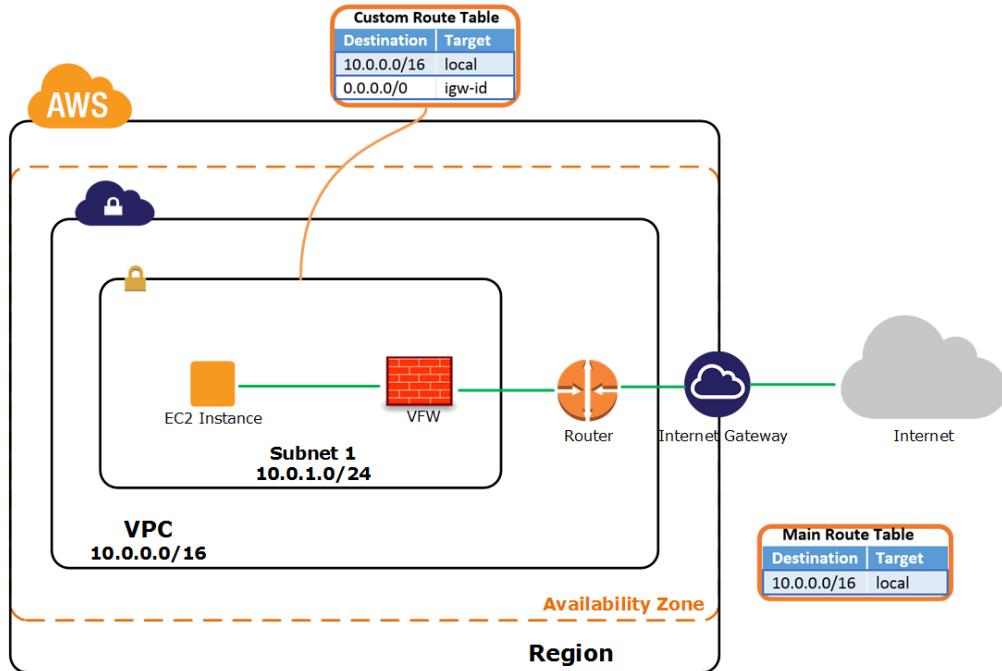

Typical Scenarios

VPC Gateway

A VPC provides network virtualization similar to a traditional physical network in topology and function. CloudEdge is deployed at the service entrance as the VPC gateway to protect your EC2 instances by inspecting all traffic to identify users, applications, content, and to set granular access control policy, block known and unknown threats, as well as to guard against abnormal behavior. In a dynamic AWS deployment solution – when EC2 instances are added or changed to accommodate workload – CloudEdge is rapidly and automatically updated with new security policies and IP addresses.

Corporate VPN

VPN capability is a common requirement in the traditional enterprise network. When enterprise business migrates to AWS, users access cloud data and manage EC2 instances through an encrypted VPN tunnel. CloudEdge offers multiple VPN modes, such as IPsec VPN and SCVPN, to satisfy different requirements. In the hybrid-cloud mode, standards-based site-to-site VPN connections are established between the corporate local network, branches and your AWS virtual service – the virtual firewall applies access

control based on application, user, and content to guarantee valid and continuous access to users on remote links.

Server Load Balancing


CloudEdge provides DNAT-based server load balancing (SLB), helping enterprises establish an EC2 cluster on AWS – traffic can be assigned equally to different EC2 instances, all providing the same service. When an EC2 instance reaches its workload threshold, CloudEdge forwards the connection request to another instance to avoid discarding the request. Multiple SLB algorithms are supported, including weighted hashing, weighted least-connection and weighted round-robin. The advantage of integrating SLB with the firewall is that the firewall can inspect and analyze all inbound traffic. In the VPC, this means that CloudEdge can block attack threats hidden in traffic to protect all of your EC2 instances.

Topology of CloudEdge on AWS for This Guide

This guide uses a scenario that CloudEdge virtual firewall (vFW) works as Internet gateway for instances in a VPC. To better understand vFW, every step and screen shot in vFW deployment on AWS is based on this topology. The subnet name, IP address, interfaces in this topology are the actual lab setups we used while we are writing this guide. This topology is only for reference. In your real configurations, you need to change the subnet, interface or IP address to meet your requirements.

In this design, AWS VPC contains two subnets. Subnet 0 is for private internal servers; Subnet 1 connects the interface eth0 of vFW. vFW is deployed as a gateway of VPC and it controls in-and-out traffic of Subnet 0.

Also, eth0 is connected to VPC Internet gateway. If it is configured with DNAT rule, Internet users will be able to visit private servers in Subnet 0. If it is configured with SNAT rule, the private servers will be able to access to Internet.

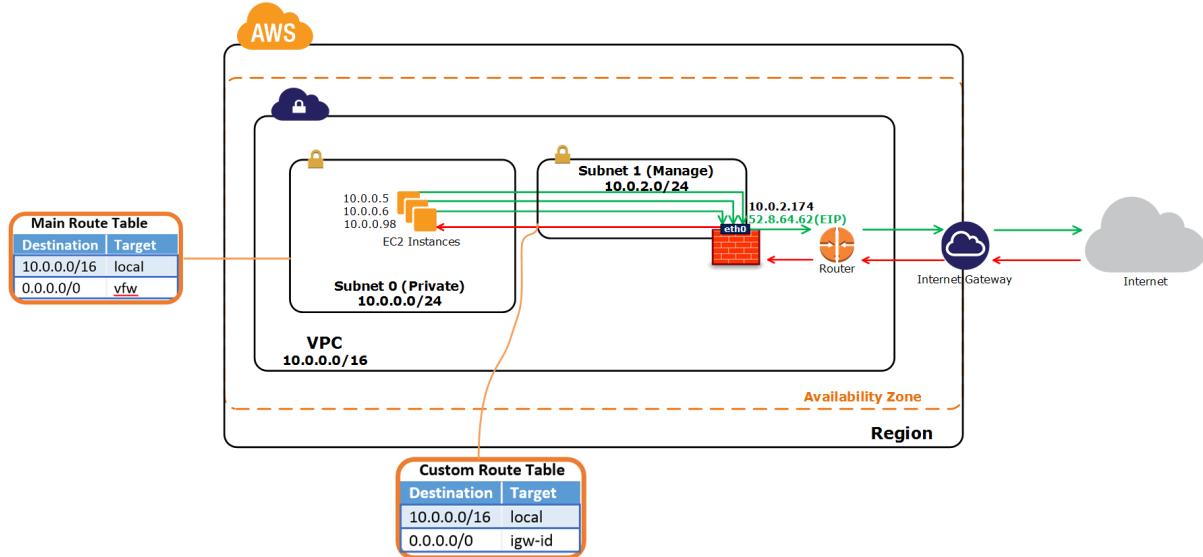

- **VPC:** 10.0.0.0/16.
- **Subnet 0 (Manage):** 10.0.0.0/24. Subnet 0 is the subnet which contains private servers (as EC2 instances). We can simply take Subnet 0 as the internal network of an enterprise in which Web servers, FTP server and mail servers are placed.
- **Subnet 1 (Public):** 10.0.2.0/24. Subnet 1 represents VPC subnet where vFW will be deployed. Subnet 1 is the subnet of vFW's management interface eth0/0.

Preparing Your VPC

You must have an AWS account in order to use AWS services. To apply or log in, go to AWS website ([click here](#)). More information about VPC, please refer to AWS VPC documentation ([click here](#)).

In this guide, we presume that our readers have built a VPC network, and the default subnet, Subnet 0, is named for Manage. The Manage subnet has a default route whose next hop is directed to Internet gateway (IGW). In this chapter, we will introduce to you how to set up a subnet. In the later steps, we will put the firewall's eth0 into this subnet.

After setups in this chapter, you will get the following VPC and its subnets:


- VPC: 10.0.0.0/16
- Subnet 0 (Manage): 10.0.0.0/24
- Subnet 2 (Public): 10.0.2.0/24

Step 1: Log in Your AWS Account

1. Log in AWS console ([click here](#)) with your AWS account.
2. Under the AWS console home, click **VPC**.



3. Enter the VPC dashboard.

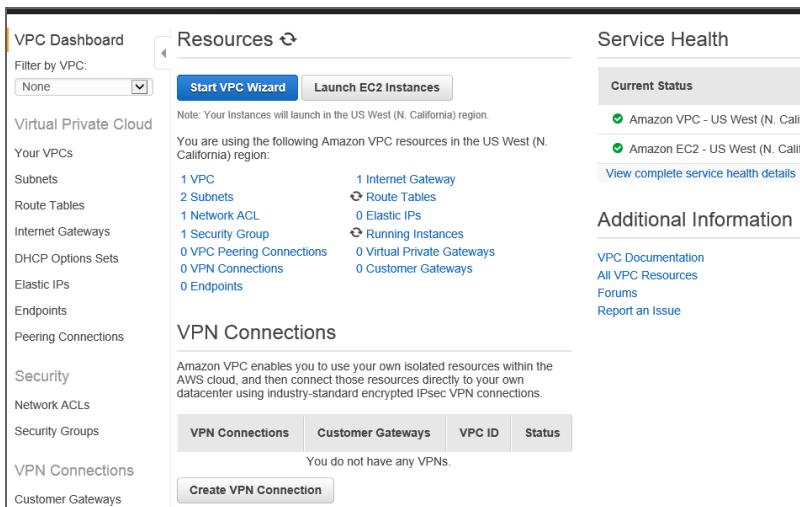


Step 2: Adding Subnets into VPC

In this guide's design, eth0/0 is the management interface for managing CloudEdge system, and also is the business interface to process flow-in traffic. Later, we will use a test EC2 instance to check if the CloudEdge firewall can function.


Subnet 0 (Manage) is already created in the step above. Next, in this step, we will introduce how to create a new subnet.

Use the configuration steps below to add a new subnet:

1. In VPC Dashboard, click **Subnets**, and then click **Create Subnet**.

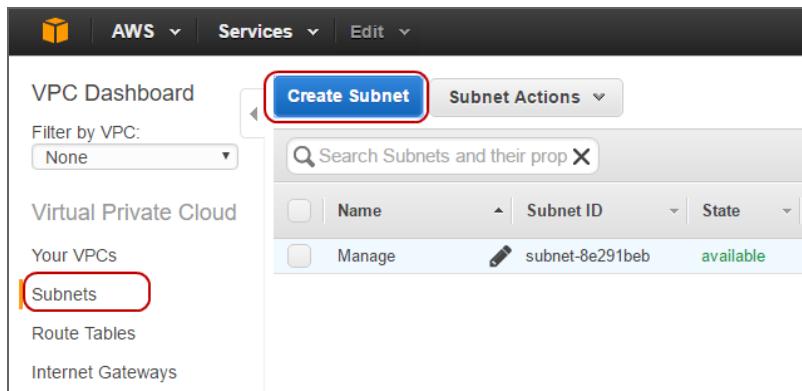

2. Enter the name "Public", and select your VPC from VPC drop-down menu. In the CIDR block text-box, enter its subnet address "10.0.2.0/24".

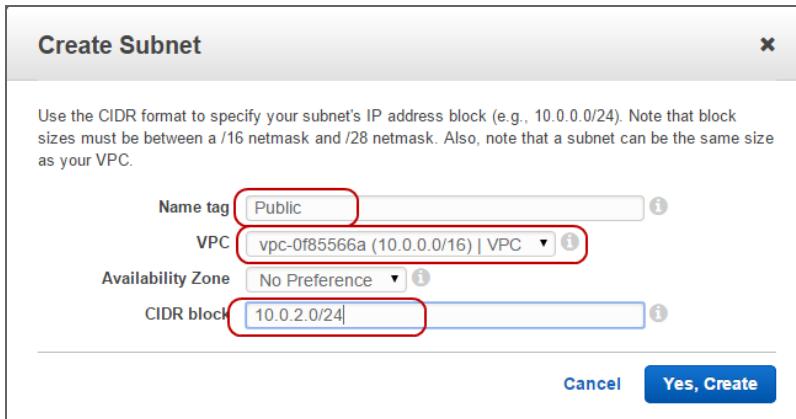

3. Click **Yes, Create**.

Step 3: Modifying Route Tables

AWS VPC has implicit router. We assume that a main route table with a default route entry whose next hop is Internet gateway has been configured in the router. After the subnet is created, its route table only has a route entry whose next hop is local. In this user guide design (refer to ["Topology of CloudEdge on AWS for This Guide" on Page 96](#)), we will make sure that Subnet 1 (Public) is connected to the main route table (whose next hop is Internet gateway) , so that Subnet 1 (Public) can be accessed by the Internet.

In order to modify route tables:

1. In VPC Dashboard, click **Subnets** and select the new created subnet.
2. Click the <Route Table> tab below, and then click **Edit**.
3. Select correct route table from the <change to> drop-down menu to associate Subnet 1 (Public) to main route table.
4. Click **Save** to save the above configurations.

Installing CloudEdge on AWS

CloudEdge is installed in AWS as an EC2 instance.

This section introduces how to install CloudEdge in AWS. After you finish configurations in this section, you will:

- have a running StoneOS system
- see that interface eth0 has acquired private IP addresses and elastic IP addresses (public)
- be able to visit the CLI and WebUI of StoneOS

CloudEdge image can be purchased from AWS Marketplace. CloudEdge image includes the following two types: pay-on-demand and BYOL(Bring Your Own License). If you want to know how to select VM models, refer to ["Overview" on Page 14](#). CloudEdge for AWS may be launched either from the AWS Marketplace '1-Click Launch' or directly from the EC2 Console. This guide will introduce both methods step by step.

1-Click Launching CloudEdge

Using 1-Click launching, you will get an instance set up ready for you just with 1 click.

1. Go to the [AWS Marketplace](#) and login with your credentials. Hillstone CloudEdge can be found by being searched by the key word "Hillstone".
2. You may select "Standard Edition" or "Advanced Edition" depending on your selection of platform model .
3. After opening the product, click **Continue**.

4. Configure the settings under **1-Click Launch**: Select CloudEdge system version, your intended region to use this instance, and instance type for this instance.

Hillstone CloudEdge Virtual-Firewall Standard Edition(BYOL)

1-Click Launch Review, modify, and launch	Manual Launch With EC2 Console, APIs or CLI																					
Click "Launch with 1-Click" to launch this software with the settings below <small>The default settings are provided by the software seller and AWS Marketplace.</small>																						
Version 5.5R1F1, released 09/21/2015																						
Region US East (N. Virginia)																						
EC2 Instance Type <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">t2.micro</td> <td>Memory</td> <td>3.75 GiB</td> </tr> <tr> <td>m3.medium</td> <td>CPU</td> <td>3 EC2 Compute Units (1 virtual core)</td> </tr> <tr> <td></td> <td>Storage</td> <td>1 x 4 GB SSD</td> </tr> <tr> <td></td> <td>Platform</td> <td>64-bit</td> </tr> <tr> <td></td> <td>Network</td> <td>Moderate</td> </tr> <tr> <td></td> <td>performance</td> <td></td> </tr> <tr> <td></td> <td>API Name</td> <td>m3.medium</td> </tr> </table>		t2.micro	Memory	3.75 GiB	m3.medium	CPU	3 EC2 Compute Units (1 virtual core)		Storage	1 x 4 GB SSD		Platform	64-bit		Network	Moderate		performance			API Name	m3.medium
t2.micro	Memory	3.75 GiB																				
m3.medium	CPU	3 EC2 Compute Units (1 virtual core)																				
	Storage	1 x 4 GB SSD																				
	Platform	64-bit																				
	Network	Moderate																				
	performance																					
	API Name	m3.medium																				
VPC Settings Will launch into: subnet-fb82d08c																						
Price for your selections: \$0.07 / hour m3.medium EC2 Instance usage fees \$0.10 / GB / month EBS General Purpose (SSD)																						
Launch with 1-Click																						
Cost Estimator Bring Your Own License (BYOL) <small>Available for customers with current licenses purchased via other channels.</small>																						
plus \$48.24 / month m3.medium EC2 Instance usage fees <small>Assumes 24 hour use over 30 days</small>																						
AWS Infrastructure Charges \$48.24 / month <small>Cost varies for storage fees \$48.24 hourly EC2 instance fees for m3.medium Varied EBS Storage and data transfer fees <small>↗</small></small>																						

5. Please be noted that you should have already built a VPC for CloudEdge. Select the VPC and subnet. More subnets can also be added later in management console.

6. For **Security Group**, we recommend you select the existing group with "Hillstone CloudEdge" name on it. The Hillstone security group opens ports to allow all potential communication. Please do not select a security group that does not allow SSH, HTTP or HTTPS connection, which will

incur disconnection.

▼ **Security Group**

A security group acts as a firewall that controls the traffic allowed to reach one or more instances. Learn more about [Security Groups](#).

You can create a new security group based on seller-recommended settings or choose one of your existing groups.

Hillstone CloudEdge Virtual-Firewall Standard Edition-BYOL--5-5R1F1-AutogenByAWS ▾
MP-

Description:
This security group was generated by AWS Marketplace and is based on recommended settings for Hillstone CloudEdge Virtual-Firewall Standard EditionBYOL version 5.5R1F1 provided by Hillstone Networks

Connection Method	Protocol	Port Range	Source (IP or Group)
HTTP	tcp	80 - 80	0.0.0.0/0
	tcp	4500 - 4500	0.0.0.0/0
	tcp	4433 - 4433	0.0.0.0/0
	tcp	1280 - 1280	0.0.0.0/0
SSH	tcp	22 - 22	0.0.0.0/0
	tcp	500 - 500	0.0.0.0/0
	tcp	2222 - 2222	0.0.0.0/0
	udp	4500 - 4500	0.0.0.0/0
	udp	4433 - 4433	0.0.0.0/0
	udp	500 - 500	0.0.0.0/0
	HTTPS	tcp	443 - 443

Warning
Rules with source of 0.0.0.0/0 allows all IP addresses to access your instance. We recommend limiting access to only known IP addresses.

7. Select a key pair. It will be used in SSH login.

▼ **Key Pair**

▾

To ensure that no other person has access to your software, the software installs on an EC2 instance with an EC2 key pair that you created. Choose an existing EC2 key pair in the list.

8. Click **Launch with 1-Click**.

An instance of this software is now deploying on EC2.

▪ If you would like to check the progress of this deployment, go to the [AWS Management Console](#) .
▪ The software will be ready in a few minutes.

Usage Instructions
How to deploy Virtual Firewall on AWS: http://www.hillstonenet.com/wp-content/uploads/SG6000-VM_vFW_Installation_Guide.pdf 

Service Catalog
Click [here](#) for instructions to deploy Marketplace products in AWS Service Catalog.

Software Installation Details

Product	Hillstone CloudEdge Virtual-Firewall Standard Edition(BYOL)
Version	5.5R1F1, released 09/21/2015
Region	US East (N. Virginia)
EC2 Instance Type	m3.medium
VPC	vpc-a7efecc2
Subnet	subnet-fb82d08c
Security Group	Hillstone CloudEdge Virtual-Firewall Standard Edition-BYOL-5-5R1F1-AutogenByAWSMP-
Key Pair	lwb-key

9. Click **Manage in AWS Console**. You will jump to EC2 management console where you can view and continue setting up CloudEdge.

i-ba18e16d  running [Manage in AWS Console](#)  [Access Software](#) 
Version 5.5R1F1

10. Default logging into CloudEdge is username "hillstone" and key pair.

Launching CloudEdge from EC2

You can also start CloudEdge EC2 with EC2 wizard.

Step 1: Selecting CloudEdge from AWS Marketplace

1. Go to the [AWS Marketplace](#) and login with your credentials. Hillstone CloudEdge can be found by being searched by the key word "Hillstone".

2. You may select "Standard Edition" or "Advanced Edition" depending on your selection of platform model.
3. After opening the product, click **Continue**.
4. Under **Manual Launch**, select system version and click **Launch with EC2 Console** next to your intended region.
5. You will jump to EC2 installation wizard to continue your setup.

Step 2: Choosing AMI

AMI is a special virtual appliance that includes operating system, applications and any additional software that are required for installing an instance.

It will take a few minutes before you can see vFW AMI in your AWS.

1. You are in the step **1: Choose AMI**. Click AWS Marketplace, and search for CloudEdge products.
2. When you find your intended product, click **Select**.
3. You will move to next step.

Step 3: Choosing Instance Type

Choose the instance type based on the product model. The selected instance should at least meet the minimum requirements of the specified product model. For more information, refer to the [vFW Models](#). Currently, the supported instance types include t2 instance, t3 instance, m5 instance, m5a instance, and c5 instance.

Select the radio button of your intended instance type, click **Next: Configure Instance Details**.

Step 4: Configuring Instance Details

In this step, we choose VPC and VPC subnets for the instance.

1. Under the Network drop-down menu, select the VPC to which vFW belongs. Select the Subnet 1 (Public) to associate to eth0 from the drop-down list of Subnet. You can keep other options as default.
2. Click **Next: Add Storage**.

Step 5: Adding Storage

1. vFW needs two volumes. The root volume stores vFW image, and the second volume saves configurations files. If you cannot see two volumes on this page, which means that your AMI has only one default volume in its settings, you can add a new volume by clicking **Add New Volume**. For the second volume, you can keep default values, and the size can be just 1 GB.

Step 4: Add Storage

Your instance will be launched with the following storage device settings. You can attach additional EBS volumes and instance store volumes to your instance, or edit the settings of the root volume. You can also attach additional EBS volumes after launching an instance, but not instance store volumes. [Learn more about storage options in Amazon EC2.](#)

Type	Device	Snapshot	Size (GiB)	Volume Type	IOPS	Delete on Termination
Root	/dev/xvda	snap-8c6a69a9	1	General Purpose (SSD)	3 / 3000	<input type="checkbox"/>
EBS	/dev/sdc	Search (case-insensitive)	1	General Purpose (SSD)	3 / 3000	<input type="checkbox"/>
Add New Volume						

2. Click **Next: Tag Instance**.

Step 6: Tag Instance

Tag is used to mark an instance. Any tag you add here will not influence configuration of your instance. You can configure or just ignore this step, and click **Next: Configure Security Group**.

Step 7: Configuring Security Group

A security group is a set of firewall rules that control the traffic for your instance. AWS EC2 has a default rule to allow all SSH connections. In order to access to CloudEdge, we need to add a new rule to allow traffic of all types.

1. Select **Create a new security group**, and enter names and description.

Assign a security group:	<input checked="" type="radio"/> Create a new security group
	<input type="radio"/> Select an existing security group
Security group name:	VPC
Description:	VPC

2. Click **Add Rule** to add a rule which allows all types of traffic.

Type: SSH	Protocol: TCP	Port Range: 22	Source: Anywhere • 0.0.0.0/0
Add Rule			

3. Click **Review and Launch**.

Step 8: Launching Instance

1. On the review page, look at all the configurations and click **Launch**.
2. AWS will pop up a prompt to ask you for key pair. Select **Create a new key pair**, and enter a name for the private key file.

Select an existing key pair or create a new key pair

A key pair consists of a **public key** that AWS stores, and a **private key file** that you store. Together, they allow you to connect to your instance securely. For Windows AMIs, the private key file is required to obtain the password used to log into your instance. For Linux AMIs, the private key file allows you to securely SSH into your instance.

Note: The selected key pair will be added to the set of keys authorized for this instance. Learn more about [removing existing key pairs from a public AMI](#).

Create a new key pair


Key pair name
keypair

Download Key Pair

Tip: You have to download the **private key file (*.pem file)** before you can continue. **Store it in a secure and accessible location.** You will not be able to download the file again after it's created.

Cancel **Launch Instances**

3. Click **Download Key Pair**, your browser will start downloading a PEM file with the name you just entered. You should save this private key file in a secured location. It will be used later.
4. Click **Launch Instances**. AWS will boot this instance. A message will show up when the instance is launched successfully. You may click **View launch log** to see the launching process logs.

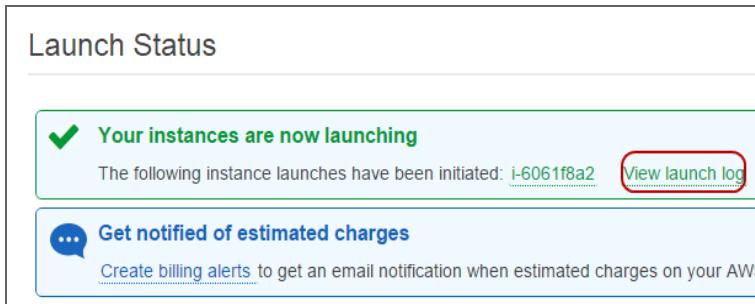

5. Click **View Instance**, you will be redirected to instance list. The CloudEdge instance is being initialized.

	Name	Instance ID	Instance Type	Availability Zone	Instance State	Status Checks	Alarm Status	Perf Metrics
<input checked="" type="checkbox"/>		i-6061f8a2	t2.small	us-west-1a	running	Initializing	None	

Configuring Subnets and Interfaces


Allocating Elastic IP Addresses

Elastic IP (EIP) is a static public IP address allocated by AWS. When an instance is assigned with an EIP, this instance is open to public and has its public address.

As the DHCP function of eth0 interface is enabled by default, after the virtual firewall is started, the eth0 interface is automatically assigned with a private IP address. We will apply for an elastic IP address for eth0. After that, eth0 interface has a private IP address and public IP address. The two IP addresses are mapped to each other automatically. You do not need to set up rules to allow traffic from one address to the other.


1. In EC2 management console, click **Elastic IPs** from the left navigation.

2. Click **Allocate New Address** to request a new IP address.

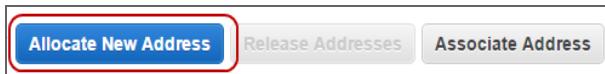

3. In the prompt, click **Yes, Allocate**. The new elastic IP address will be assigned to you.

4. Select an EIP, click **Associate Address**. In the prompt, enter the ID of vFW's eth0 (you can find eth0's ID from vFW's instance information). Click **Associate**, this EIP will be the public IP address of vFW's management interface eth0.

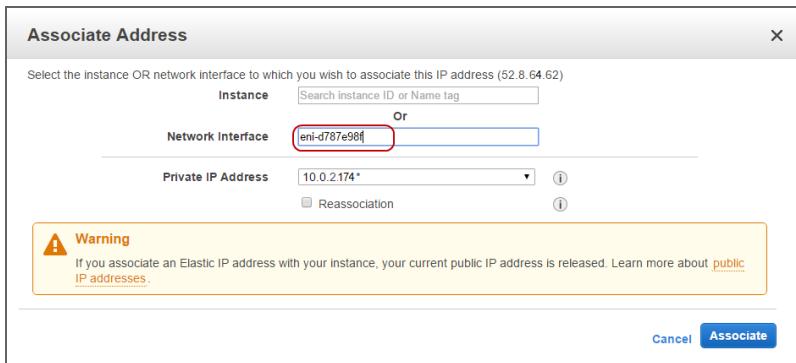

5. Go back to the EIP list, you will find that the associated EIPs have their private address, interface ID, and public DNS address.

Viewing vFW Instance Information

In the EC2 management console, click **Instances** from left navigation, and then select the vFW instance in the list. The instance detailed information is shown in the pane below the list.

The screenshot shows the AWS CloudWatch Metrics interface. At the top, there are tabs for 'Launch Instance', 'Connect', and 'Actions'. Below the tabs is a search bar with the placeholder 'Filter by tags and attributes or search by keyword'. The main area displays a table of metrics. The columns are: Name, Instance ID, Instance Type, Availability Zone, Instance State, Status Checks, Alarm Status, Public DNS, Public IP, Key Name, Monitoring, Launch Time, and Secu. There are three rows in the table, each representing a different metric. The first row (i-018338c3) is in the 'running' state. The second row (i-605118a2) is in the 'terminated' state. The third row (i-af0574f6d) is also in the 'running' state. The Public IP for the third row is ec2-52-8-55-6.us-west-1.compute.amazonaws.com. The Launch Time for the third row is June 11, 2015 at 3:49:43 P... vfw. Below the table, a detailed view of the 'CloudWatch Metrics' metric for the instance i-af0574f6d is shown. This view includes fields for Interface ID (xid-0807d990), VPC ID (vpc-08556a), Attachment Owner (662900231914), Attachment Status (attached), Attachment Time (Thu Jun 11 15:49:43 GMT+000 2015), Delete on Terminate (true), Private IP Address (10.0.2.174), Private DNS Name (ip-10-0-2-174.us-west-1.compute.internal), Elastic IP Address (52.8.64.62), Source/Dest. Check (true), Description (-), and Security Groups (vfw). The Public DNS is ec2-52-8-55-6.us-west-1.compute.amazonaws.com, and the Public IP is 52.8.64.62. The Availability zone is us-west-1a, and the Security groups are vfw, view rules. There are no scheduled events. The AMI ID is VM01+release (ami-b75eb0f3), and the Platform is -. The IAM role is -. The Key pair name is -, and the Owner is 662900231914. The Launch time is June 11, 2015 at 3:49:43 PM UTC+8 (less than one hour). The Termination protection is False, and the Lifecycle is normal. Monitoring is basic. The Alarm status is None, and the Kernel ID is -. The RAM disk ID is -. The detailed view also shows the Network interface eth0.

Purchase and Apply for License Software

This step is only applicable to the BYOL type of products.

After you purchased BYOL type product, Hillstone next generation virtualization firewall License is also needed, which ensures vFW run normally in AWS. Please contact the Hillstone salesperson to get the license software. To install the license software in vFW, see "["Installing License" on Page 25](#)

Visiting CloudEdge

In CloudEdge default settings, only the access to eth0. is enabled. So, we will use SSH connection to visit eth0 before we can visit its other ports.

Visiting CloudEdge from Windows Using PuTTY

We use Windows to explain how to visit ourCloudEdge instance.

Before connecting, you will need to complete the following prerequisites:

- Install PuTTY (recommend by AWS): Download and install **PuTTYgen** and **PuTTY**. You may download from [PuTTy DownLoad Page](#).
- Get the Elastic IP of the instance: the eth0's public IP address.

- Locate the private key (PEM file)
- Enable inbound SSH traffic from your IP address to your instance: this setting is default. If you did not change settings, you will have SSH inbound access.

Step 1: Converting Your Private Key Using PuTTYgen

PuTTY does not natively support the private key format (.pem) generated by Amazon EC2. PuTTY has a tool named PuTTYgen, which can convert keys to the required PuTTY format (.ppk). You must convert your private key into this format (.ppk) before attempting to connect to your instance using PuTTY.

To convert your private key

1. Start PuTTYgen (for example, from the Start menu, click **All Programs > PuTTY > PuTTYgen**).
2. Under **Type of key to generate**, select **SSH-2 RSA**.

The screenshot shows the 'Parameters' window of PuTTYgen. In the 'Type of key to generate:' section, there are three radio buttons: 'SSH-1 (RSA)', 'SSH-2 RSA' (which is selected and highlighted with a red box), and 'SSH-2 DSA'. Below these buttons is a 'Number of bits in a generated key:' field containing the value '2048'.


3. Click **Load**. By default, PuTTYgen displays only files with the extension .ppk. To locate your .pem file, select the option to display files of all types.
4. Browse and select PEM file.
5. Click **Save private key**, and save it (a .ppk file) to a secured location on your PC. It will be used soon.
6. Close PuTTYgen.

Step 2: Starting a PuTTY Session

Use the following procedure to connect to your instance using PuTTY. You'll need the .ppk file that you created for your private key.


1. Start PuTTY (from the **Start** menu, click **All Programs > PuTTY > PuTTY**).

2. In the **Category** pane, select **Session** and complete the following fields:

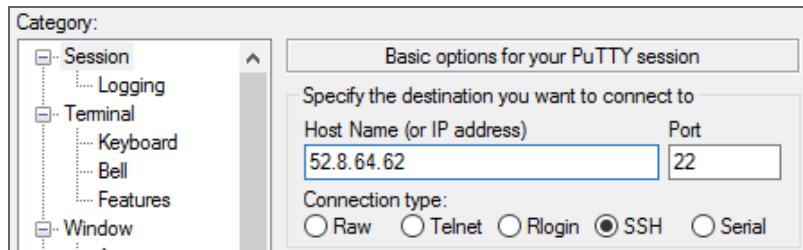


- In the **Host Name** box, enter instance's public IP (eth0 public address).
- Under **Connection** type, select **SSH**.
- Ensure that **Port** is 22.


3. In the **Category** pane, expand **Connection > SSH > Cipher**, and move 3DES up to the top.

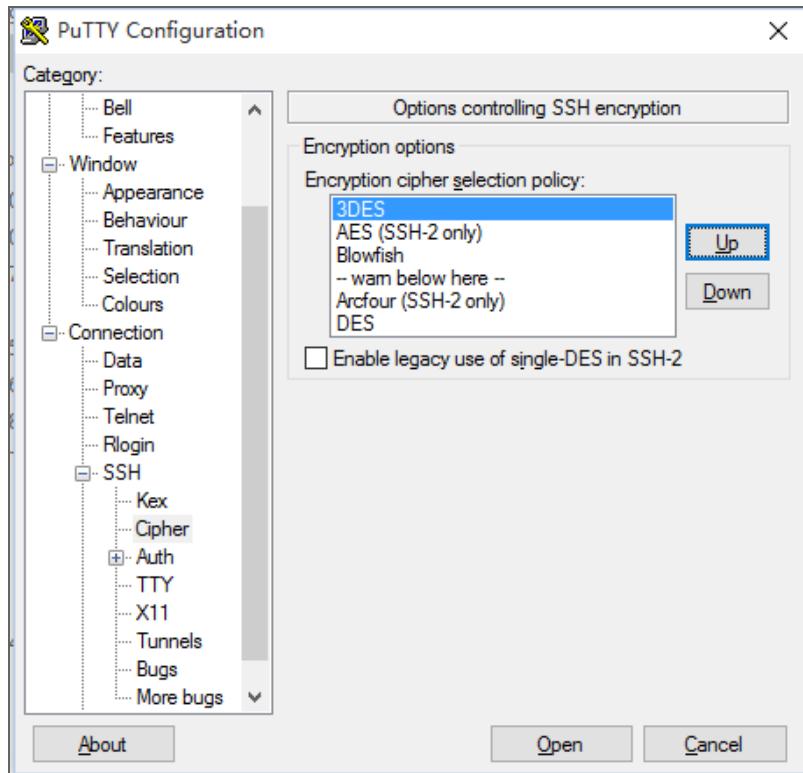

4. In the **Category** pane, expand **Connection > SSH > Auth**. Click **Browse**, and select the .ppk file that was generated for private key pair.

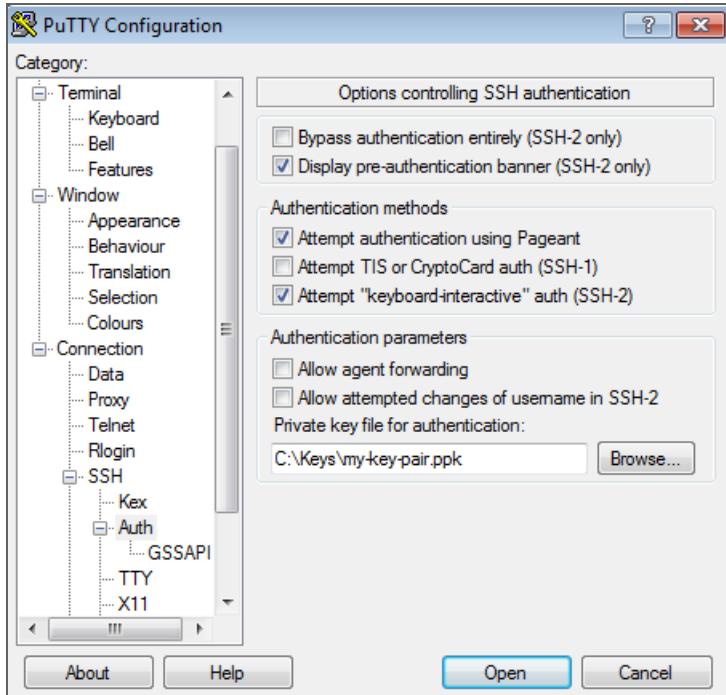

5. Click **Open**. If a prompt appears, click **OK**.
6. A command line dialog appears. It prompts for you to enter username. Type **hillstone**, and you will be connected to your instance.

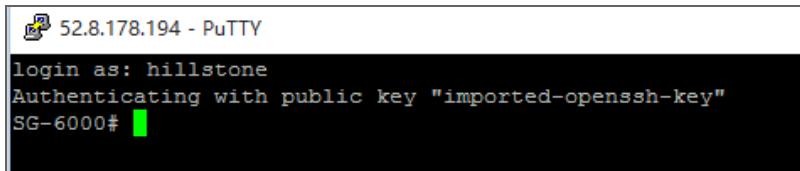


Visiting WebUI of StoneOS

1. In order to enable WebUI access, enter the command below to enable eth0's http protocol first:

```
SG-6000# config
SG-6000(config)# interface ethernet0/0
SG-6000(config-if-eth0/0)# manage http
```

2. Enter the EIP of eth0 into the address bar of your browser, and then you are in the login page of StoneOS.

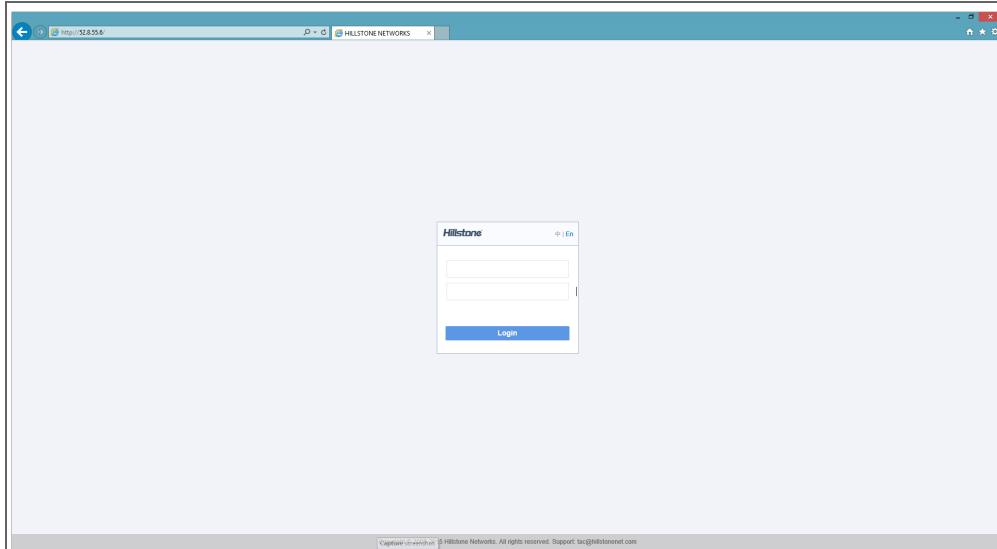

3. Enter the default username "hillstone". For default password, enter CloudEdge instance ID. The instance ID can be found in AWS EC2 instance page.

	Name	Instance ID	Instance Type	Availability Zone	Instance State
		i-6061f8a2	t2.small	us-west-1a	 running

4. Click **Login**, you will enter StoneOS web management interface.


Notes: We recommend that users run StoneOS WebUI on Chrome and IE 11 which have been tested for browser compatibility.

Basic Configurations of StoneOS

Creating a Policy Rule

To create a policy rule that allows all traffics from and to all directions:

1. Select Policy > Security Policy.
2. Create a security policy that allows all types of traffic (every field is set to **Any**).

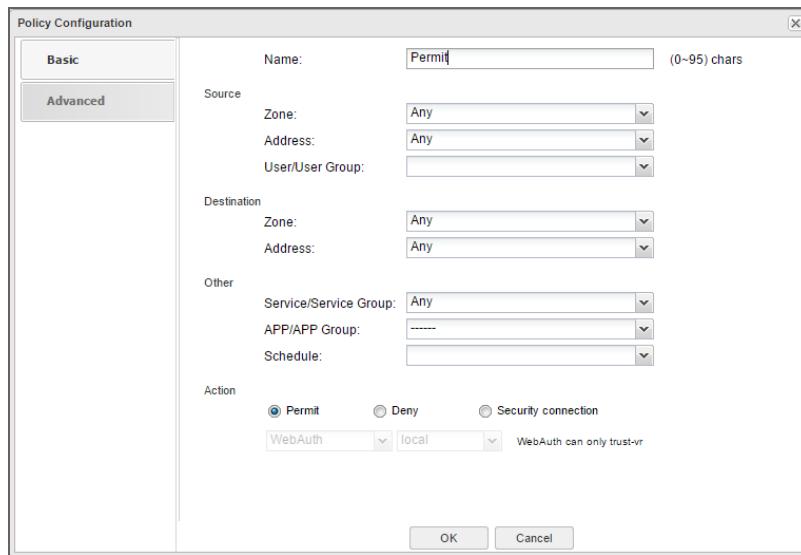

3. Click **OK**.

Or, you can use the following command in CLI:

```
SG-6000(config)# rule id 1 from any to any service any permit
```

Testing

In order to test whether the private network traffic can be through the virtual firewall, we will configure the SNAT and DNAT function in the virtual firewall.

We will create a virtual machine with a Windows 2012 Server system in AWS VPC to test that if the servers in private subnet can connect to Internet via vFW.

Creating a Test Virtual Machine (Windows)


In this section, a Windows 2012 Server virtual machine will be created. This virtual server will be an internal server in a company's private network, and it connects to public network by vFW.

Step 1: Modifying Route Table

Before the SNAT function is enabled, you need to add a route entry for the route table used by the subnet Subnet 0 (Manage), whose destination address is 0.0.0.0/0 and the target is the ID of the interface eth0, in order to make sure packets from Subnet 0 (Manage) can access the Internet through the virtual firewall.

To modify the route table of private subnet:

1. In VPC console, select **Route Tables** from left navigation, modify the route table name of Subnet 0 (Manage) to "vFW" for easier search.
2. In the lower part of this page, click the <Routes> tab, and then click **Edit**.
3. Click **Add another route**, and enter the ID of vFW's eth0.

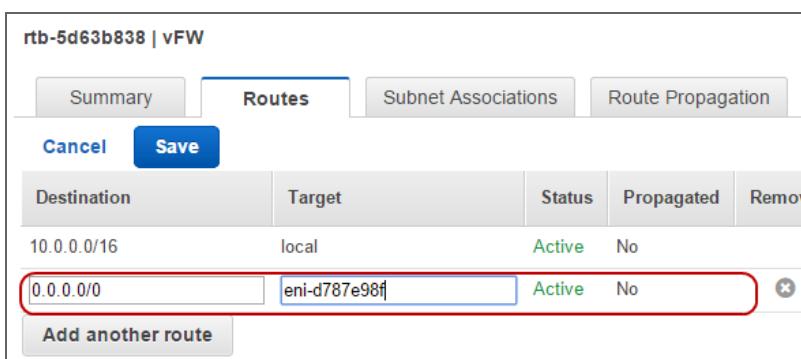


Destination	Target	Status	Propagated	Remove
10.0.0.0/16	local	Active	No	
0.0.0.0/0	eni-d787e98f	Active	No	X

4. Click **Save**.

Step 2: Creating EC2 instance

1. Go to EC2 management console, click **Launch Instance**.
2. From AWS AMI community, select a Windows Server 2012, click **Select**.

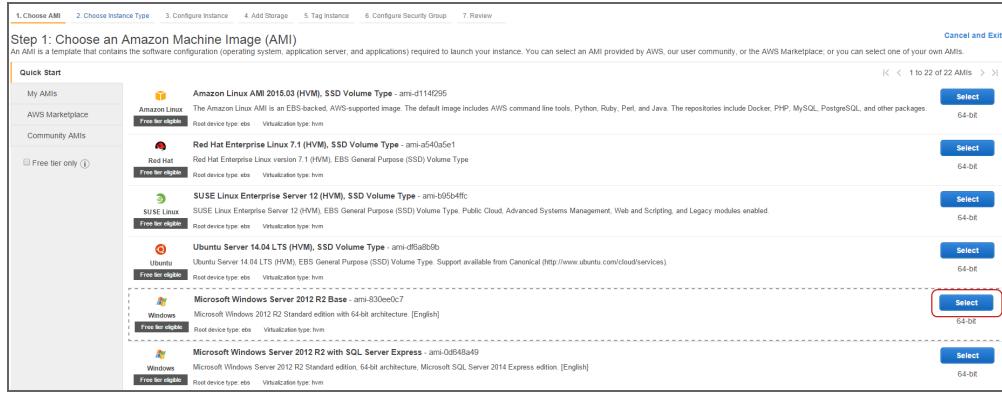


3. Keep the default settings in instance type page, click **Next: Configure Instance Details**.
4. Select your VPC and subnet Private: 10.0.0.0/24.
5. Click **Next** for consecutive three times to keep default values, and move to <6. Configure Security Group> page.



6. Click **Review and Launch**, and in the review page, click **Launch**.
7. (Important!) In the prompt, select **Create a new key pair** from drop-down menu. Enter any name, and click **Download Key Pair**. Your browser will automatically download the key pair file (.pem).

You should save that file to a secured location and it will be used later.

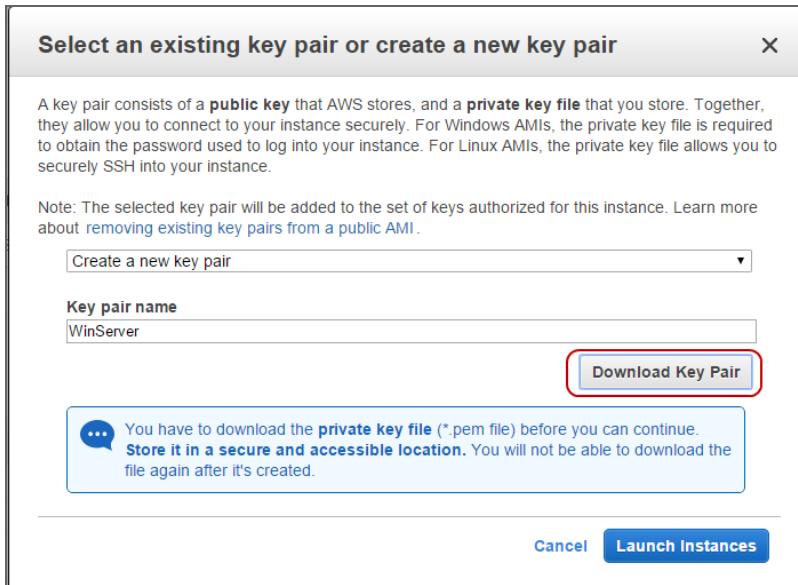


8. Click **Launch Instance**. The Windows EC2 instance will start to boot.

Step 3: Acquiring Password of Test Instance


To connect to the test Windows instance, you will use the key pair file.

1. In EC2 instance list, right click the new Windows instance, and select **Connect**.

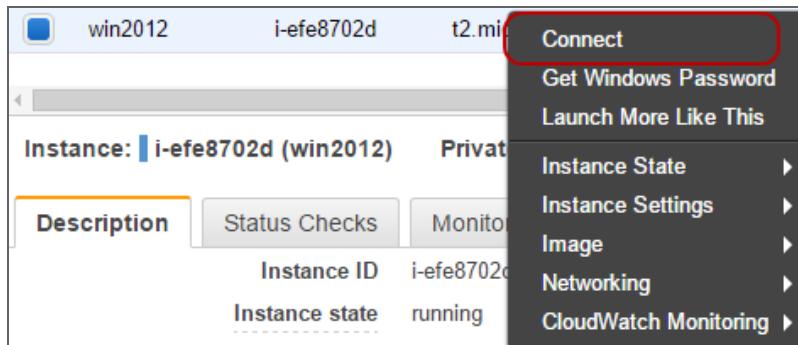

2. In the prompt, click **Get Password**, and in the prompt, click **Choose File**, then browse and import the private key file (.pem) which was saved in the previous step.

3. Click **Decrypt Password**, you will see plain text password. You are advised to copy the password to a text file.

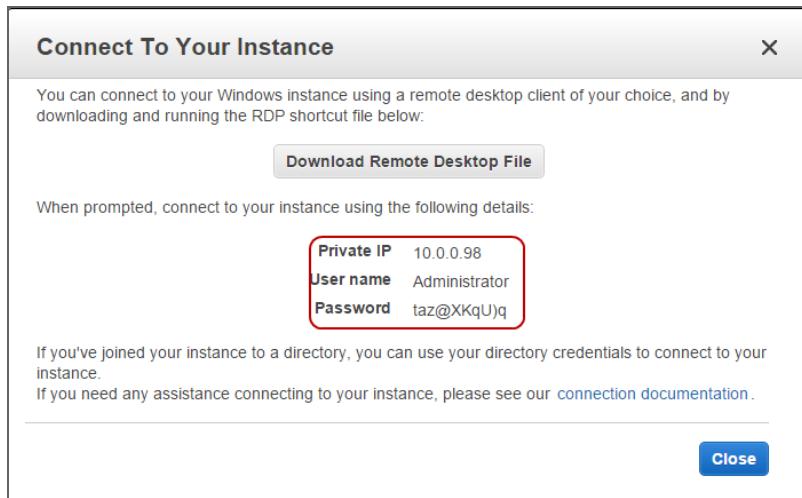

4. Close this dialog.


Step 4: Creating a DNAT rule

In order to publish interface servers on a publicly accessible address, we should create a DNAT rule for internal servers which provide services to public network.

In this design, the DNAT rule will use eth0.

1. In vFW's StoneOS, select **Policy > NAT > DNAT**, and click **New > Advanced Configuration**.
2. In the prompt, select **Any** for the <Source Address> field, enter the private IP address of eth0 for the <Destination Address> field, and enter the private IP address of your internal server for the

<Translate to> field.

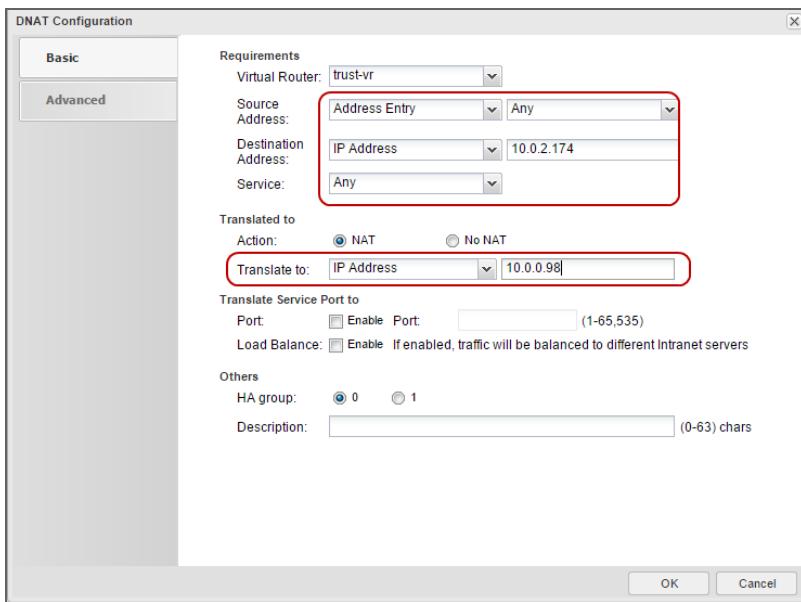

3. Click **OK**.

Or, you can use the following command in CLI:


```
SG-6000(config)# ip vrouter trust-vr
```

```
SG-6000(config)# dnatrule from any to 10.0.2.174 trans-to 10.0.0.98
```

Step 5: Creating an SNAT rule

SNAT rule is used when your internal servers want to visit public network. If your private server is just used to provide services and will not visit Internet, you can omit this section.

1. Select **Policy > NAT > SNAT**, click **New**.
2. In the prompt, create an SNAT rule to translate any traffic to egress interface.

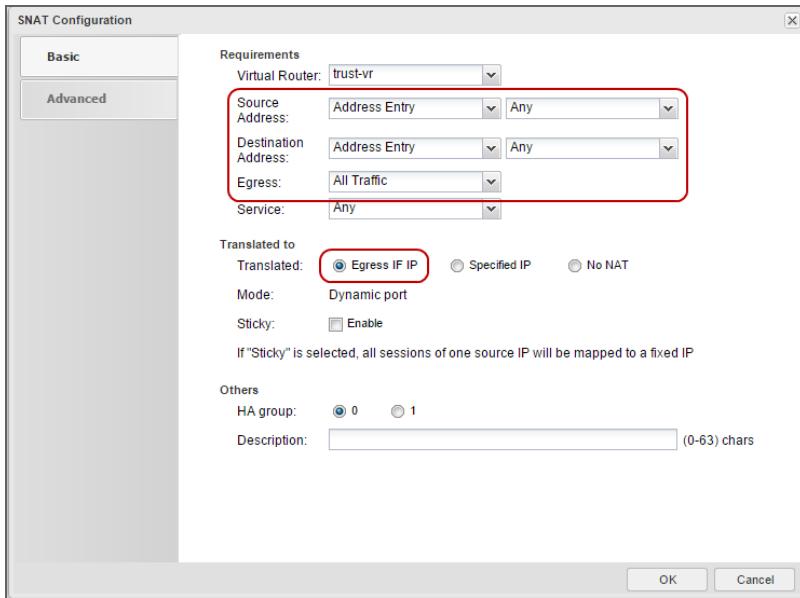

3. Click **OK**.

Or, you can use the following command in CLI:


```
SG-6000(config)# ip vrouter trust-vr
SG-6000(config)# snatrule from any to any trans-to eif-ip mode dynamicport
```

Step 6: Disabling Source/Dest. Check

To make SNAT run normally, you need to disable source/destination check of the network interface.

1. On EC2 management console, click **Networks Interfaces** from the left navigation.
2. Select the interface eth0, click **Actions > Change Source/Dest. Check**.

3. In the prompt, select **Disabled**, and click **Save**.

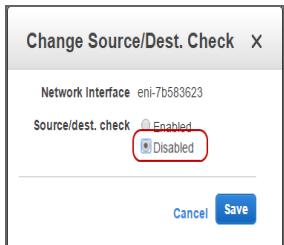

Starting Test


Before testing, make sure your vFW has the following settings:

- A security rule that allows all traffic ("Creating a Policy Rule" on Page 115);
- You have disabled Source/Dest. check for interfaces that connect to IGW ("Installing CloudEdge on AWS" on Page 101);
- A DNAT rule that translates eth0's address to private server's address ("Step 4: Creating a DNAT rule" on Page 119);


Test 1: Visiting Private Server

On a PC with Internet connection, you can use remote desktop client to visit private virtual server.

1. Type **mstsc** in Startup of Windows system, press **Enter**.
2. Use Windows remote client, enter the public IP address (i.e. the EIP of eth0).

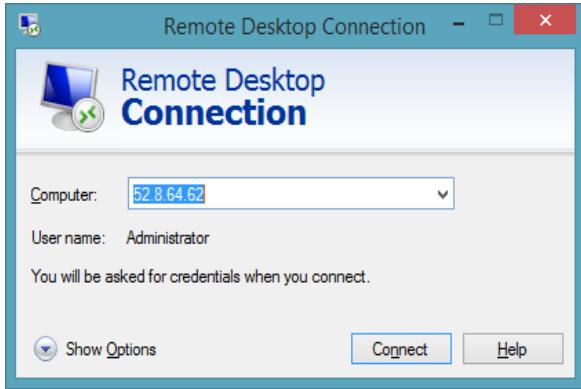


3. Click **Connect**. Copy the encrypted password (you should have already saved the password in text file), and paste the password in the password field. If the system indicates your password is wrong, you may try to manually input the password.

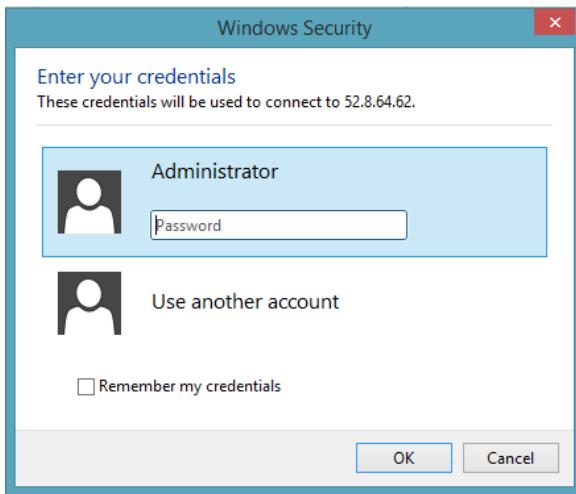


4. In the prompt of certificate warning, click **Yes** to continue.

- Now you have entered the Windows server system.

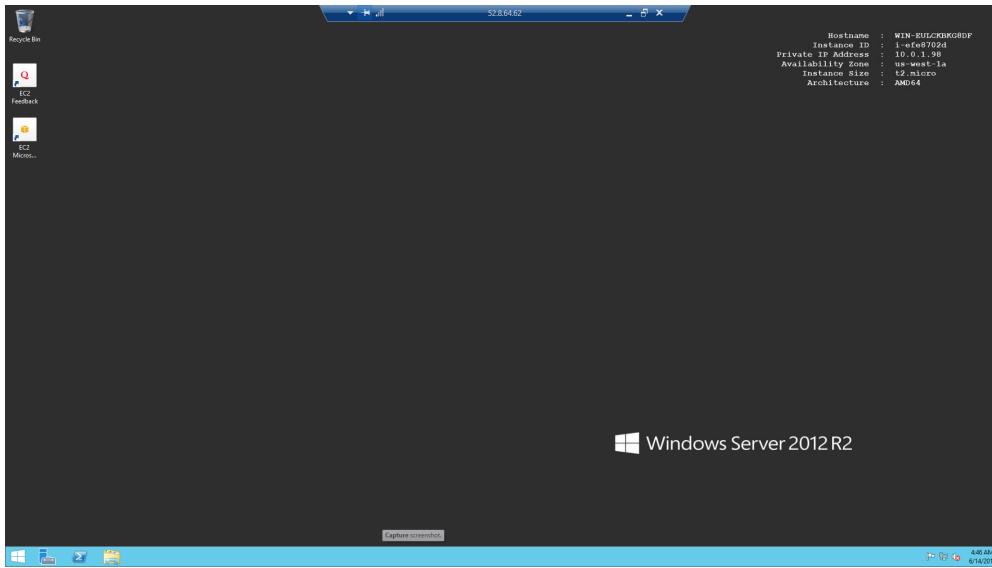


Test 2: Internal Server to Access Internet

If you have configured the SNAT rule in StoneOS, your private server can visit Internet too.

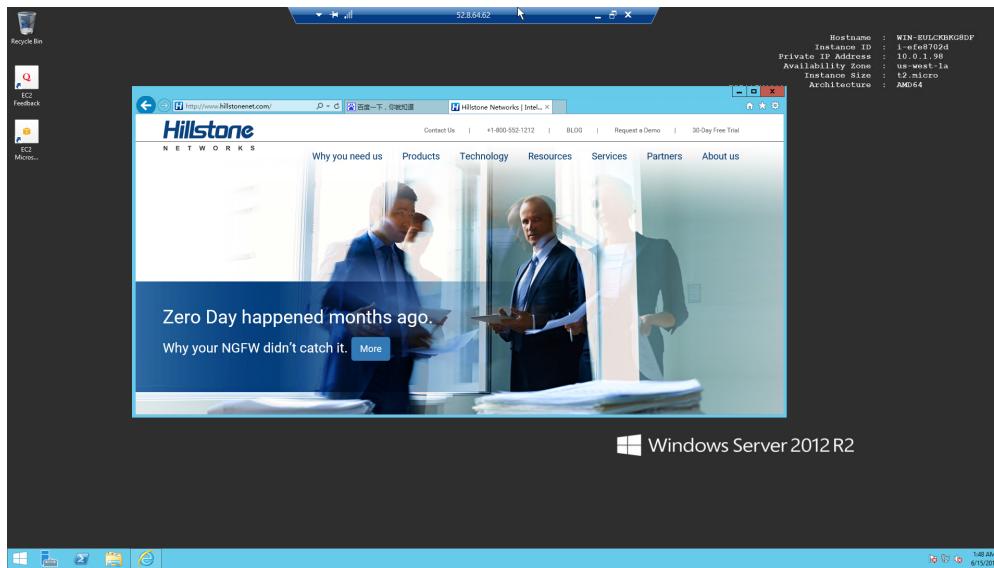

Test 3: Checking In/Out Traffic of vFW

Log in StoneOS, and select **Monitor > Device > Summary**, you will see that vFW's interface has in-and-out traffic.

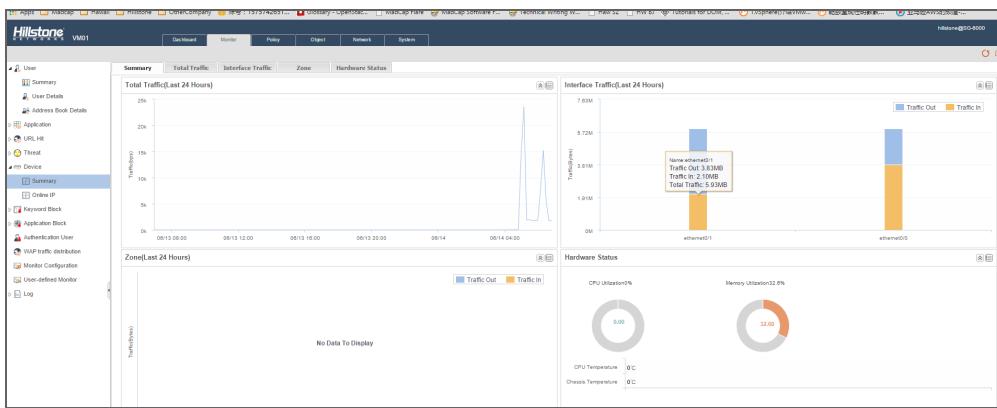


Deploying HA Scenarios of CloudEdge on AWS

HA Typical Scenarios

There is a cloud server web-server (10.0.2.209) on the AWS platform. You can protect the server by deploying the HA scheme of CloudEdge. The following topology introduces how to deploy HA scenarios of CloudEdge on AWS.

After the deployment, vfw-A will be selected as the master device to protect the web-server and vfw-B will be selected as the backup device. vfw-A will synchronize its configurations and status data to the backup device vfw-B. When the master device vfw-A fails to work, the backup device vfw-B will switch to the master device to protect web-server without interrupting user's communication, which can ensure network stability.

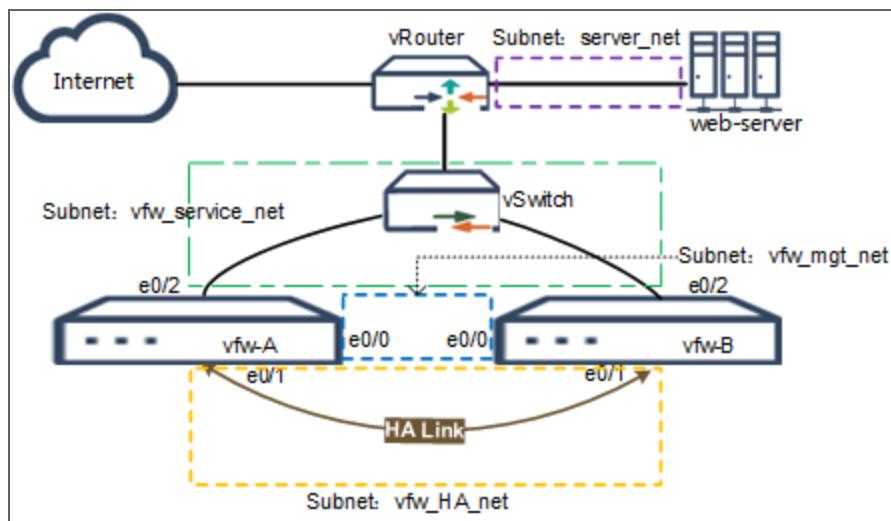

Deployment Steps

["Step 1: Creating VPC and Subnet" on Page 127](#)

["Step 2: Creating and Enabling Internet Gateway" on Page 127](#)

["Step 3: Creating Policies" on Page 129](#)

["Step 4: Creating IAM Roles" on Page 131](#)

"Step 5: Creating EC2 Instances" on Page 132

"Step 6: Creating Network Interfaces" on Page 133

"Step 7: Connecting and Configuring CloudEdge instances" on Page 135

"Step 8: View HA Results" on Page 140

"Step 9: Configuring the Routing of Web-server on AWS" on Page 141

"Step 10: Configure Routing, NAT and Security Policies on CloudEdge" on Page 141

Step 1: Creating VPC and Subnet

Log in to the AWS console ([click here](#)) with your AWS account to create a VPC and subnet. For details, see [Adding subnets into VPC](#).

Information of VPC and subnet which web-server belong to are as follows:

- VPC(VPC1):10.0.0.0/16
- Subnet 0 (server_net):10.0.2.0/24
- web-server IP: 10.0.2.209


Create the following subnets, and the VPC which subnets and the web-server belong to should be the same:

- VPC(VPC1): 10.0.0.0/16
- Subnet 1 (vfw_service_net) : 10.0.1.0/24
- Subnet 2 (vfw_mgt_net) : 10.0.10.0/24
- Subnet 3 (vfw_HA_net) : 10.0.100.0/24

Step 2: Creating and Enabling Internet Gateway


Create an Internet gateway for instances in a VPC to communicate with the Internet. For details, take the following steps:

1. In the VPC Dashboard, select “Internet Gateway”, and click **Create internet gateway**.
2. In the <Create internet gateway> page, type the tag “Internet_ha” .
3. Click **Create** to save the above configurations.
4. In the Internet gateway list, select the "Internet_ha" item. Then click the **Actions** drop-down list, select **Attach to VPC**, and select "VPC1" created in step 1 .
5. In the VPC Dashboard, select “Route Tables” .
6. Select the corresponded route of the VPC1 created in Step 1, click the <Routes> tab at the bottom of the page, and then click **Edit routes**.

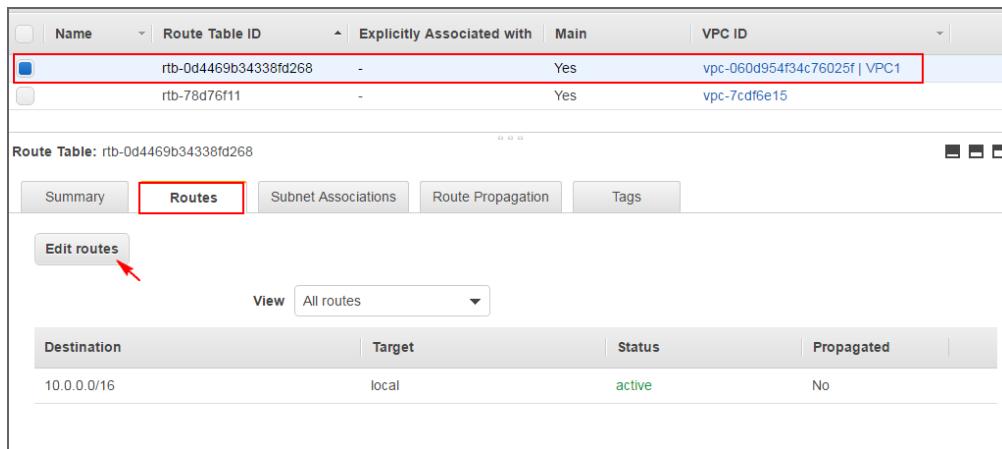

The screenshot shows the AWS Route Tables page. At the top, there is a table with columns: Name, Route Table ID, Explicitly Associated with, Main, and VPC ID. Two rows are listed: one for 'rtb-0d4469b34338fd268' associated with 'vpc-060d954f34c76025f | VPC1' and another for 'rtb-78d76f11' associated with 'vpc-7cdf6e15'. Below the table, the text 'Route Table: rtb-0d4469b34338fd268' is displayed. Underneath, there are tabs: Summary, Routes (which is highlighted with a red box), Subnet Associations, Route Propagation, and Tags. A button labeled 'Edit routes' is located below these tabs. A red arrow points to the 'Edit routes' button. At the bottom, there is a 'View' dropdown set to 'All routes' and a table with columns: Destination, Target, Status, and Propagated. One row is shown: '10.0.0.0/16' with 'local' as the target, 'active' as the status, and 'No' as the propagated status.

7. In the <Edit routes> page, click **Add route** and add a route whose next-hop is Internet Gateway "Internet_ha" to enable the Internet gateway.

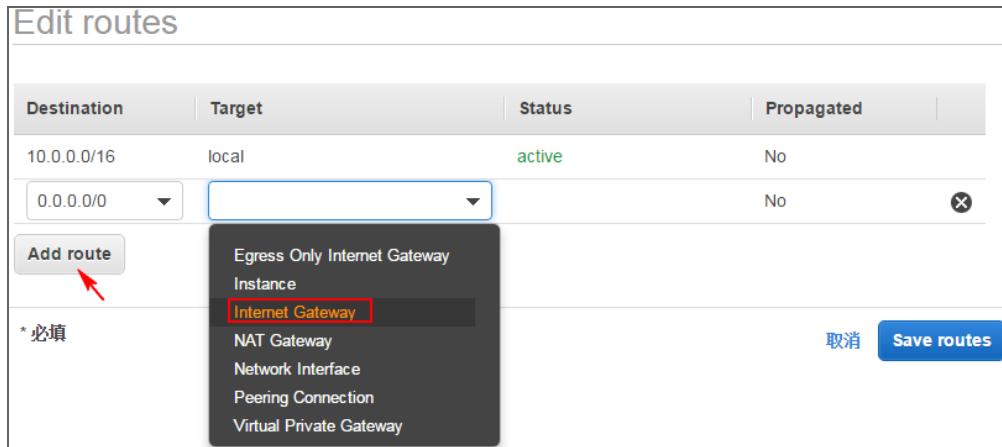


Step 3: Creating Policies


A policy defines the AWS permissions that you can assign to a user, group, or role. You can create policies that refine the functional permissions of cloud platforms that CloudEdge calls. If you don't need to limit the functional permissions that CloudEdge specifically calls, you can skip this step directly. To create an IAM policy, take the following steps:

1. In the "Security, Identity & Compliance" Dashboard, select "IAM > Policies".
2. Click **Create policy**, and in the <Create policy> page, configure the followings.
 - Service: EC2
 - Actions:
 - List: DescribeNetworkInterfaces and DescribeRouteTables
 - Write: AssignPrivateIpAddress and ReplaceRoute

- Resources: All resources

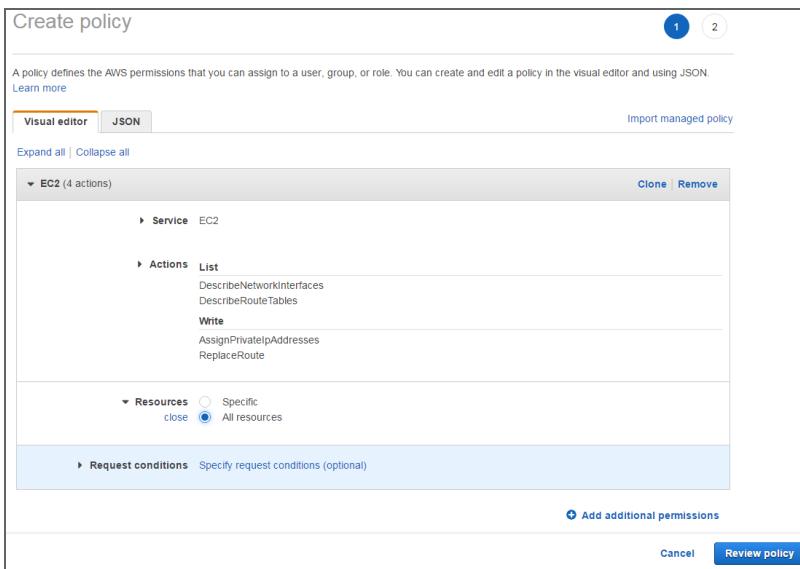

3. Click **Review policy**, and in the <Review policy> page, enter the policy Name "ha-policy".

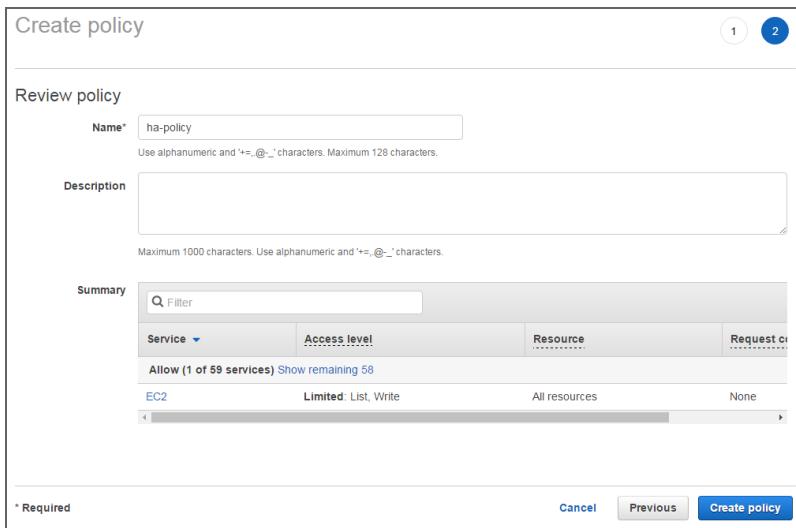

4. Click **Create policy**.

Step 4: Creating IAM Roles

Create IAM roles and configure permissions to invoke APIs. When an instance references the IAM role, it will obtain the corresponding permissions. To create the IAM role ,take the following steps:

1. In the "Security, Identity & Compliance" Dashboard, select "IAM > Roles".
2. Click **Create role**, and in the <Create role>page, configure the followings.
 - Select the type of trusted entity: AWS service;
 - Choose the service that will use this role :EC2;
3. Click **Next:Permissions**, and in the policy list of the <Attach permissions> page, select the policy "ha-policy" created in Step 3. If you don't need to limit the functional rights of CloudEdge (that is, you've skipped Step 3: Create Policies), you can directly use the "AdministratorAccess" policy corresponding to the default administrator rights of the system..

Create role

1 2 3 4

▼ Attach permissions policies

Choose one or more policies to attach to your new role.

Create policy 

Filter policies Showing 1 result

	Policy name	Used as	Description
<input type="checkbox"/>	ha-policy	None	

▶ Set permissions boundary

* Required **Cancel** **Previous** **Next: Tags**

or

Filter policies Showing 474 results

	Policy name	Used as	Description
<input type="checkbox"/>	AdministratorAccess	Permissions policy (1)	Provides full access to AWS services ...
<input type="checkbox"/>	AlexaForBusinessDeviceSetup	None	Provide device setup access to Alexa...
<input type="checkbox"/>	AlexaForBusinessFullAccess	None	Grants full access to AlexaForBusine...
<input type="checkbox"/>	AlexaForBusinessGatewayExecution	None	Provide gateway execution access to ...
<input type="checkbox"/>	AlexaForBusinessReadOnlyAccess	None	Provide read only access to AlexaFor...
<input type="checkbox"/>	AmazonAPIGatewayAdministrator	None	Provides full access to create/edit/del...
<input type="checkbox"/>	AmazonAPIGatewayInvokeFullAccess	None	Provides full access to invoke APIs in ...
<input type="checkbox"/>	AmazonAPIGatewayPushToCloudWatchLogs	None	Allows API Gateway to push logs to u...

4. Click **Next:Tags**, skip this step and continue to click **Next:Review**.
5. In the <Review>page, type the role name "ha-role".
6. Click **Create role**.

Step 5: Creating EC2 Instances

Create two CloudEdge instances vfw-A and vfw-B on AWS for HA deployment. For details , refer to [Deploying CloudEdge on AWS](#).

1. **Requirements:** At least 2 vCPU and 2GB memory are required for per instance. The subnet of the two instances should be the same. In this example, select the subnet "vfw_mgt_net" configured in the step 1.
2. The configurations for the two HA CloudEdge instances are as follows. The parameters not mentioned are consistent with those in [Deploying CloudEdge on AWS](#).

Option	Description
AMI	In the "1. Select AMI" page, select the 5.5R6F2 or later versions of AMI. If you select an old version, you can upgrade it to 5.5R6F2 or later versions after the instance starts.
Type	In the "2. Select Instance Type" page, select the instance type "Universal t2. medium" (2vCPU, 4GiB memory).
VPC	In the "3. Configuration Instances" page, select the VPC "VPC1" configured in Step 1.
Subnet	In the "3. Configuration Instances" page, select the subnet "vfw_mgt_net" configured in Step 1 as the default network.
IAM role	In the "3 Configuration Instance " page, select the IAM role

Option	Description
	"role-ha" configured in Step 3.

3. After configurations, you can add the names "vfw-A" and "vfw-B" the instances respectively in the instance list.

	Name	Instance ID	Instance Type	Availability Zone
<input checked="" type="checkbox"/>	web-server	i-08665b1bf952cadb8	t2.micro	us-east-1f
<input type="checkbox"/>	vfw-A	i-0af49bf39972599b8	t2.medium	us-east-1f
<input type="checkbox"/>	vfw-B	i-0e151481b68452a21	t2.medium	us-east-1f

Step 6: Creating Network Interfaces

To deploy the HA scenario, besides the default network, you need to add two more network interfaces as the HA network interface and the business interface. To create the network interfaces on vfw_HA_net and vfw_Service_net subnets respectively, and then attach them to CloudEdge instances, take the following steps:


1. In the EC2 Dashboard, select “Network interface” and click **Create Network Interface**.
2. In the <Create Network Interface> dialog, select “vfw_HA_net” as the subnet, and select the security group that all traffic is allowed to pass.

The dialog box for creating a network interface. It includes fields for Description (Optional), Subnet (selected: subnet-0897a63aa32d68a80 cn-northwest-1a | vfw_HA_net), Private IP (auto assign), and Security groups (selected: sg-083c2b9bcc3a0bb67 - default, sg-09b8c38479a9b5a0c - launch-wizard-1).


3. Repeat step 1 and 2 to create another vfw_HA_net subnet interface.
4. Repeat step 1 and 2 to create two network interfaces for the vfw_service_net subnet.

- In the EC2 Dashboard, select "Instance". In the instance page, select the "vfw-A" and "vfw-B". Click "Action" drop-down list, and select **Shutdown**.
- Select **Network Interface**, and enter the network interface page. Click **Attach** to attach the subnet interfaces created in step 1-4 to the instances vfw-A and vfw-B respectively.

Note: The interface of "vfw_HA_net" subnet should be attached firstly, followed by the interface of "vfw_service_net".

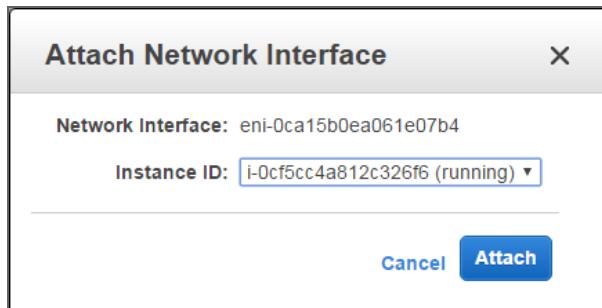

- Select the vfw_service_net interface of vfw-A (the HA master device in this example), click **Manage IP Addresses** in the "Action" drop-down list, and allocate a secondary IP for the network interface.

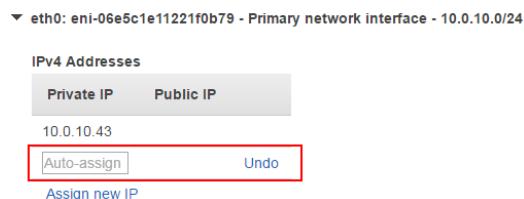

- Allocate elastic IP addresses for the vfw_mgt_net interface of vfw-A and vfw-B instances and secondary IP of vfw-A. For details, refer to "[Allocating Elastic IP Addresses](#)" on Page 108
- Select the vfw_service_net interface of vfw-A and vfw-B respectively, click **Change Source/Dest. check** in the "Action" drop-down list, and then disable the check.
- Start the instance vfw-A and vfw-B.

11. View the private IP, public IP and secondary IP of the interfaces of vfw-A and vfw-B :

- vfw-A Private IP: 10.0.10.32,10.0.100.164,10.0.1.106;
Secondary private IP:10.0.1.242
Public IP: 52.83.161.11
- vfw-B Private IP: 10.0.10.89,10.0.100.100,10.0.1.6;
Public IP: 52.83.191.210

Step 7: Connecting and Configuring CloudEdge instances

Login vfw-A and vfw-B via the SSH connection. For details , refer to [Visiting CloudEdge](#) . After login, configure the following information:

1. Configure routing priority under the interface eth0/0 of vfw-A and vfw-B respectively, and disable the reverse routing check at the same time.

```
SG-6000# configure
SG-6000 (config)# interface ethernet0/0
SG-6000 (config)# dhcp-client route distance 10 ////IP address
and default route of eth0/0 are automatically obtained . In this example,
routing priority needs to be set as 10.
SG-6000 (config-if-eth0/0)# no reverse-route ////Disable the reverse
routing checking of eth0/0.
SG-6000(config-if-eth0/0)# manage https
SG-6000(config-if-eth0/0)# exit
SG-6000(config)# https port 8888///Modify the https port number.
SG-6000(config)# admin user hillstone///Modify the username and password.
SG-6000(config)# password hillstone
```

2. On the vfw-A, configure secondary IP to the vfw-Service-net interface (eth0/2 in the example) of CloudEdge. (This configuration can only be set in the master device, which will be synchronized to the backup device after HA is deployed.)

```
SG-6000# configure

SG-6000(config)# interface ethernet0/2

SG-6000(config)#zone untrust

SG-6000(config-if-eth0/2)# ip address 10.0.1.242/24 ////Configure as the Secondary IP address and its mask.

SG-6000(config-if-eth0/2)# manage ping ////Configure the management.

SG-6000(config-if-eth0/2)# manage ssh

SG-6000(config-if-eth0/2)# manage https

SG-6000(config-if-eth0/2)# exit
```

3. Configure host routing and DNS to make vfw-A and vfw-B to communicate with the AWS platform. (This configuration can only be set in the master device, which will be synchronized to the backup device after HA is deployed.)

```
SG-6000# configure
```

```
SG-6000# show dns //View the device's DNS Server address, which is 10.0.0.2 in this example.
```

```
SG-6000 (config)# ip vrouter trust-vr
```

```
SG-6000 (config-vrouter)# ip route 0.0.0.0/0 10.0.1.1 //Configure static routing, next hop is vfw_Service_net gateway IP, and the default is X.X.X.1.
```

```
SG-6000 (config-vrouter)#ip route 169.254.169.254/32
```

```
10.0.10.1 //// The internal address of AWS platform is 169.254.169.254, through which CloudEdge can obtain Region, VPC id, interface id, etc. The gateway IP of vfw_mgt_net is 10.0.10.1.
```

```
SG-6000 (config-vrouter)# ip route 10.0.0.2/32 10.0.10.1
```

```
////The DNS Server address is 10.0.0.2 and the gateway IP of vfw_mgt_net is 10.0.10.1 .
```

```
SG-6000 (config-vrouter)# ip route 52.82.209.55/32 10.0.10.1
```

```
////One of the IP addresses of EC2 URL is 52.82.209.55. There are 3 addresses in total (see "Note" below for the method to get it), so 3 routes need to be added. The gateway IP of vfw_mgt_net is 10.0.10.1 .
```

```
SG-6000 (config-vrouter)# ip route 52.82.209.81/32 10.0.10.1
```

```
SG-6000 (config-vrouter)# ip route 52.82.209.31/32 10.0.10.1
```

```
SG-6000 (config-vrouter)# end
```

Notes:

- "IP addresses for EC2 URLs" can be obtained by continuously executing the command nslookup in the cmd window, and finally three different public network IP addresses can be obtained.

- The URL format of China version :*ec2.current region.amazonaws.com.cn*;The URL format of international version :*ec2.current region.amazonaws.com*。
- In this example, execute the command: **nslookup ec2.cn-northwest-1.amazonaws.com.cn**。

4. Configure HA on the master device vfw-A.

```

SG-6000#configure

SG-6000(config)# track track1 ///Create a track object with the
name "track1" .

SG-6000(config-trackip)# interface ethernet0/2 weight 255
///Configure eth0/2 interface as the HA tracking interface.

SG-6000(config)# ha link interface ethernet0/1 ///Configure
eth0/1 interface as the HA link interface.

SG-6000(config)# ha link ip 10.0.100.164/24 ///Configure the IP
address for HA negotiation according to the IP assigned to eth0/1 by AWS
platform.

SG-6000(config)# ha link mac 1st-interface-mac ///Configure
the control interface of HA to use the real MAC of interface.

SG-6000(config)# no ha virtual-mac enable ///Configure the HA
business interface to use the real MAC of interface.

SG-6000(config)# ha peer ip 10.0.100.100 mac 0224.f8f3.e5e2
///Configure the address of the peer device of HA link interface. The MAC
address can be viewed by the command "show interface". (MAC address can
be optionally configured.)

SG-6000(config)# ha group 0 ///Join group HA 0.

SG-6000(config-ha-group)# priority 50 ///Set the priority and the
smaller the value, the higher the priority. The device with the higher the
priority will be the master device.

SG-6000(config-ha-group)# monitor track track1 ///Add track
object to the HA group.

SG-6000(config-ha-group)# exit

SG-6000(config)# ha cluster 1 ///Add HA cluster 1.

```

5. On the backup device vfw-B, configure the following information.

```

SG-6000#configure

SG-6000(config)# ha link interface ethernet0/1

SG-6000(config)# ha link ip 10.0.100.100/24

SG-6000(config)# ha link mac 1st-interface-mac

SG-6000(config)# no ha virtual-mac enable

SG-6000(config)# ha peer ip 10.0.100.164 mac 028e.8f79.700e
///The MAC address configuration is optional.

SG-6000(config)# ha group 0

SG-6000(config-ha-group)# priority 100

SG-6000(config-ha-group)# exit

SG-6000(config)# ha cluster 1 ///It is recommended to add HA
cluster 1 after the status of the master device changes to "M".

```

6. On the AWS platform, associate the elastic IP address with the secondary IP address of vfw-A's and vfw-B's eth0/0.

Step 8: View HA Results

After completing the above configurations, the vfw-A with high priority will be selected as the master device automatically, and the vfw-B with low priority will become the backup device. The master device and the backup device are marked with the letter "M" and letter "B" respectively in the console.

```

SG-6000[M](config)#
SG-6000[M](config)#
SG-6000[M](config)#
SG-6000[M](config)#
SG-6000[M](config)#
SG-6000[M](config)#
SG-6000[M](config)#

```

```

SG-6000[B](config)#
SG-6000[B](config)#
SG-6000[B](config)#
SG-6000[B](config)#
SG-6000[B](config)#
SG-6000[B](config)#
SG-6000[B](config)#
SG-6000[B](config)#

```

- When the two devices have been successfully negotiated, you only need to configure the master device and the configurations will automatically synchronize to the backup device.

- When vfw-A fails to forward traffic or its ethernet0/2 is disconnected, vfw-B will switch to the master device and start to forward traffic without interrupting user's communication.

Step 9: Configuring the Routing of Web-server on AWS

1. In the VPC Dashboard, select "Route Tables" and enter the routes page.
2. Click **Create route table**, and add a route "VM_sevice" for VPC1.
3. Select the route "VM_sevice" created in the previous step, click the <Routes> tab at the bottom of the page, and then click **Edit routes**.
4. In the <Edit routes> page, click **Add route** and add a route whose nexthop is the network interface of the Secondary IP address of vfw-A .

Edit routes				
Destination	Target	Status	Propagated	
10.0.0.0/16	local	active	No	
0.0.0.0/0	eni-075bf835d3a771b4a	active	No	×

5. In VPC Dashboard, select "subnets" to enter the subnet page, and select the subnet "server_net" of web-server.
6. Click "Route tables" tab at the bottom of page, and then click "Edit" .
7. In the <Route Table ID>drop-down list , select the route item created in step 1-4.

Step 10: Configure Routing, NAT and Security Policies on CloudEdge

You can configure the web-server's inbound and outbound traffic through the CloudEdge instance in the HA deployment scheme to ensure the high reliability of server's business. The configurations are as follows:

1. Configure the source NAT rule on the master device vfw-A, and the source address of the traffic in the web-server network segment will be translated into the IP of interface eth0/2, i.e., the Secondary IP: 10.0.1.242.

Command:

```
SG-6000 (M) (config-vrouter)# snatrule from 10.0.2.209/24 to any
service any eif ethernet0/2 trans-to eif-ip mode dynamicport
```

2. Configure the destination NAT rule on the vfw-A, and the destination IP address of the traffic whose destination address is the secondary IP will be translated into the IP address of web-server 10.0.2.209.

Command:

```
SG-6000 (M) (config-vrouter)# dnatrule from any to 10.0.1.1.242
service any trans-to 10.0.2.209
```

3. Configure a security policy rule on vfw-A that allows all traffic to pass.

Command:

```
SG-6000 (M) (config-policy)# rule from any to any service any
permit
```

4. After the configurations, web-server will not need to be bound with the elastic IP. The intranet address of web-server will be translated to the secondary IP of the vfw_service_net subnet of CloudEdge through DNA T rules, and Internet users can access the server by accessing the public address of secondary IP. At the same time, the source IP address of the traffic sent by web-server to Internet will also be translated to the Secondary IP address of CloudEdge through SNAT rules, so as to protect web-server against external attacks.

Results

When the master device vfw-A fails, the backup device vfw-B will automatically switch to the master device. The secondary IP, routing, information of security policy, source NAT and destination NAT on

the original master device will be switched automatically without manual reconfiguration, and the communication will not be affected, thus realizing a high reliable security guarantee for cloud servers.

About how to use StoneOS, refer to StoneOS related documents ([click here](#)).


Deploy CloudEdge through Amazon VPC Ingress Routing

Scenarios Introduction

A cloud server "Web-server" has been deployed on the AWS platform in a company. The VPC and subnet of the server are as follows:

- VPC(VPC1): 10.0.0.0/16
- Subnet 0 (Internal Subnet1) : 10.0.2.0/24
- Web-server IP: 10.0.2.254, (EIP) :52.83.163.91

Now we need to deploy a CloudEdge virtual firewall, and through Amazon VPC ingress routing, we can provide security protection for the cloud server "Web server". According to this scenario, the deployed network topology and routing plan are as follows:

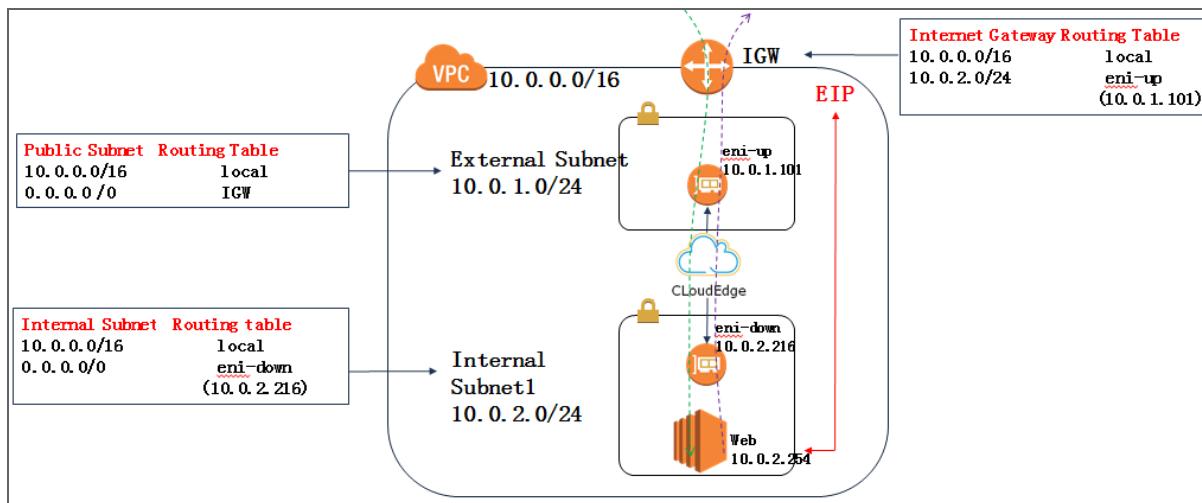

Deployment Steps

Step 1: Creating VPC and Subnet

Log in to the AWS console ([click here](#)) with your AWS account to create the subnet (External Subnet: 10.0.1.0/24) in the VPC1. For details, see [Adding subnets into VPC](#). After the creation, the VPC and subnet on the AWS are as follows:

- VPC(VPC1): 10.0.0.0/16
- Subnet 0 (Internal Subnet1) : 10.0.2.0/24
- Subnet 1 (External Subnet) : 10.0.1.0/24
- Web-server IP: 10.0.2.254 , EIP:52.83.163.91

Step 2: Creating EC2 Instances

Create one CloudEdge instance on AWS, and configure network interface 1 as Subnet Subnet1 (External Subnet) : 10.0.1.0/24, network interface 2 as Subnet 0 (Internal Subnet1) : 10.0.2.0/24 . For details , refer to [Deploying CloudEdge on AWS](#).


Step 3: Creating and Enabling Internet Gateway

Create an Internet gateway for instances in a VPC to communicate with the Internet. For details, take the following steps:

1. In the VPC Dashboard, select **Internet Gateway**, and click **Create internet gateway**.
2. In the <Create internet gateway> page, type the tag "test_IGW".
3. Click **Create** to save the above configurations.
4. In the Internet gateway list, select the **test_IGW** item. Then click the **Actions** drop-down list, select **Attach to VPC**, and select "VPC1" created in step 1 .


Step 4: Creating Internet Gateway Route Table

1. In the VPC Dashboard, select **Route Tables**, and click **Create route table** to create "Internet Gateway Routing Table" in the VPC1.
2. In the routing table list, select the **Internet Gateway Routing Table** created in the previous step, then click the **<Routes>** tab at the bottom of the page, and then click the **Edit routes**.

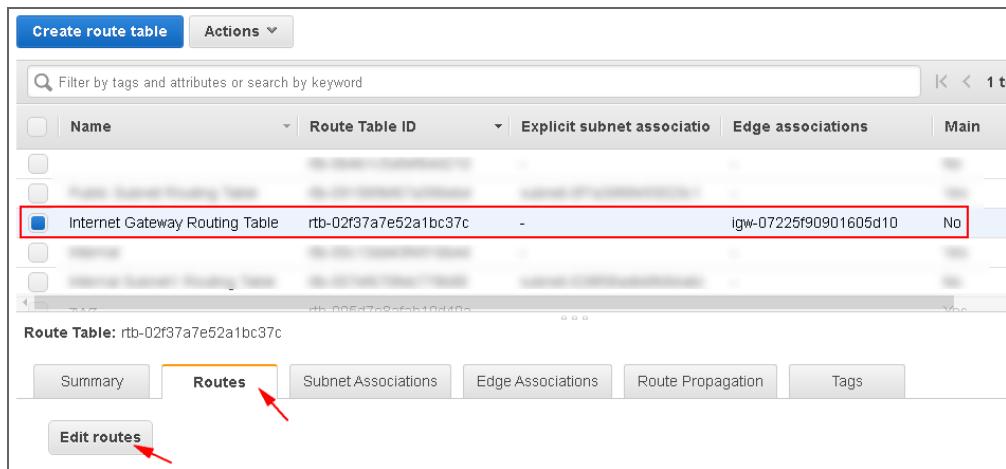

The screenshot shows the AWS VPC Route Tables list. A table row for the "Internet Gateway Routing Table" is selected and highlighted with a red box. The table columns include Name, Route Table ID, Explicit subnet association, Edge associations, and Main. Below the table, a sub-section titled "Route Table: rtb-02f37a7e52a1bc37c" is shown with tabs for Summary, Routes, Subnet Associations, Edge Associations, Route Propagation, and Tags. The "Routes" tab is selected and highlighted with a red box. A red arrow points to the "Edit routes" button at the bottom of this section.

3. In <Edit routes> Page, click **Add route** to add a route whose next hop to subnet 10.0.2.0/24 is the interface 1 (10.0.1.0/24) of CloudEdge .

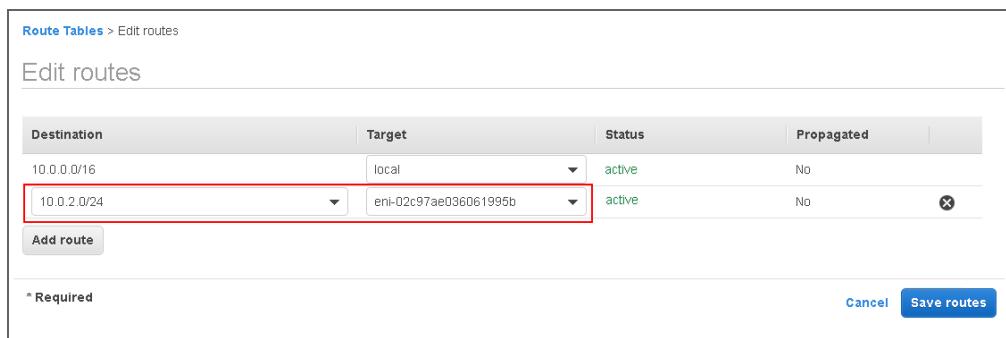

The screenshot shows the "Edit routes" page for the Internet Gateway Routing Table. It displays a table of routes. The first route has a Destination of 10.0.0.0/16 and a Target of "local", with Status "active" and Propagated "No". The second route has a Destination of 10.0.2.0/24 and a Target of "eni-02c97ae036061995b", with Status "active" and Propagated "No". A red box highlights the "Add route" button. The table rows for the 10.0.2.0/24 route and its target are also highlighted with red boxes. At the bottom of the page, there are "Cancel" and "Save routes" buttons, with "Save routes" highlighted with a red box.

- Click the < Edge Association > tab ,and then click the **Edit Edge Association** , then select the created IGW (test-igw) for binding.

Internet gateways	ID	State	VPC	Owner
igw-07225f90901605d10 test-IGW	attached	vpc-07ae10f3b719a4d4d	157574265113	

Step 5: Creating Public Subnet Route Table

- In the VPC Dashboard, select **Route Tables**. Click **Create route table**, and create " Public Subnet Routing Table" in the VPC1 .
- In the routing table list, select the **Public Subnet Routing Table** created in the previous step, then click the <Routes> tab at the bottom of the page, and then click the **Edit routes** .
- In <Edit routes> Page, click **Add route** to add a route whose next hop to subnet 0.0.0.0/0 is the IGW(test_IGW) .

Destination	Target	Status	Propagated
10.0.0.0/16	local	active	No
0.0.0.0/0	igw-07225f90901605d10	active	No

- Click the <Subnet Associations> tab ,and then click the **Edit Subnet Associations** , then select subnet 1 (External Subnet) : 10.0.1.0/24.for binding.


The screenshot shows the AWS VPC Route Table list. At the top, there is a 'Create route table' button and an 'Actions' dropdown. Below is a search bar and a table with columns: Name, Route Table ID, Explicit subnet association, Edge associations, and Main. One row is selected, highlighted with a red box, showing 'Public Subnet Routing Table', 'rtb-091589bf67a396eb4', 'subnet-0f7a26f6fe93023c1', 'No', and 'Yes'. At the bottom of the page, there are tabs for 'Summary', 'Routes', 'Subnet Associations' (which is highlighted with a red arrow), 'Edge Associations', 'Route Propagation', and 'Tags'. A red box also highlights the 'Edit subnet associations' button at the bottom of these tabs.

Step 6: Creating Internal Subnet Route Table

- In the VPC Dashboard, select **Route Tables**.Click **Create route table**, and create " Internet Gateway Routing Table" in the VPC1 .
- In the routing table list, select the **internal Gateway Routing Table** created in the previous step, then click the <Routes> tab at the bottom of the page, and then click the **Edit routes** .
- In <Edit routes> Page, click **Add route** to add a route whose next hop to subnet 0.0.0.0/0 is the interface 2 (10.0.2.0/24) of CloudEdge
- Click the <Subnet Associations> tab ,and then click the **Edit Subnet Associations** , then select subnet 0 (Internal Subnet1) : 10.0.2.0/24 for binding.

Step 7: Changing Source/Dest. Check


1. Select the **Services > Compute > EC2**, and in the navigation, select **INSTANCES > Instances**, and select the CloudEdge instance (test_EC2) created in the step 1, and in the details page below, click the links of network interfaces 1 and 2.

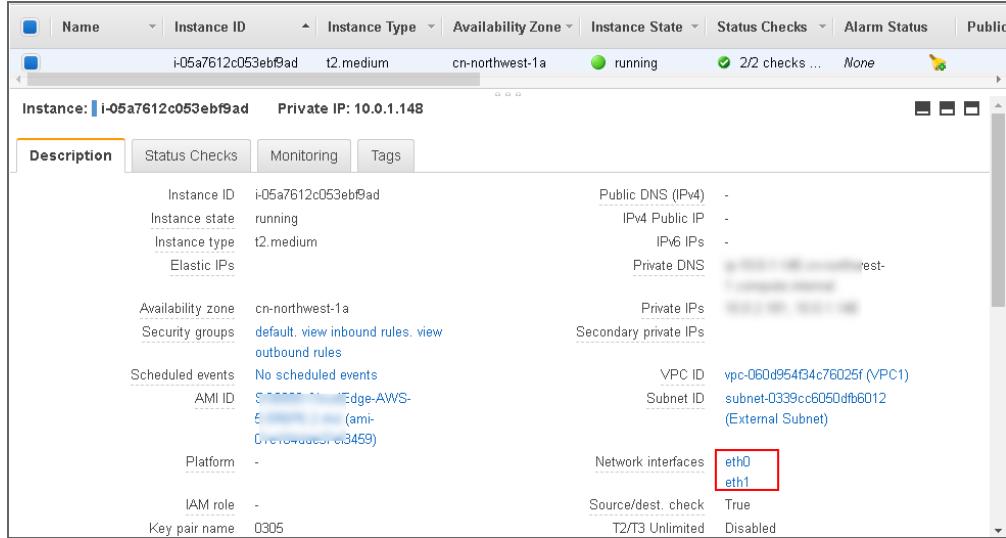

Network interface	Source/dest. check	Status
eth0	True	Enabled
eth1	True	Disabled

2. Or select **Services > Compute > EC2**, and then in the navigation bar, and select **NETWORK & SECURITY > Network Interfaces**. Find the network interface 1 (subnet 10.0.1.0 / 24) and network interface 2 (subnet 10.0.2.0 / 24) of the CloudEdge instance (test-EC2) created in step 1.

3. Select two network interfaces respectively, and then click **Change Source/Dest. Check** in the "actions" drop-down menu, and then disable the check.

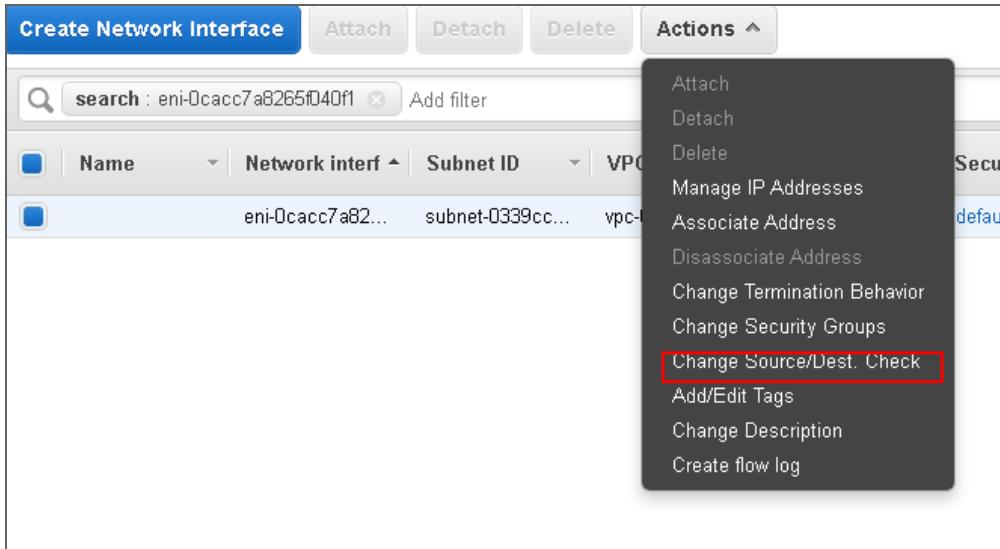

Step 8 : Allocating Elastic IP Addresses

1. In EC2 management console, click **Elastic IPs** from the left navigation, and allocating elastic IP for CloudEdge instance. For details , refer to "[Allocating Elastic IP Addresses](#)" on Page 108
2. In CloudEdge default settings, only the access to eth0. is enabled. So, we will use SSH connection to visit eth0 before we can visit its other ports. For details , refer to [Visiting CloudEdge](#) .

Step 9 : Results

At the beginning, you can access the Web UI interface of the CloudEdge through the elastic IP of itself, which is successful; And you can access web server through the elastic IP of the itself, which is unsuccessful. Continue to configure the policy on CloudEdge for result verification :

- After creating a policy on CloudEdge that allows all the released traffic to pass, the Internet users can normally access the web server through elastic IP; And after configuring a policy that prevents the Internet users from accessing the web server, the Internet users can no longer access the web


server. It indicates that the incoming traffic can be safely controlled by the CloudEdge.

- After creating a policy on CloudEdge that allows all the released traffic to pass, the web address of the extranet can be visited on the web server successfully. And after configuring a policy to prevent the web server VM from accessing the extra-net, the extra-net can be no longer visited on the web server. It indicates that the traffic in the out direction can also be protected by CloudEdge.

Notes: the eth0/1 (belongs to Internal Subnet1 of the service network) can not obtain an IP address automatically. Therefore, you need configure a private IP address assigned by the AWS platform for eth0/1 on the CloudEdge Console before verifying the result. You can view the private IP address on the cloud instance details page.

To create a policy rule that allows all traffics from and to all directions:

1. Select **Policy > Security Policy**.
2. Create a security policy that allows all types of traffic (every field is set to **Any**).

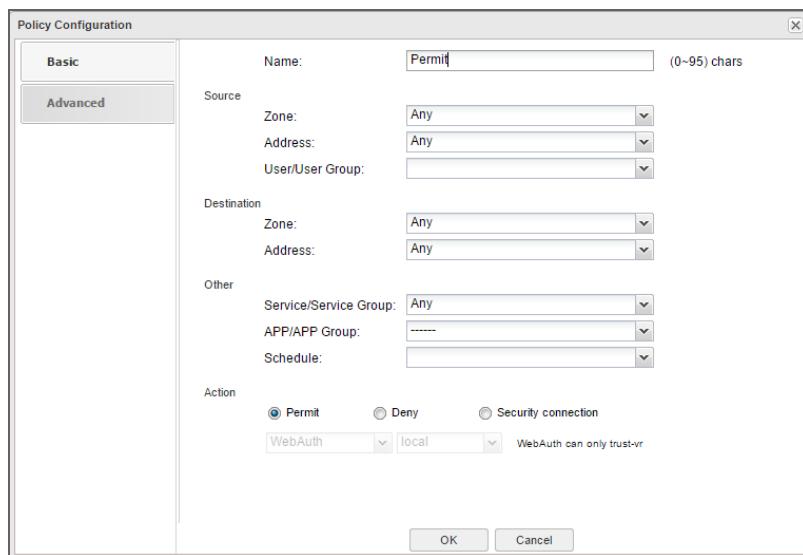

3. Click **OK**.


4. The policy of forbidding Internet users to access web server and web server to access Internet can be configured according to the actual IP address.

About how to use StoneOS, refer to StoneOS related documents ([click here](#)).

Deploying CloudEdge on Azure

Typical Scenarios

This guide describes how to deploy CloudEdge virtual firewall (vFW) on Azure as Internet gateway. In this example, CloudEdge is deployed as a router of Azure Vnet(10.0.0.0/8) which contains a subnet (10.0.0.0/24) , and it controls the outbound and inbound traffic of the subnet. The following is the network topology:

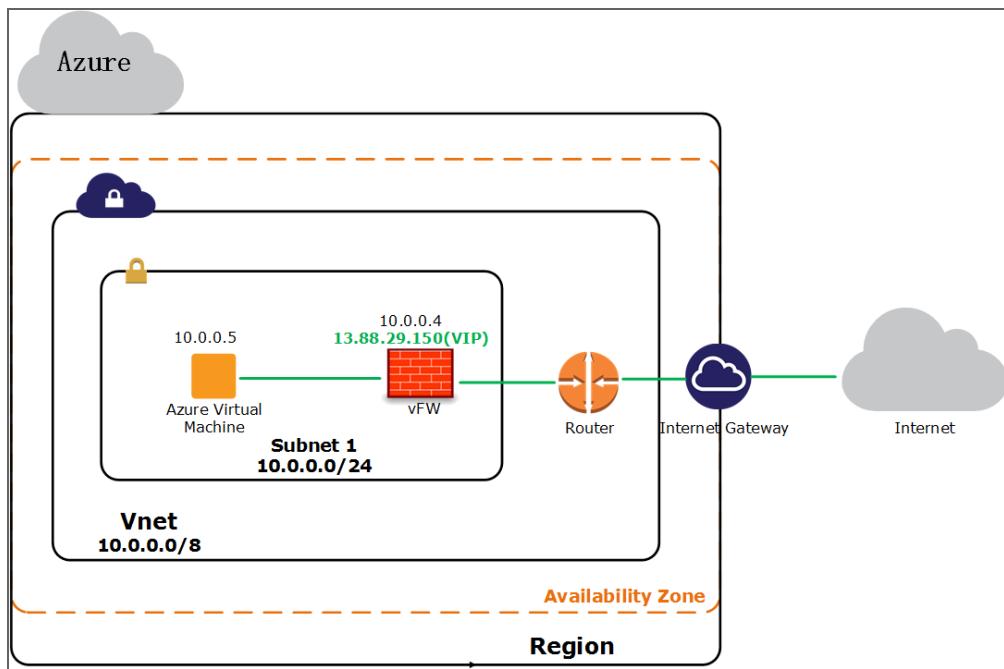


Installing CloudEdge


CloudEdge will be running in a virtual machine of the Azure Vnet. After installation, you will have a running virtual StoneOS system which you can visit via CLI and WebUI.

Step 1: Purchasing CloudEdge and Creating a virtual machine


1. Log into Microsoft Azure. Select **Virtual machines** in the left navigation pane, and then click **+New** on the top of the right page.

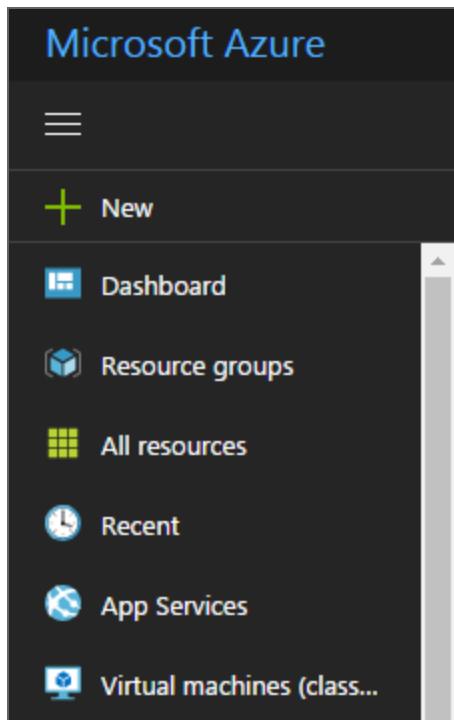

2. Type "hillstone" in the Search box. Select the CloudEdge version you need in the searching results list, and then click **Create** in the pop-up window.

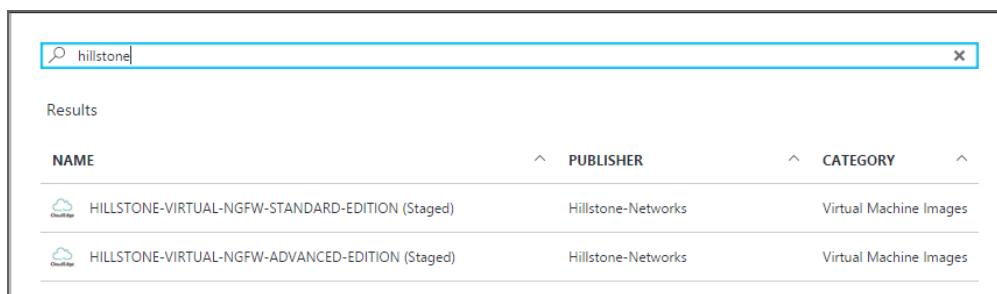

3. In the Basics page, configure the settings as follows, and then click **OK**.

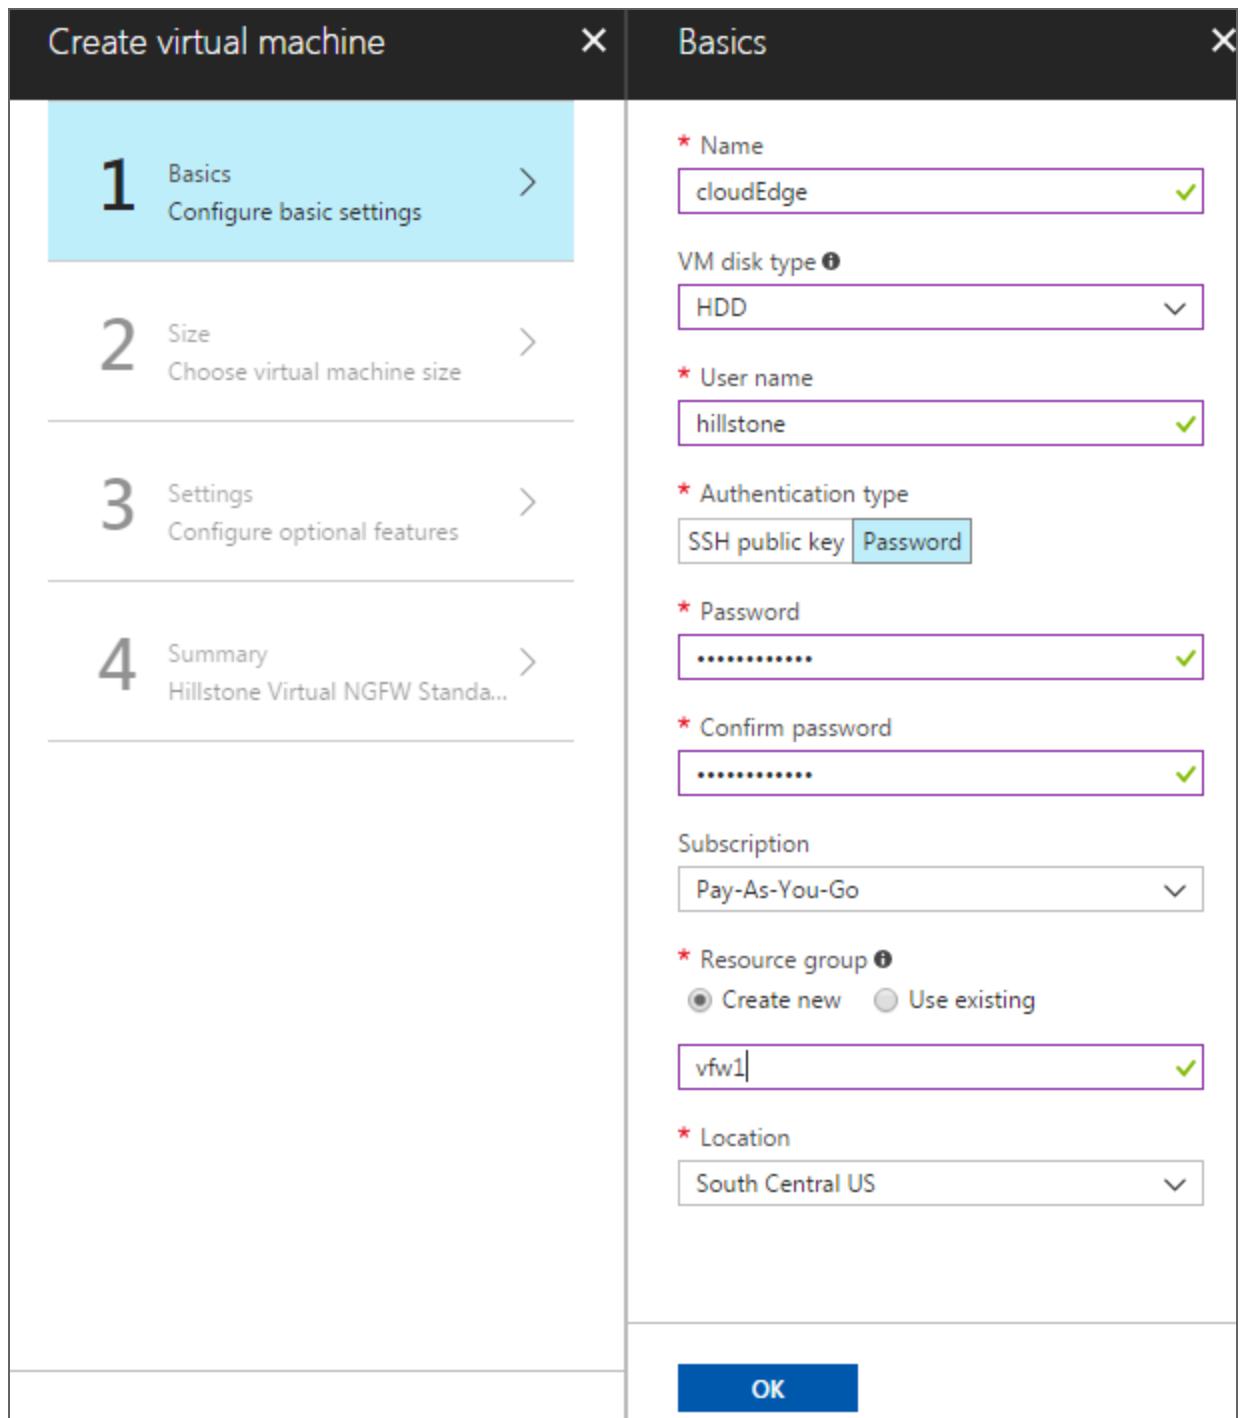


Notes:

- If you specify the username as hillstone and change the password, the system will update the password; if the new created username is not hillstone, the system will update the password which belongs to the hillstone user to the new, and a new user will be created, the password will be the same as hillstone user.
- If a resource group has been created , you can use the existing one; otherwise, you can create a new resource group.

4. In the Size page, choose virtual machine size according to your CloudEdge version, and then click

Select.

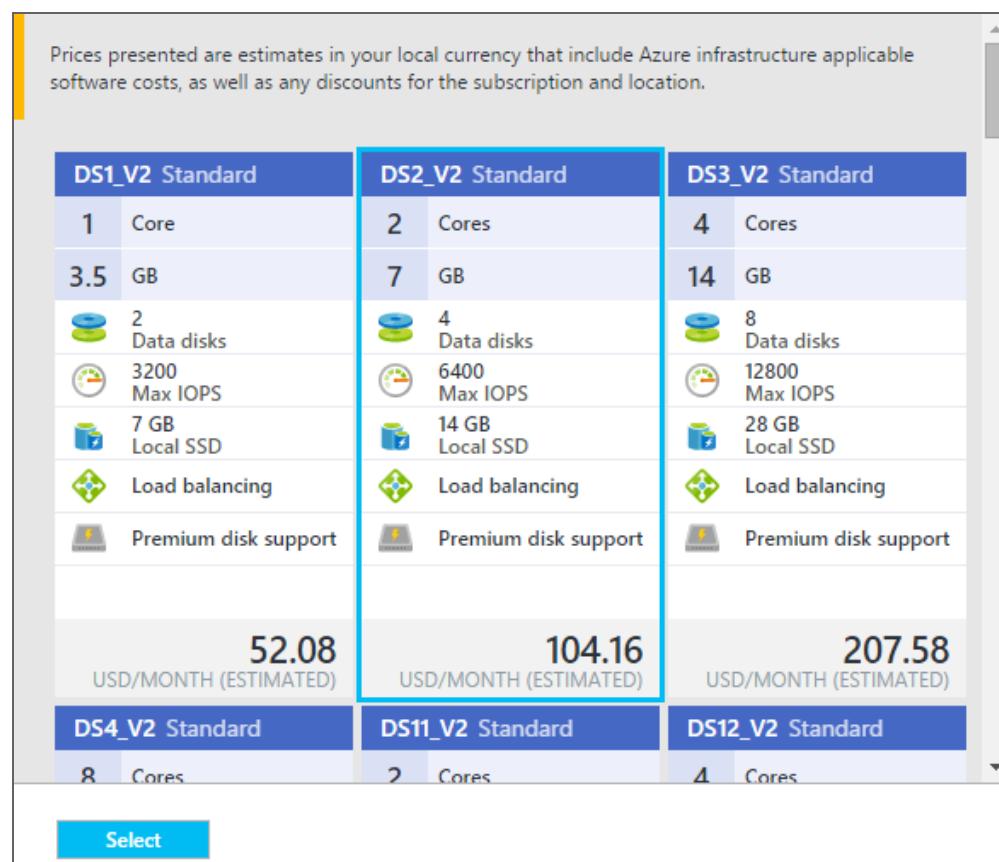


Prices presented are estimates in your local currency that include Azure infrastructure applicable software costs, as well as any discounts for the subscription and location.

DS1_V2 Standard	DS2_V2 Standard	DS3_V2 Standard
1 Core	2 Cores	4 Cores
3.5 GB	7 GB	14 GB
 2 Data disks	 4 Data disks	 8 Data disks
 3200 Max IOPS	 6400 Max IOPS	 12800 Max IOPS
 7 GB Local SSD	 14 GB Local SSD	 28 GB Local SSD
 Load balancing	 Load balancing	 Load balancing
 Premium disk support	 Premium disk support	 Premium disk support
52.08 USD/MONTH (ESTIMATED)	104.16 USD/MONTH (ESTIMATED)	207.58 USD/MONTH (ESTIMATED)
DS4_V2 Standard	DS11_V2 Standard	DS12_V2 Standard
8 Cores	2 Cores	4 Cores

Select

5. In the Settings page, configure the settings as follows, and then click **OK**.

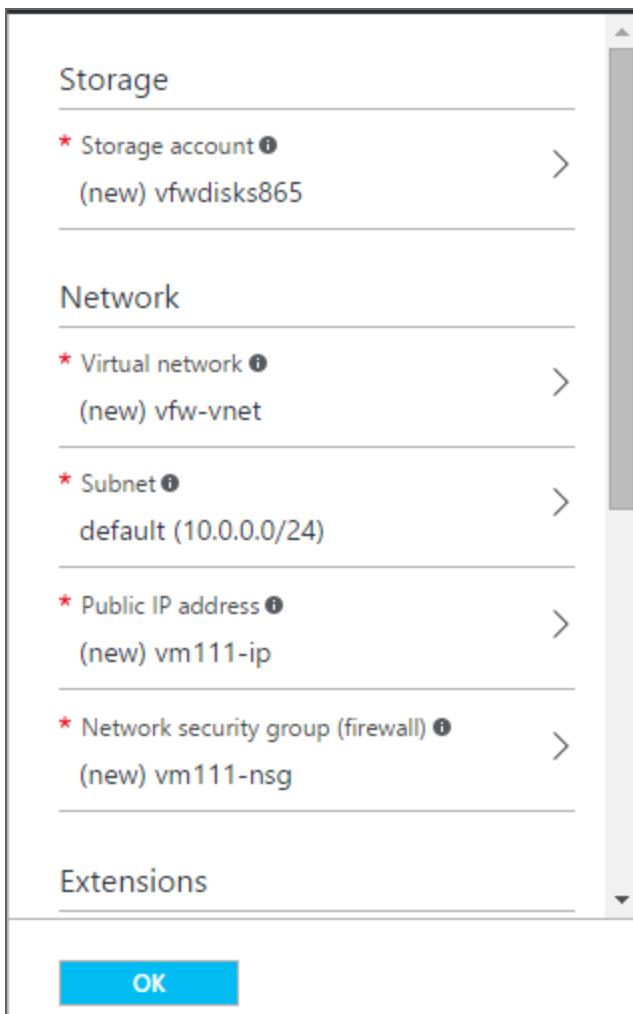


The above items will be created or allocated automatically, including storage account, virtual network, public IP address, network security group and diagnostics storage account . If you want to edit them, click  in the right side.

6. Check the detailed configurations in the Summary page, and then click **OK**.

7. Click **Purchase** to pay for the virtual machine in the Buy page.

After a few minutes, the virtual machine will be deployed successfully.

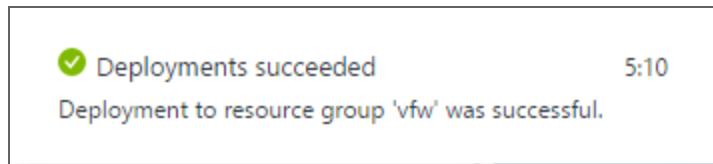

Step 2: Viewing Public IP Address

In the pop-up new virtual machine window, you can view the public IP address of CloudEdge in the Essentials tab.

Essentials ^	
Resource group vfw	Computer name vm111
Status Running	Operating system Linux
Location West US	Size Standard DS2 v2 (2 cores, 7 GB memory)
Subscription name Pay-As-You-Go	Public IP address/DNS name label 13.88.29.150/<none>
Subscription ID d23e3fa9-048b-4423-9bbc-b5b85f969278	Virtual network/subnet vfw-vnet/default

Step 3: Visiting CloudEdge

After virtual machine is created successfully, CloudEdge will be started automatically.

To Login CloudEdge via SSH2

1. Open a remote terminal login software. We will use SecureCRT as an example.
2. Click **File > Quick Connect**, and then select **SSH2** in Protocol drop-down menu.
3. Enter the public IP address in Hostname text box.

4. Enter username(azure).
5. Click **Connect** to connect this session.
6. Enter password(The new login password). Press the **Enter** key to log in.

To Login CloudEdge via HTTPS

1. Open the browser and enter <https://13.88.29.150> in the address bar.
2. Enter the username(azure) and password(The new login password) on the login page.
3. Press the **Enter** key to log in.

Step 4: Purchasing and Applying for License Software


After you purchased CloudEdge, CloudEdge Licenses are also needed, which ensure CloudEdge run normally in Azure. Contact Hillstone salesperson to buy the license you need. To install the license in CloudEdge, see "["Installing License" on Page 25](#)

Deploying CloudEdge on Alibaba Cloud

Preparation

- Create an VPC as follows:
 - VPC:192.168.0.0/16
 - Subnet 0: 192.168.1.0/24
- Create a security group, and configure security group rules

After CloudEdge is deployed, the network topology is:

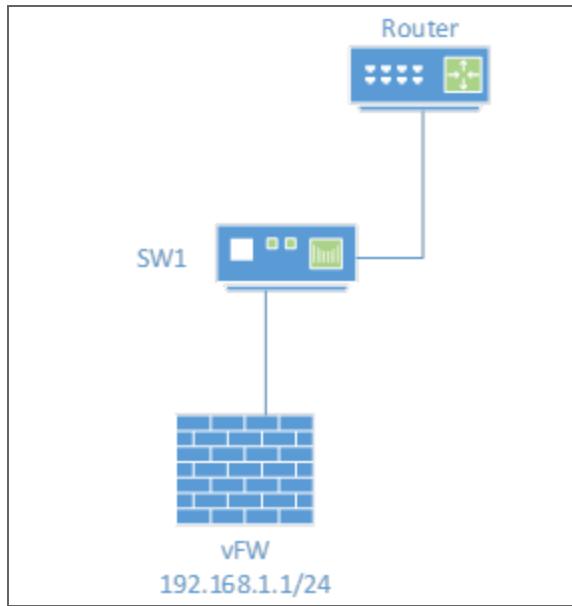


Installing vFW

CloudEdge will be installed with an ECS instance in VPC.

Step 1: Purchase vFW Images and Create an ECS Instance

1. Log into the Alibaba Cloud marketplace, enter a keyword such as "Hillstone" in the search box at the upper-right corner. Select the vFW version you need in the search results list.
vFW image version includes the following two types: pay-on-demand and BYOL(Buy Your Own License).

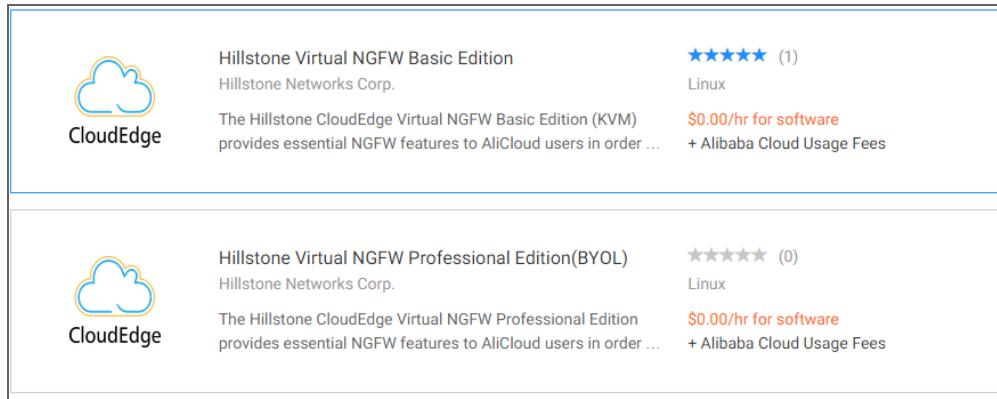

2. Browse the detailed information about the product, then click **Choose Your Plan** to set specification parameter of ECS instance.
3. Click the **Quick Buy** tab.
4. Choose image version in VERSION area, the latest version is recommended.
5. Choose the physical location of the ECS instance in REGION area.
6. Choose the ECS instance type you need in ECS INSTANCE TYPE area, the detailed instance specification will be displayed on the right.
7. Select VPC network type in NETWORK area.
If you don't have a VPC currently, click **Create VPC** below.
8. Click **Agree Terms and Buy Now** to pay for the ECS instance.
Wait for a moment, ECS instance can be created successfully.

Step 2: View initial configuration of vFW

1. After an ECS instance is created successfully, vFW will start automatically.
2. Select **Elastic Compute Service** in the left navigation pane, then click **Instances** item on the left. Instance list will be shown in the right page.
3. Click **More** in Action column of ECS instance which vFW is running in. Then select **Reset Password** to reset the login password of vFW.
Enter a new login password and confirm password, then click **Submit**. The default login password (hillstone) will be modified so as to enhance the security of the system.
4. Click **More** in Action column of ECS instance which vFW is running in. Then select **Connect to Management Terminal** to login with console.
AlibabaCloud will provide an initial password to login management terminal, make sure keep this password in mind.
5. Enter the initial password in the pop-up dialog box.
If you need to modify the password, please click **Modify management terminal password**.
6. Enter the default username(hillstone) and new login password in CLI.
By default, the eth0/0 interface can get the IP address from DHCP server automatically, and the system can get the default route. You can execute the **show interface** command and **show IP route** command to view.

```

H:physical state:A:admin state:L:link state:P:protocol state:U:up:D:down:R:ha ke
ep up
=====
Interface name      IP address/mask      Zone name      H A L P MAC address
Description

-----
ethernet0/0          192.168.1.1/24      trust        U U U U 0016.3e0e.079d
-----
vswitchif1           0.0.0.0/0          NULL         D U D D 001c.8202.5512
-----
=====

Codes: K - kernel route, C - connected, S - static, Z - ISP, R - RIP, O - OSPF,
      B - BGP, D - DHCP, P - PPPoE, H - HOST, G - SCUPN, U - UPN, M - IMPORT,
      I - ISIS, Y - SYNC, L - llb outbound, > - selected first nexthop, * - FIB
      route, b - BFD enable


Routing Table for Virtual Router <trust-vr>
=====
S>* 0.0.0.0/0 [1/0/1] via 192.168.1.253, ethernet0/0
      [1/0/1] via 120.25.167.247 inactive
C>* 192.168.1.0/24 is directly connected, ethernet0/0
H>* 192.168.1.1/32 [0/0/1] is local address, ethernet0/0
=====


```

Step 3: Set default route for VPC

1. In the View Console page of Alibaba Cloud, click **Products & Services** at the upper-left corner, then select **Virtual Private Cloud**.
2. Select **VPC** in the left navigation pane, then click **Manage** in Action column of VPC which the vFW belongs to.

3. Select **VRouter** in the left navigation pane, then click **Add route entry** in the upper-right corner of the VRouter info page.

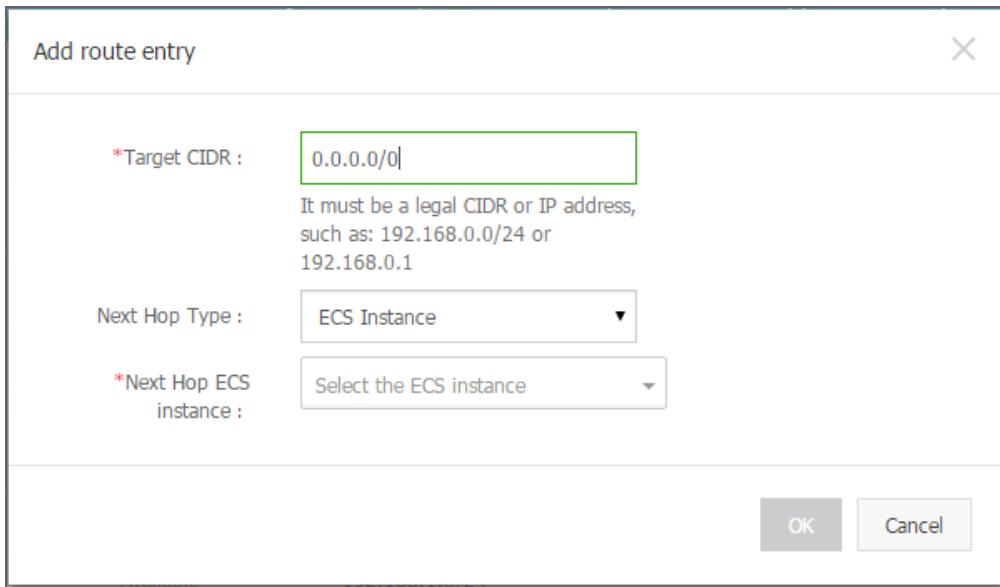

4. Add a default route entry for VPC, then click **OK**.

- Target CIDR: Specifies the destination IP address to 0.0.0.0/0.
- Next Hop Type: Specifies the next hop type to ECS instance.
- Next Hop ECS Instance: Specifies the ECS Instance which vFW belongs to.

Step 4: Purchase and Apply for License Software

This step is only applicable to the BYOL type of products.

After you purchased BYOL type product, Hillstone next generation virtualization firewall License is also needed, which ensures vFW run normally in Alibaba Cloud. Please contact the Hillstone customer service representatives to get the license software. To install the license software in vFW, see "["Installing License" on Page 25](#)

Step 5: Visit the vFW


If you need to visit the vFW from the Internet, the ECS security group should include rules which allow the public network to visit the private network.

To Login vFW via SSH2


Notes: When you login vFW via SSH2 through SecureCRT or other tools, the 3DES encryption algorithm should be moved to the top. Otherwise, the system will be unable to be connected and the following message will not be prompted: Invalid packet header. This probably indicates a problem with key exchange or encryption.

1. Open the remote terminal login software. We take SecureCRT as an example.
2. Click **File > Quick Connect**, then select **SSH2** in Protocol drop-down menu.
3. Enter the elastic IP address in Hostname text box and click **Connect**.

4. Right-click the new session in Session Manager, then select **Properties**.

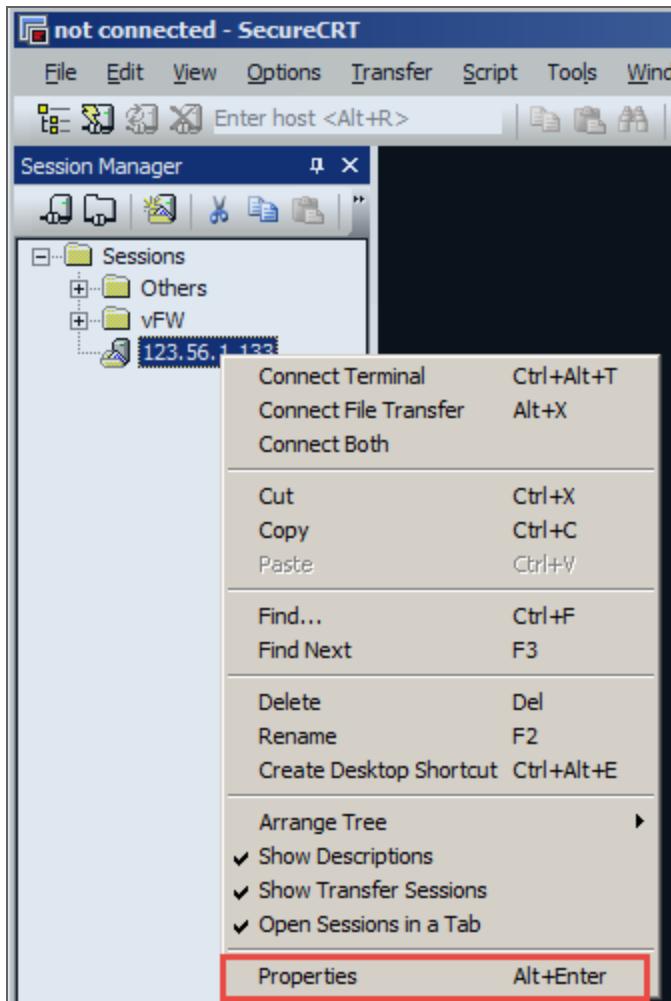

5. In the pop-up dialog, select the **Advanced** item on the left, then move the 3DES algorithm to the top.

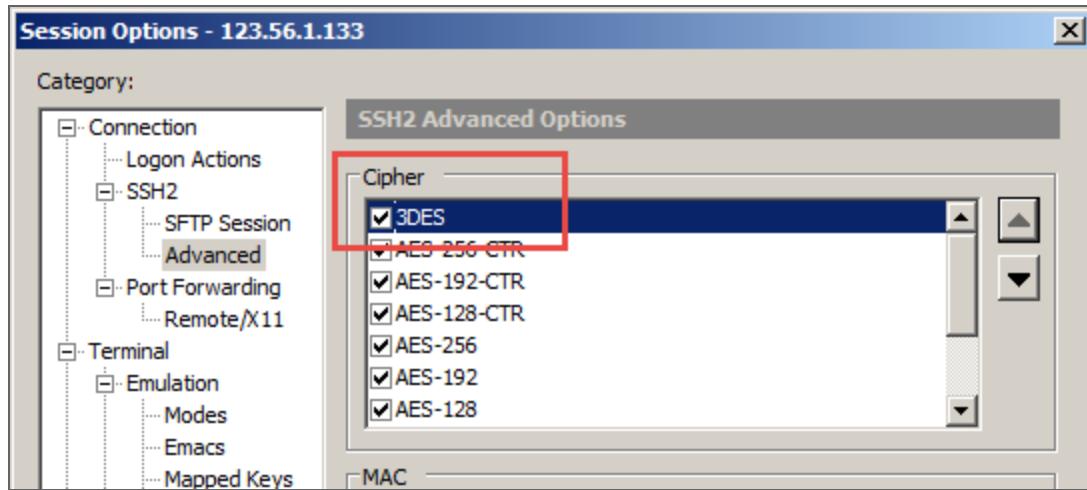

6. Click **OK**, and connect this session.
7. Enter username(hillstone) and press the Enter key.
8. Enter password(The new login password). Press the Enter key to log in.


To Login vFW via HTTP

1. Open the browser and enter the elastic IP of vFW.
2. Enter the username(hillstone) and password(The new login password) on the login page.
3. Press the Enter key to log in.

Deploying HA Scenarios of CloudEdge via HAVIP on Alibaba Cloud

HA Typical Scenarios

The following topology introduces how to deploy HA scenarios of CloudEdge on Alibaba Cloud. After the deployment, vFW-A will be selected as the master device for forwarding traffic and vFW-B will be selected as the backup device. vFW-A will synchronize its configurations and status data to the backup device vFW-B. When the master device vFW-A failures to forward traffic, the backup device vFW-B will switch to the master device to forward traffic without interrupting user's communication, which can ensure network stability.

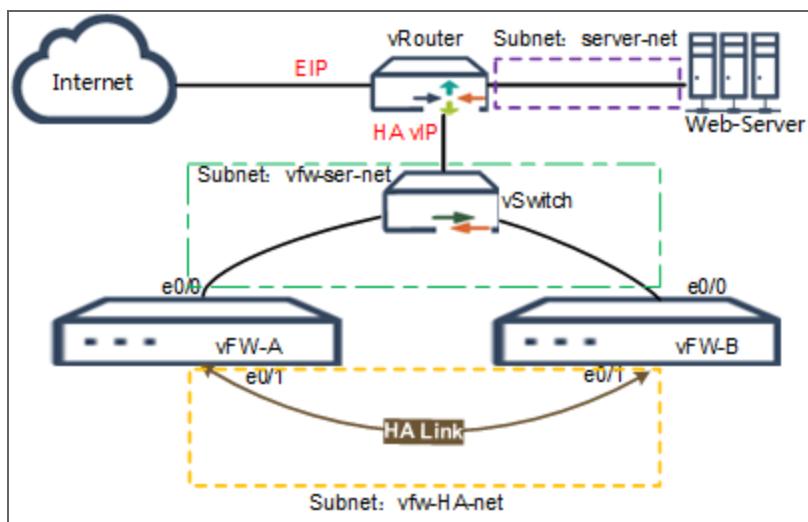

According to the topology, you need to configure the followings on Alibaba Cloud:

- 1 Virtual Private Cloud (VPC).
- 3 VSwitches (Subnet). vfw-ser-net and vfw-ha-net subnets, which are used by the CloudEdge instance. (Tips: You need to add another network as HA subnet when creating the CloudEdge instance); subnet for Web-Server: server-net.

- 3 Elastic Compute Service (ECS) Instances. vFW-A and vFW-B instances for HA deployment; one instance for Web-Server. Three instances need to be on the same VPC.
- 1 Elastic IP (EIP) , which is used to communicate in the Internet.
- 1 HAVIP, which should select the same subnet as the "vfw_ser_net" of the CloudEdge instance.

Deploying HA Scenarios of CloudEdge on Alibaba Cloud

Step 1: Create VPC

1. Log in the Alibaba Cloud , enter the Console page, and select “Virtual Private Cloud >VPC >VPCs” on the left.

2. Click **Create VPC**, and the <Create VPC> dialog box will pop up. Configure as the following example:

Create VPC

VPC

Region
China North 2 (Beijing)

● Name ?
CloudEdge-vpc 13/128

● Destination CIDR Block ?
10.0.0.0/8

⚠ The CIDR cannot be changed once the VPC is created.

Description ?

0/256

VSwitch

● Name ?
vpc-switch 10/128

● Zone ?
China North 2 Zone A

Zone Resource ?
ECS RDS SLB

● Destination CIDR Block
10 168 0 0 / 24

⚠ The CIDR cannot be changed once the VPC is created.

Number of Available Private IPs
252

In the <Create VPC> Dialog Box, Configure the options as follows:

Option	Description
VPC Name	Specifies the name of VPC as "CloudEdge-vpc".
Destination	Specifies Destination CIDR Block as 10.0.0.0/8.

Option	Description
CIDR Block	
VSwitch	Specifies the name of VSwitch as "vpc-switch".
Name	
zone	China North 2 Zone A
Destination	10.168.19.0/24
CIDR Block	

3. Click **OK**.

Step 2: Create VSwitches

1. Select "Virtual Private Cloud >VPC >VSwitches", click **Create VSwitch** , and the <Create VSwitch> dialog box appears, configure the following options:

Create VSwitch

• **VPC**
CloudEdge-vfw/vpc-2zen3hkryypo44spjxeq4

Destination CIDR Block
10.0.0.0/8

• **Name** ?
vfw-ser-net 11/128 ✓

• **Zone** ?
China North 2 Zone A

Zone Resource ?
ECS ✓ RDS ✘ SLB ✓

• **Destination CIDR Block**
10 . 168 . 10 . 0 / 24

⚠ The CIDR cannot be changed once the VPC is created.

Number of Available Private IPs
252

Description ?
0/256

2. Repeat the above steps to continue configuring the switch **vfw-HA-net** and **server-net**.

Note: The three switches should be set in the same zone.

Configure these three switches as follows:

Option	Description
vfw-HA-net	
VPC	Select the VPC “CloudEdge-vpc” .
Name	Specifies the name of VSwitch as “vfw-HA-net” .
Zone	China North 2 Zone A

Option	Description
Destination	10.168.1.0/24
CIDR Block	
vfw-ser-net	
VPC	Select the VPC “CloudEdge-vpc” .
Name	Specifies the name of VSwitch as “vfw-ser-net” .
Zone	China North 2 Zone A
Destination	10.168.10.0/24
CIDR Block	
server-net	
VPC	Select the VPC “CloudEdge-vpc” .
Name	Specifies the name of VSwitch with “server-net” .
Zone	China North 2 Zone A
Destination	10.168.100.0/24
CIDR Block	

Step 3: Create CloudEdge Instances

1. Create instance vFW-A and instance vFW-B,for HA deployment. For detailed steps, refer to ["Deploying CloudEdge on Alibaba Cloud" on Page 160](#)

Requirements:At least 4 vCPU and 8 GB memory are needed for per instance. To build the HA network for one instance, besides the default network, there should be one more network, which should be choose with the different switch from the default network .

The HA Instances Configuration

Option	Description
vFW-A	
Instance Name	Specifies the name of Instance as "vFW-A".
Instance Type	Select the “ecs.hfc5.xlarge (4-core, 8GB, High Frequency Compute hfc5) ” .
Network Interface	Default Network Interface: VPC: CloudEdge-vpc, VSwitch:vfw-ser-net. Add Network Interface : VPC: CloudEdge-vpc, VSwitch:vfw-HA-net.
vFW-B	
Instance Name	Specifies the name of Instance as "vFW-B".
Instance Type	Select “ecs.hfc5.xlarge (4-core, 8GB, High Frequency Compute hfc5) ” .
Network Interface	Default Network Interface: VPC: CloudEdge-vpc, VSwitch:vfw-ser-net. Add Network Interface: VPC: CloudEdge-vpc, VSwitch:vfw-HA-net.

2. Create instance Web-Server. For detailed steps, refer to ["Deploying CloudEdge on Alibaba Cloud" on Page 160](#).

The network must be selected with the different network from the vFW-A and vFW-B.

Web-server Configuration

Option	Description
Instance Name	Specifies the name of Instance as "Web-Server" .
Instance Type	Select the " ecs.hfc5.xlarge (4-core, 8GB, High Frequency Compute hfc5) ".You can select flexibly according to actual needs.
Network Interface	Default Network Interface: VPC: CloudEdge-vpc, VSwitch:server-net.

Steps 4: Create HAVIP Address

1. Log in Alibaba Cloud and enter the Console page, and select " Virtual Private Cloud >HAVIP Addresses " , click **Create HAVIP Address**, and the <Create HAVIP Address>dialog will pop up.

The dialog box is titled "Create HAVIP Address". It contains the following fields:

- Region:** China North 2 (Beijing)
- VPC:** (radio button selected)
- VPC dropdown:** vpc-2zen3hkryypo44spjxeq4
- VSwitch:** (radio button selected)
- VSwitch dropdown:** vsw-2zej8yek0ga1kti0gg3i
- VSwitch CIDR Block:** 10.168.10.0/24
- Private IP Address:** 10.168.10.0 (displayed as a dotted quad IP address)

2. Click **OK**. And then click "Manage" in the list and < HAVIP Details> will pop up, bind vFW-A and vFW-B in the binding resource diagram. The EIP shoud be bound so that the the HA device can be visited through the Internet .

Step 5: Configure HA on CloudEdge.

1. Configure the IP address of ethernet0/0 and enable the HTTPS and SSH management on the vFW-A, the master device of HA.

```
SG-6000# configure
```

```
SG-6000(config)# interface ethernet0/0
```

```
SG-6000(config-if-eth0/0)# no ip address dhcp///The eth0/0 interface obtains the address and the default route through DHCP by default. Here, the DHCP function of the eth0/0 interface is disabled.
```

```
SG-6000(config-if-eth0/0)# no zone///Temporarily cancel the security zone of the e0/0 interface. Otherwise, the eth0/0 port local attribute cannot be removed.
```

```
SG-6000(config-if-eth0/0)# no local///By default, the local property of eth0/0 is enabled. If the local property is disabled, the configuration of eth0/0 will be synchronized to the backup device when the HA is configured.
```

```
SG-6000(config-if-eth0/0)# zone untrust///Add the eth0/0 interface to the untrust security zone.
```

```
SG-6000(config-if-eth0/0)# ip address 192.168.10.200/24///This address should be configured as the private IP of HAVIP on Alibaba Cloud.
```

```
SG-6000(config-if-eth0/0)# exit
```

```
SG-6000(config)# ip vroute trust-vr
```

```
SG-6000(config-vrouter)# ip route 0.0.0.0/0 192.168.1.254///Configure
```

the default route.

```
SG-6000(config)# interface ethernet0/0
SG-6000(config-if-eth0/0)# manage https
SG-6000(config-if-eth0/0)# manage ssh
```

2. On vFW-A, creat a track object to monitor the status of ethernet0/0, Once the interface fails to work, the backup device will take over. At the same time, configure the interface ethernet0/1 for HA, as well as the related information of IP and MAC.

```
SG-6000#configure
```

```
SG-6000(config)# track track1 ////Create a track object with the name
"track1".
```

```
SG-6000(config-trackip)# interface ethernet0/0 weight 255 ////Monitor
the status of eth0/0 for HA.
```

```
SG-6000(config)# ha link interface ethernet0/1 ////The ethernet0/1 is
used for HA.
```

```
SG-6000(config)# ha link ip 10.168.1.10/24 ////This address is the IP
address of ethernet0/1 allocated by Alibaba Cloud platform.
```

```
SG-6000(config)# ha link mac 1st-interface-mac ////Configure the real
MAC of HA control interface as the MAC address of HA heartbeat.
```

```
SG-6000(config)# no ha virtual-mac enable ////Device will use the real
MAC address of interface for communication instead of virtual MAC.
```

```
SG-6000(config)# ha peer ip 10.168.1.11 mac 0050.56b5.b06c ////Con-
figure the IP and MAC address of vFW-B's HA interface. You can view the
MAC address via the command "show interface" on vFW-B.
```

3. On the vFW-A,configure the HA group.

```
SG-6000(config)# ha group 0 ////Add to HA group 0.
```

```
SG-6000(config-ha-group)# priority 50 //Specify the value of priority
```

The smaller the value is set, the higher the priority. The device of higher priority will be selected as the master device.

```
SG-6000(config-ha-group)# preempt 3 ////Specify the preemption time as 3 seconds.
```

SG-6000(config-ha-group)# monitor track track1 ////Add the track object in HA group.

SG-6000(config-ha-group)# exit

SG-6000(config)# ha cluster 1 ////Add the device to the HA cluster to make the HA function take effect.

4. Repeat the above steps to configure relevant information on vFW-B.

```
SG-6000# configure
SG-6000(config)# interface ethernet0/0
SG-6000(config-if-eth0/0)# no ip address dhcp
SG-6000(config-if-eth0/0)# no zone
SG-6000(config-if-eth0/0)# no local
SG-6000(config-if-eth0/0)# exit
SG-6000(config)# ha link interface ethernet0/1
SG-6000(config)# ha link ip 10.168.1.11/24
SG-6000(config)# ha link mac 1st-interface-mac
SG-6000(config)# no ha virtual-mac enable
SG-6000(config)# ha peer ip 10.168.1.10 mac 005
SG-6000(config)# ha group 0
SG-6000(config-ha-group)# priority 100
SG-6000(config-ha-group)# exit
```

```
SG-6000(config)# ha cluster 1
```

Step 6: HA Results

After completing the above configuration, the high-priority vFW-A will automatically negotiate to be the master device, and the vFW-B with low priority will become the backup device. The master device and the backup device are marked with the letter "M" and letter "B" respectively in the console.

```
SG-6000(M)(config)#  
SG-6000(M)(config)#  
SG-6000(M)(config)#  
SG-6000(M)(config)#  
SG-6000(M)(config)#  
SG-6000(M)(config)#  
SG-6000(M)(config)#  
SG-6000(M)(config)#
```

```
SG-6000(B)(config)#  
SG-6000(B)(config)#  
SG-6000(B)(config)#  
SG-6000(B)(config)#  
SG-6000(B)(config)#  
SG-6000(B)(config)#  
SG-6000(B)(config)#  
SG-6000(B)(config) # _
```

- When the two devices have been successfully negotiated, you only need to configure the master device and the configurations will automatically synchronize to the backup device.
- When vFW-A fails to forward traffic or its ethernet0/0 is disconnected, vFW-B will switch to the main device and start to forward traffic without interrupting user's communication.

Step 7: HA application

To redirect Web-Server traffic to CloudEdge in the HA deployment scenarios, configure as follows:

1. Configure the SNAT rule on the vFW-A, the master device. Change the source address of the traffic in the Web-Server segment to the IP of interface eth0/0, aka HAVIP (high available virtual IP).

Tips: The Web-Server segment "server-net" set in the Step 2 should be 10.168.100.0/24.

Command:

```
SG-6000 (M) (config-vrouter) # snatrule from 10.168.100.0/24 to  
any service any eif ethernet0/0 trans-to eif-ip mode dynam-  
icport
```


2. Map the SSH traffic whose destination address is HAVIP to the port 22 on the Web-Server.

Tips: Web-server IP address:10.168.100.113.

Command:

```
SG-6000 (M) (config-vrouter) # dnatrule from any to 10.168.10.200  
service ssh trans-to 10.168.100.113
```

3. In the VPC router of Alibaba Cloud platform , add a routing whose destination segment is 0.0.0.0/0 and the next-hop is HAVIP.

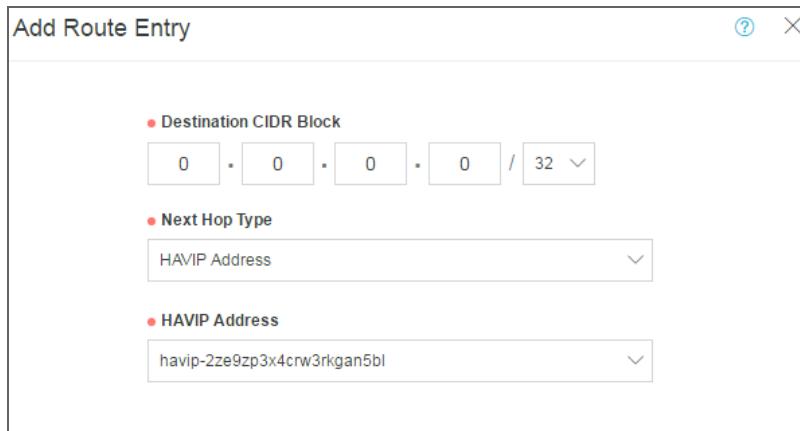

4. When all configurations have completed, the traffic of the Web-Server segment will be forwarded through the CloudEdge in the HA scenarios, and the CloudEdge will also provide security protection for Web-Server.


About how to use StoneOS, refer to StoneOS related documents ([click here](#)).

Deploying HA Scenarios of CloudEdgevia Secondary Private IP on Alibaba Cloud

HA Typical Scenarios

There is a cloud server web-server (10.0.2.209) on the Alibaba Cloud. You can protect the server by deploying the HA scheme of CloudEdge. The following topology introduces how to deploy HA scenarios of CloudEdge on Alibaba Cloud.

After the deployment, vfw-A will be selected as the master device to protect the web-server and vfw-B will be selected as the backup device. vfw-A will synchronize its configurations and status data to the backup device vfw-B. When the master device vfw-A fails to work, the backup device vfw-B will switch to the master device to protect web-server without interrupting user's communication, which can ensure network stability.

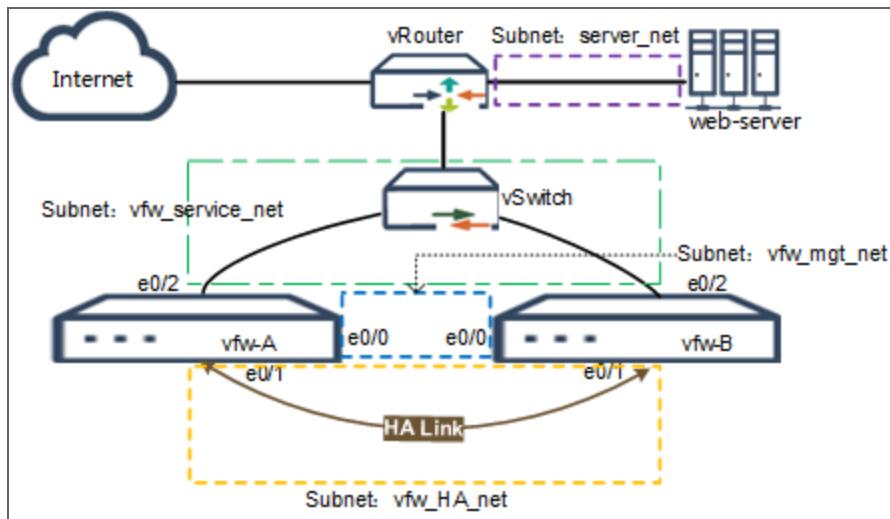

Log in to the AlibabaCloud console ([click here](#)) with your Alibaba account. Information of VPC and subnet which web-server belong to are as follows:

- VPC(VPC1):10.0.0.0/16
- Subnet 0 (server_net):10.0.2.0/24
- web-server IP: 10.0.2.209

Create the following subnets, and the VPC which subnets and the web-server belong to should be the same:

- VPC(VPC1): 10.0.0.0/16
- Subnet 1 (vfw_service_net) : 10.0.1.0/24
- Subnet 2 (vfw_mgt_net) : 10.0.10.0/24
- Subnet 3 (vfw_HA_net) : 10.0.100.0/24

Deployment Steps

[Step 1: Creating RAM Roles](#)

[Step 2: Creating Switches](#)

[Step 3: Creating CloudEdge Instances](#)

[Step 4: Adding Elastic Network Interfaces and Configuring Secondary Private IPs](#)

[Step 5: Purchasing an Elastic IP and Binding it to an Elastic Network Interface](#)

[Step 6: Configuring HA on CloudEdge](#)

[Step 7: View HA Results](#)

[Step 8: Configure Routing, NAT and Security Policies on CloudEdge](#)

Step 1: Creating RAM Roles

For HA deployment of Cloud Edge, the AccessKey authentication or RAM role authentication is required for accessing to cloud platform API. To avoid exposing an account's AccessKey, it is usu-

allyauthenticated by a RAM role. For authentication using Accesskey, refer to the [Appendix](#). To create a RAM role, take the following steps:

1. Hover your mouse over the user avatar at the top-right corner, and then click **Access Control** in the pop-up box.
2. Select **Identities > Roles** in the left navigation pane.
3. Click **Create Role** and configure as follows:
 - Select Role Type: Select **Alibaba Cloud Service**
 - Configure Role: Select **Normal Service Role**
 - RAM Role Name:HA-role
 - Select **Elastic Compute Service**

Selected Trusted Entity
Alibaba Cloud Service

Role Type

Normal Service Role Service Linked Role

* RAM Role Name
HA-role

The role name must be equal to or less than 64 characters in length and can contain only lowercase letters, numbers, and hyphens (-).

Note

* Select Trusted Service
Elastic Compute Service

- Click **OK**.

- Click **Add Permissions to RAM Role** and open the <Add Permissions> Dialog.
- Authorized Scope: **Alibaba Cloud Account**
- Principal : The role created above has been selected .
- Select Policy : Search and select the **System Policy** :AliyunEIPFullAccess、AliyunVPCFullAccess和AliyunECSFullAccess.

* Authorized Scope

Alibaba Cloud Account

Specific Resource Group

Enter a resource group name.

* Principal

HA-role@role.1753042008719542.onaliyunservice.com ×

* Select Policy

System Policy Custom Policy + Create Policy

Enter a policy name.

Authorization Policy Name	Description
AdministratorAccess	Provides full access to Alibaba Cloud service...
AliyunOSSFullAccess	Provides full access to Object Storage Servic...

Selected (3)

AliyunEIPFullAccess

AliyunVPCFullAccess

AliyunECSFullAccess

4. Click OK ,and the RAM role will be referenced directly in subsequent [CloudEdge instances](#).

Step 2: Creating Switches

1. In the left navigation pane, select **Virtual Private Cloud > VPC > VSwitches**, and then click **Create VSswitch**. The Create VSswitch dialog box will appear. Create a switch named "vfw_service_net", whose subnet is "10.0.1.0/24".

● **VPC**

VPC1/vpc-2zee19utlj1o3jlkrgf38

CIDR

10.0.0.0/8

IPv6 CIDR Block ?

Enable IPv6 CIDR Block

Name ?

vfw_service_net 15/128 ✓

Zone ?

Beijing Zone B

Zone Resources ?

ECS ✓ RDS ✓ SLB ✓

IPv4 CIDR Block

10 • 0 • 1 • 0 / 24 ✓

ⓘ You cannot change the CIDR block after the VPC is created.

2. Repeat the above steps to create the switches "vfw_mgt_net" and "vfw_HA_net". **Note:** The three switches should be set in the same zone.
3. Configure the switches as follows:

Option	Description
vfw_mgt_net	
VPC	Select VPC1.
Name	Specify the name of the VSwitch as "vfw_mgt_net".
Zone	Shanghai Zone A
Destination	10.0.10.0/24
CIDR Block	
vfw_HA_net	
VPC	Select VPC1.

Option	Description
Name	Specify the name of the VSwitch as "vfw_HA_net".
Zone	Shanghai Zone A
Destination	10.0.100.0/24
CIDR Block	

Step 3: Creating CloudEdge Instances

1. In the left navigation pane, select **Elastic Compute Service > Instances & Images > Instances**, and create the two instances vfw-A and vfw-B for HA deployment. For detailed steps, refer to [Deploying CloudEdge on Alibaba Cloud](#).

Requirements: At least 2 vCPUs and 4 GB memory are required for per instance. For default network interfaces of both instances, you should select the same switch vfw_mgt_net in the same VPC.

2. Configure the HA Instance as follows:

Option	Description
vfw-A	
Instance Name	Specify the name as "vfw-A".
Instance Type	Select "ecs.ic5.xlarge (4-core, 4GB, Compute Intensive Type ic5)".
Network Interface	<p>Default Network Interface: VPC: VPC1; VSwitch: vfw_mgt_net.</p> <p>Add Network Interface: VPC: VPC1; VSwitch: vfw_HA_net.</p>

Option	Description
Public IP Address	Select Assign Public IP Address , and then the instance will get a public IP address.
Advanced	RAM Role: Select HA-role .
vfw-B	
Instance Name	Specify the name as "vfw-B".
Instance Type	Select "ecs.ic5x.large (4-core, 4GB, Compute Intensive Type ic5)".
Network Interface	Default Network Interface: VPC: VPC1; VSwitch: vfw_mgt_net. Add Network Interface: VPC: VPC1; VSwitch: vfw_HA_net.
Advanced	RAM Role: Select HA-role .

Step 4: Adding Elastic Network Interfaces and Configuring Secondary Private IPs

1. In the left navigation pane, select **Elastic Compute Service > Network and Security > ENIs**, and click **Create ENI** to create an elastic network interface "vfw-HA".
 - ENI Name: vfw_serviceA
 - VPC: VPC1
 - VSwitch: vfw_service_net

- **Security Group:** Select the same security group as the instance.

ENI Name:

The name must be 2 to 128 characters in length and can contain letters, digits, hyphens (-), and underscores (_). It cannot start with http:// or https://. The name must start with a letter. The name must be 2 to 128 characters in length, and can contain letters, digits, underscores (_), and hyphens (-). It must start with a letter and cannot start with http:// or https://.

*VPC:

*VSwitch:

The available zone of the selected switch needs to be the same as the instance to be bound
CIDR: 10.0.1.0/24 (cn-beijing-b)

Primary Private IP:

Must be the free address in the address section of the VSwitch to which it belongs. By default, the free address in the switch is allocated randomly.

Secondary Private IP Addresses: **Up to 9 private IP addresses can be assigned to this ENI.**


Not set Auto Manual

*Security Group:

Name	ID
all	sg-2ze97slq0xksyrvsvfu

2. Click **OK**.

3. In the ENI list, click **Bind to Instance** behind the network interface you created, and then select **vfw-A**.

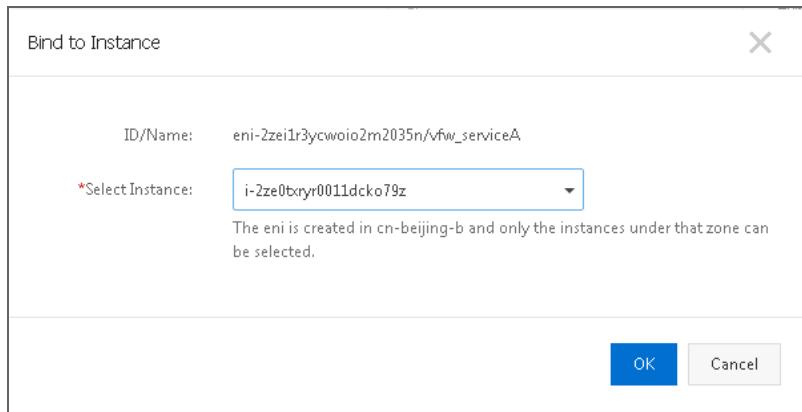

4. Repeat steps 1 and 2 to create another elastic network interface "vfw_serviceB" (VSwitch: vfw_service_net), then bind it to vfw-B.
5. After binding all network interfaces, restart vfw-A and vfw-B.
6. In the ENI list, select the network interface "vfw_service1" of vfw-A, and click **Manage Secondary Private IP Address**. In the pop-up dialog box, click **Assign New IP**, and then configure the secondary private IP address, such as 10.0.1.242.

Step 5: Purchasing an Elastic IP and Binding it to an Elastic Network Interface

1. In the left navigation pane, select **Elastic Compute Service > Network and Security > EIP**, and click **Create EIP**.
2. After purchasing, select the elastic IP, and click **Bind** at the bottom of the list. In the Bind Elastic IP to Resources dialog box, select the secondary elastic network interface "vfw_serviceA" of vfw-A.
3. Click **OK**.

Step 6: Configuring HA on CloudEdge

1. On the Alibaba cloud platform, view and record information such as the elastic public IP address of vfw_mgt_net of vfw-A and vfw-B, and then log in to the vfw-A via WebUI using the elastic public IP address. For detailed steps, refer to [To Login CloudEdge via HTTPS](#).
2. Disable the reverse routing check for the interface eth0/0 of vfw-A and vfw-B respectively.

```
SG-6000# configure

SG-6000(config)# interface ethernet0/0

SG-6000(config)# dhcp-client route distance 10 ////IP address
and default route of eth0/0 are automatically obtained . In this example,
routing priority needs to be set as 10.

SG-6000(config-if-eth0/0)# no reverse-route ////Disable the reverse
routing checking of eth0/0.
```

3. On the vfw-A, configure secondary private IP to the vfw-Service-net interface (eth0/2 in the example) of CloudEdge. (This configuration can only be set in the master device, which will be synchronized to the backup device after HA is deployed.)

```
SG-6000# configure

SG-6000(config)# interface ethernet0/2

SG-6000(config)#zone untrust

SG-6000(config-if-eth0/2)# ip address 10.0.1.242/24 ////Con-
figure as the secondary private IP address and its mask.

SG-6000(config-if-eth0/2)# manage ping ////Configure the man-
agement.

SG-6000(config-if-eth0/2)# manage ssh

SG-6000(config-if-eth0/2)# manage https

SG-6000(config-if-eth0/2)# exit
```

- Configure host routing and DNS to make vfw-A and vfw-B to communicate with the Alibaba Cloud platform. (This configuration can only be set in the master device, which will be synchronized to the backup device after HA is deployed.)

```
SG-6000# configure

SG-6000# show dns ////View the device's DNS Server address, which is
10.0.0.2 in this example.

SG-6000 (config)# ip vrouter trust-vr

SG-6000 (config-vrouter)# ip route 0.0.0.0/0 10.0.1.253
////Configure static routing, next hop is vfw_Service_net gateway IP, and the
default is X.X.X.1.

SG-6000 (config-vrouter)# ip route 10.0.0.2/32 10.0.10.1
///The DNS Server address is 10.0.0.2 and the gateway IP of vfw_mgt_net is
10.0.10.1 .
```

- Configure HA on the master device vfw-A, and configure as follows:

```
SG-6000#configure
```

```
SG-6000(config)# track track1 ///Create a track object with the  
name "track1" .
```

```
SG-6000(config-trackip)# interface ethernet0/2 weight 255  
///Configure eth0/2 interface as the HA tracking interface.
```

```
SG-6000(config)# ha link interface ethernet0/1 ///Configure  
eth0/1 interface as the HA link interface.
```

```
SG-6000(config)# ha link ip 10.0.100.164/24 ///Configure the IP  
address for HA negotiation according to the IP assigned to eth0/1 by  
Alibaba Cloud platform.
```

```
SG-6000(config)# ha link mac 1st-interface-mac ///Configure  
the control interface of HA to use the real MAC of interface.
```

```
SG-6000(config)# no ha virtual-mac enable ///Configure the HA  
business interface to use the real MAC of interface.
```

```
SG-6000(config)# ha peer ip 10.0.100.100 mac 0224.f8f3.e5e2  
///Configure the address of the peer device of HA link interface. The MAC  
address can be viewed by the command "show interface". (MAC address can  
be optionally configured.)
```

```
SG-6000(config)#ha cloud-deploy havip disable///Disable HAVIP function that Alibaba  
Cloud provides to deploy HA
```

```
SG-6000(config)#ha cloud-deploy platform aliyunSpecify the Cloud platform the CloudEdge  
were deployed as AliCloud.
```

```
SG-6000(config)# ha group 0 ///Join group HA 0.
```

```
SG-6000(config-ha-group)# priority 50 ///Set the priority and the  
smaller the value, the higher the priority. The device with the higher the pri-  
ority will be the master device.
```

```
SG-6000(config-ha-group)# monitor track track1 ///Add track
```

```
SG-6000(config-ha-group)# exit
```

```
SG-6000(config)# ha cluster 1 ///Add HA cluster 1.
```

6. On the backup device vfw-B, configure the following information.

```
SG-6000#configure

SG-6000(config)# ha link interface ethernet0/1
SG-6000(config)# ha link ip 10.0.100.100/24
SG-6000(config)# ha link mac 1st-interface-mac
SG-6000(config)# no ha virtual-mac enable
SG-6000(config)# ha peer ip 10.0.100.164 mac 028e.8f79.700e
///The MAC address configuration is optional.

SG-6000(config)#ha cloud-deploy havip disable///Disable HAVIP function that Alibaba
Cloud provides to deploy HA

SG-6000(config)#ha cloud-deploy platform aliyunSpecify the Cloud platform the CloudEdg
were deployed as AliCloud.

SG-6000(config)# ha group 0

SG-6000(config-ha-group)# priority 100

SG-6000(config-ha-group)# exit

SG-6000(config)# ha cluster 1 ///It is recommended to add HA
cluster 1 after the status of the master device changes to "M".
```

Step 7: View HA Results

After completing the above configurations, the vfw-A with high priority will be selected as the master device automatically, and the vfw-B with low priority will become the backup device. The master device and the backup device are marked with the letter "M" and letter "B" respectively in the console.

- When the two devices have been successfully negotiated, you only need to configure the master device and the configurations will automatically synchronize to the backup device.
- When vfw-A fails to forward traffic or its ethernet0/2 is disconnected, vfw-B will switch to the master device and start to forward traffic without interrupting user's communication.

Step 8: Configure Routing, NAT and Security Policies on CloudEdge

You can configure the web-server's inbound and outbound traffic through the CloudEdge instance in the HA deployment scheme to ensure the high reliability of server's business. The configurations are as follows:

1. Configure the source NAT rule on the master device vfw-A, and the source address of the traffic in the web-server network segment will be translated into the IP of interface eth0/2, i.e., the secondary private IP: 10.0.1.242.

Command:

```
SG-6000 (M) (config-vrouter)# snatrule from 10.0.2.209/24 to any
service any eif ethernet0/2 trans-to eif-ip mode dynamicport
```

2. Configure the destination NAT rule on the vfw-A, and the destination IP address of the traffic whose destination address is the secondary private IP will be translated into the IP address of web-server 10.0.2.209.

Command:

```
SG-6000 (M) (config-vrouter)# dnatrule from any to 10.0.1.1.242
service any trans-to 10.0.2.209
```

3. Configure a security policy rule on vfw-A that allows all traffic to pass.

Command:

```
SG-6000 (M) (config-policy)# rule from any to any service any
permit
```

4. After the configurations, web-server will not need to be bound with the elastic IP. The intranet address of web-server will be translated to the secondary private IP of the vfw_service_net subnet of CloudEdge through DNA T rules, and Internet users can access the server by accessing the public address of secondary private IP. At the same time, the source IP address of the traffic sent by web-server to Internet will also be translated to the secondary private IP address of CloudEdge through SNAT rules, so as to protect web-server against external attacks.

Results

When the master device vfw-A fails, the backup device vfw-B will automatically switch to the master device. The secondary private IP, routing, information of security policy, source NAT and destination NAT on the original master device will be switched automatically without manual reconfiguration, and the communication will not be affected, thus realizing a high reliable security guarantee for cloud servers.

About how to use StoneOS, refer to StoneOS related documents ([click here](#)).

Appendix

If RAM authentication is not used, that is, the RAM role is not bound to CloudEdge instance, you can apply an AccessKey for authentication .

Applying for AccessKey

1. Hover your mouse over the user avatar at the top-right corner, and click **Security Control** in the pop-up box.
2. AccessKey of your cloud account is the secret key to access Alibaba Cloud APIs. It has full permissions of your cloud account, and needs to be verified via the administrator's mobile phone number. You should keep it safe.
3. Click **Create AccessKey**, and then copy and paste the AccessKey ID and Secret for use in subsequent steps.

4. Then perform the configuration in Steps 2 to 9. When configuring HA in Step 7, you need to set the AccessKey ID and Secret commands on the master and backup devices. In global configuration mode, run the following command:

```
SG-6000(config)#cloud-deploy accesskeyid XXXXXXXXXXXXXXXX accesskeysecret  
XXXXXXXXXX
```

If you do not want to assign all permissions to an AccessKey, you can create an AccessKey using a sub-user account and assign the specified permissions to the subuser account. For details , take the following steps:

1. Hover your mouse over the user avatar at the top-right corner, and click **Access Control** in the pop-up box.
2. Select **Identities > Users** and click "**Creator User**".
 - Logon Name : HA-secondIP Display Name:HA-secondIP
 - Access Mode: Select **Console Access** and **Open API Access** .

User Account Information

* Logon Name ② HA-secondIP

* Display Name ② HA-secondIP

+ Add User

Access Mode ②

Console Access Users access the Alibaba Cloud console using the account and password.

Open API Access Enable AccessKeyId and AccessKeySecret to support access through the API

3. Click **OK** and complete the SMS verification.
4. In the users list ,find the sub account "HA-secondIP "and click the **Add Permissions** link to open the <Add Permissions>.

- Authorized Scope : Select "Specific Resource Group "and specify the resource group the vfw-A and vfw-B are located.
- Select Policy : AliyunEIPFullAccess、AliyunVPCFullAccess和AliyunECSFullAccess

* Authorized Scope

Alibaba Cloud Account

Specific Resource Group

* Principal

* Select Policy

System Policy Custom Policy + Create Policy

AliyunECSFullAccess

Authorization Policy Name	Description
AliyunECSFullAccess	Provides full access to Elastic Compute Servi...

Selected (3)

AliyunEIPFullAccess

AliyunVPCFullAccess

AliyunECSFullAccess

- Click **OK**.

5. In the user list, find the sub account HA-SecondIP, click the user name link to enter the user details page. In the "User AccessKeys" section, click Create AccessKey to create an accesskey, and then copy the AccessKey ID and Secret.
6. Then perform the configuration in Steps 2 to 9. When configuring HA in Step 7, you need to set the AccessKey ID and Secret commands on the master and backup devices. In global configuration mode, run the following command:


```
SG-6000(config)#cloud-deploy accesskeyid XXXXXXXXXXXXXXXX accesskeysecret
XXXXXXXXXXXX
```

Deploying HA Peer Mode of CloudEdge on Alibaba Cloud

Topology

Based on the following topology, deploy the HA solution of CloudEdge in Peer Active-Active(A/A) mode in the Alibaba Cloud environment to achieve HA negotiation and synchronization across layer-3 networks.

After the deployment, in HA Peer Active-Active(A/A) mode, both vFW-A and vFW-B are master devices. vFW-A will be selected as the admin master to forward traffic and vFW-B will be used to back up traffic. vFW-A will synchronize its configurations and status data to vFW-B. When the master device vFW-A fails to work, vFW-B will be switched to the admin master to forward traffic, which can ensure network stability.

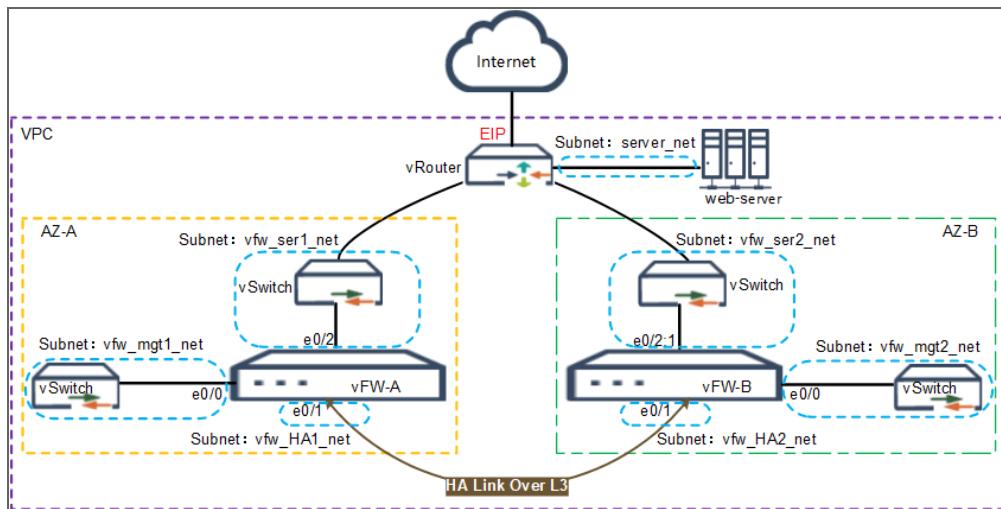

Based on the topology, you need to configure the followings on Alibaba Cloud:

- 1 Virtual Private Cloud (VPC).
- 7 VSwitches (Subnet).

- Available Zone AZ-A: vFW-A uses the vfw-mgt1-net, vfw-ser1-net, and vfw-HA1-net subnets
(When you create a CloudEdge instance, you need to add another two NICs, which are used for service network and HA network respectively).
- Available Zone AZ-B: vFW-B uses the vfw-mgt2-net, vfw-ser2-net, and vfw-HA2-net subnets
(When you create a CloudEdge instance, you need to add another two NICs, which are used for service network and HA network respectively).
- Subnet for Web_Server: server-net.
- 3 ECS instances: vFW-A and vFW-B instances for HA deployment; one instance for Web-Server.
The three instances need to be on the same VPC.
Note: vFW-A and vFW-B are deployed in Available Zones AZ-A and AZ-B respectively, with eth0/0 as the MGT interface, eth0/1 as the HA interface, and eth0/2 and eth0/2:1 as the service interface. All interfaces are on different subnets.
- 1 Elastic IP (EIP), which is used to communicate in the Internet.

Required Versions

5.5R10F3 and later F versions

Deployment Steps

[Step 1: Creating RAM Roles](#)

[Step 2: Creating VPC](#)

[Step 3: Creating VSwitches](#)

[Step 4: Creating CloudEdge Instances](#)

[Step 5: Creating Elastic Network Interfaces](#)

[Step 6: Adding Traffic Redirection Routes](#)

[Step 7: Purchasing an Elastic IP and Binding it to an Elastic Network Interface](#)

[Step 8: Configuring HA on CloudEdge](#)

[Step 9: Verify HA Results](#)

[Step 10: Configuring Routing, NAT, and Security Policies on CloudEdge](#)

Step 1: Create RAM Roles

For HA deployment of Cloud Edge, the AccessKey authentication or RAM role authentication is required for accessing to cloud platform API. To avoid exposing an account's AccessKey, it is usually authenticated by a RAM role. For authentication using Accesskey, refer to the [Appendix](#). To create a RAM role, take the following steps:

1. Hover your mouse over the user avatar at the top-right corner, and then click **Access Control** in the pop-up box.
2. Select **Identities > Roles** in the left navigation pane.

3. Click **Create Role** and configure as follows:

- Select Role Type: Select **Alibaba Cloud Service**
- Configure Role: Select **Normal Service Role**
 - RAM Role Name:HA-role
 - Select **Elastic Compute Service**

Selected Trusted Entity
Alibaba Cloud Service

Role Type

Normal Service Role Service Linked Role

* RAM Role Name

HA-role

The role name must be equal to or less than 64 characters in length and can contain lowercase letters, numbers, and hyphens (-).


Note

* Select Trusted Service

Elastic Compute Service

- Click **OK**.
- Click **Add Permissions to RAM Role** and open the <Add Permissions> Dialog.
- Authorized Scope: **Alibaba Cloud Account**
- Principal: The role created above has been selected .

- Select Policy: Search and select the **System Policy** :AliyunEIPFullAccess、AliyunVPCFullAccess和AliyunECSFullAccess.

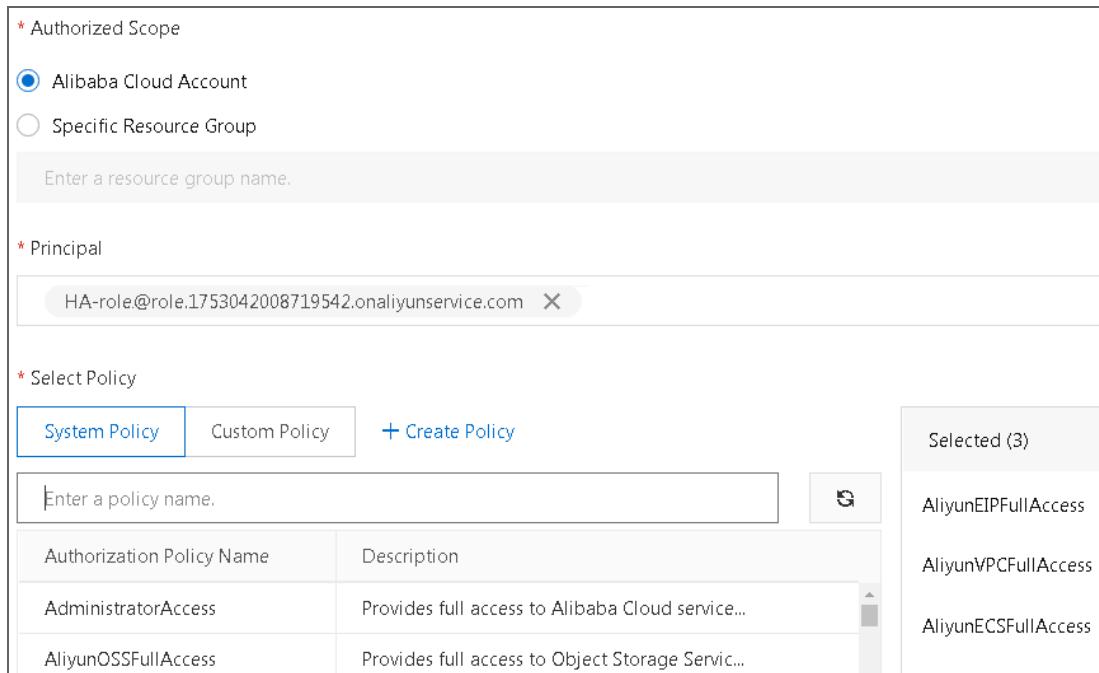

The screenshot shows the 'RAM Role' configuration page. The 'Authorized Scope' section is set to 'Alibaba Cloud Account'. The 'Principal' section shows the ARN 'HA-role@role.1753042008719542.onaliyunservice.com'. The 'Select Policy' section has 'System Policy' selected, showing three policies: AliyunEIPFullAccess, AliyunVPCFullAccess, and AliyunECSFullAccess, all of which are selected.

Selected (3)
AliyunEIPFullAccess
AliyunVPCFullAccess
AliyunECSFullAccess

4. Click OK ,and the RAM role will be referenced directly in subsequent [CloudEdge instances](#).

Step 2: Create VPC

1. Log in the Alibaba Cloud, enter the Console page, and select “Virtual Private Cloud >VPC >VPC” on the left.
2. Click **Create VPC**, and the <Create VPC>dialog box will pop up. Configure as the following example:



In the <Create VPC> Dialog Box, Configure the options as follows:

Option	Description
VPC Name	Specifies the name of VPC as "CloudEdge-vpc".
IPv4 CIDR Block	Specifies the destination CIDR block as 192.168.0.0/16.
vSwitch Name	Specifies the name of VSwitch as "vfw-ser1-net".
Zone	China East 1 Zone A
IPv4 CIDR Block	192.168.2.0/24

3. Click **OK**.

Step 3: Create VSwitches

1. Select "Virtual Private Cloud >VPC >VSwitches", click **Create VSwitch**, and the <Create VSwitch> dialog box appears, configure the following options:



2. Repeat the above steps to continue configuring the switch vfw-mgt1-net, vfw-ser1-net, vfw-HA1-net, vfw-mgt2-net, vfw-ser2-net, vfw-HA2-net, and server-net.

Note: vfw-mgt1-net, vfw-ser1-net, and vfw-HA1-net should be set in the same zone. vfw-mgt2-net, vfw-ser2-net, and vfw-HA2-net should be set in the same zone. server-net can be in the same zone as the other 6 vSwitches, and can also be in the different zone from the other 6 vSwitches.

Configure these seven switches as follows:

Option	Description
vfw-mgt1-net	
VPC	Select the VPC “CloudEdge-vpc” .
vSwitch Name	Specifies the name of VSwitch as “vfw-mgt1-net” .
Zone	China East 1 Zone A
IPv4 CIDR	192.168.0.0/24
Block	
vfw-HA1-net	
VPC	Select the VPC “CloudEdge-vpc” .
vSwitch Name	Specifies the name of VSwitch as “vfw-HA1-net” .
Zone	China East 1 Zone A
IPv4 CIDR	192.168.1.0/24
Block	
vfw-ser1-net	
VPC	Select the VPC “CloudEdge-vpc” .
vSwitch Name	Specifies the name of VSwitch as “vfw-ser1-net” .
Zone	China East 1 Zone A
IPv4 CIDR	192.168.2.0/24
Block	
vfw-mgt2-net	
VPC	Select the VPC “CloudEdge-vpc” .
vSwitch Name	Specifies the name of VSwitch as “vfw-mgt2-net” .

Option	Description
Zone	China East 1 Zone B
IPv4 CIDR	192.168.4.0/24
Block	
vfw-HA2-net	
VPC	Select the VPC “CloudEdge-vpc” .
vSwitch Name	Specifies the name of VSwitch as “vfw-HA2-net” .
Zone	China East 1 Zone B
IPv4 CIDR	192.168.5.0/24
Block	
vfw-ser2-net	
VPC	Select the VPC “CloudEdge-vpc” .
vSwitch Name	Specifies the name of VSwitch as “vfw-ser2-net” .
Zone	China East 1 Zone B
IPv4 CIDR	192.168.6.0/24
Block	
server-net	
VPC	Select the VPC “CloudEdge-vpc” .
vSwitch Name	Specifies the name of VSwitch as “server-net” .
Zone	China East 1 Zone B
IPv4 CIDR	192.168.3.0/24
Block	

Step 4: Create CloudEdge Instances

1. Create instances vFW-A and instance vFW-B for HA deployment. For detailed steps, refer to ["Deploying CloudEdge on Alibaba Cloud" on Page 160](#)

Requirements: Each instance needs to be bound to at least 3 ENIs, including one default ENI and two added ENIs. In the two added ENIs, one is used for service network and another one is used for HA network. The three ENIs need to select a switch of the corresponding zone. vFW-A and vFW-B are deployed in different zones.

The HA Instances Configuration

Option	Description
vFW-A	
Instance Name	Specifies the name of Instance as "vFW-A".
Instance Type	Select the “ecs.c7.large (2-core, 4GB, Compute Optimized Type c7) ” .
Network Interface	Default Network Interface: VPC: CloudEdge-vpc, vfw-face mgt1-net. Add Network Interface : VPC: CloudEdge-vpc, VSwitch:vfw-ser1-net. Add Network Interface : VPC: CloudEdge-vpc, VSwitch:vfw-HA1-net.
Advanced	RAM Role: Select HA-role .
vFW-B	
Instance	Specifies the name of Instance as "vFW-B".

Option	Description
Name	
Instance Type	Select the “ecs.c7.large (2-core, 4GB, Compute Optimized Type c7) ” .
Network Interface	<p>Default Network Interface: VPC: CloudEdge-vpc, vfw-mgt2-net.</p> <p>Add Network Interface : VPC: CloudEdge-vpc, VSwitch:vfw-ser2-net.</p> <p>Add Network Interface : VPC: CloudEdge-vpc, VSwitch:vfw-HA2-net.</p>
Advanced	RAM Role: Select HA-role .
Resource Group	If AccessKey of the sub-account is applied for authentication, you need to specify a resource group for the instance, and this resource group needs to be consistent with that specified during sub-account authorization. For authentication using Accesskey, refer to the Appendix .

2. Create instance Web-Server. For detailed steps, refer to "["Deploying CloudEdge on Alibaba Cloud" on Page 160](#).

The network must be selected with the different network from the vFW-A and vFW-B.

Web-server Configuration

Option	Description
Instance Name	Specifies the name of Instance as "Web-Server" .

Option	Description
Instance Type	Select the “ecs.c7.large (2-core, 4GB, Compute Optimized Type c7)”. You can select flexibly according to actual needs.
Network Interface	Default Network Interface: VPC: CloudEdge-vpc, server-net.

Step 5: Add Elastic Network Interfaces

1. In the left navigation pane, select **Elastic Compute Service > Network and Security > ENIs**, and click **Create ENI** to create an elastic network interface "eni-ser-1".

Configure the following options:

Option	Description
ENI name	Specifies the name of the ENI as “eni-ser-1” .
VPC	Select the VPC “CloudEdge-vpc” .
Switch	Select the switch “vfw-ser1-net” .
Security	Select the same security group as that of the instance.

Option	Description
Group	
primary private network IP address	Specifies the primary private IP address of ENI as 192.168.2.10. If not specified, a random idle address in the selected switch is assigned.

2. Click **OK**.
3. In the ENI list, click **Bind to Instance** behind the network interface you created, and then select **vfw-A**.
4. Repeat steps 1, 2, and 3 to create another elastic network interface "eni-ser-2", then bind it to vfw-B.

Configure the following options:

Option	Description
ENI name	Specifies the name of the ENI as "eni-ser-2" .
VPC	Select the VPC "CloudEdge-vpc" .
Switch	Select the switch "vfw-ser2-net" .
Security Group	Select the same security group as that of the instance.
primary private network IP address	Specifies the primary private IP address of ENI as 192.168.6.10. If not specified, a random idle address in the selected switch is assigned.

- Repeat steps 1, 2, and 3 to create two HA elastic network interface "HA-1" and "HA-2", then bind HA-1 to vfw-A and bind HA-2 to vfw-B.

Configure the following options:

Option	Description
HA-1	
ENI name	Specifies the name of the HA ENI as "HA-1" .
VPC	Select the VPC "CloudEdge-vpc" .
Switch	Select the switch "vfw-HA1-net" .
Security Group	Select the same security group as that of the instance.
primary private network IP address	Specifies the primary private IP address of ENI as 192.168.1.10. If not specified, a random idle address in the selected switch is assigned.
HA-2	
ENI name	Specifies the name of the HA ENI as "HA-2" .
VPC	Select the VPC "CloudEdge-vpc" .
Switch	Select the switch "vfw-HA2-net" .
Security Group	Select the same security group as that of the instance.
primary private network IP address	Specifies the primary private IP address of ENI as 192.168.5.10. If not specified, a random idle address in the selected switch is assigned.

Option	Description
address	

- After binding all network interfaces, restart vfw-A and vfw-B.

Step 6: Add Traffic Redirection Routes

- In the console of Alibaba Cloud, click VPC and then select “CloudEdge-vpc” to go to the details page.
- In the **Resource Management** tab, find the default route and click the number under the route.
- Click the route table name to go to the route table details page. Then, select Route Entry List > Custom Route.
- Click Add Route Entry.

The screenshot shows the 'Add Route Entry' dialog box. The 'Name' field is set to 'default'. The 'Resource Group' dropdown is set to 'All Resource Groups'. The 'Destination CIDR Block' section shows an IPv4 CIDR Block with fields: 0, 0, 0, 0, /, 0. The 'Next Hop Type' is set to 'ENI', and the 'ENI' dropdown is open, showing a list of available ENIs.

- Destination CIDR Block: 0.0.0.0/0.
- Next Hop Type: ENI.
- ENI: Select "eni-ser-1".

5. Click **OK**.

Step 7: Purchase an Elastic IP and Binding it to an Elastic Network Interface

1. In the left navigation pane, select **Elastic Compute Service > Network and Security > EIP**, and click **Create EIP**.
2. After purchasing, select the elastic IP, and click **Bind** at the bottom of the list. In the Bind Elastic IP to Resources dialog box, select the secondary elastic network interface and bind it to "eni-ser-1".
3. Click **OK**.

Step 8: Configure HA on CloudEdge

1. On the Alibaba cloud platform, view and record information such as the elastic public IP address of vfw_mgt_net of vfw-A and vfw-B, and then log in to the vfw-A via WebUI using the elastic public IP address. For detailed steps, refer to [To Login CloudEdge via HTTPS](#).
2. After you log in to CloudEdge, make sure that the version is 5.5R10F3 or later. To upgrade the version, select **System > Upgrade Management > Version Upgrade**.
3. Log in to the CLI by using SSH. On the vfw-A, configure the IP address of ethernet0/2 of HA group 0 and the IP address of ethernet0/2:1 of HA group 1. HA group 0 is the default HA group.

```
SG-6000# configure
SG-6000(config)# ha group 1 ///Create HA group 1.
SG-6000(config-ha-group)# exit
```

```

SG-6000(config)# ip vrouter service-vr ////Create the service VRouter,
which is used to separate service traffic and management traffic.

SG-6000(config-vrouter)# exit

SG-6000(config)# zone service ////Create the service zone.

SG-6000(config-zone-service)# vrouter service-vr ////Bind the service
zone to the service VRouter.

SG-6000(config-zone-service)# exit

SG-6000(config)# interface ethernet0/2 ////Configure the service inter-
face and its IP address of HA group 0.

SG-6000(config-if-eth0/2)# zone service

SG-6000(config-if-eth0/2)# ip address 192.168.2.10/24

SG-6000(config-if-eth0/2)# exit

SG-6000(config)# interface ethernet0/2:1 ////Configure the service inter-
face and its IP address of HA group 1.

SG-6000(config-if-eth0/2:1)# zone service

SG-6000(config-if-eth0/2:1)# ip address 192.168.6.10/24

SG-6000(config-if-eth0/2:1)# exit

```

4. On the vFW-A, configure the track object to monitor the status of ethernet0/2. Once the interface fails, the HA is switch to vFW-B. In addition, configure ethernet0/1 for HA and the corresponding IP address and next-hop gateway.

SG-6000#configure

```

SG-6000(config)# track track1 ////Create the track object track1.

SG-6000(config-trackip)# interface ethernet0/2 weight 255 ////Specify to
track eth0/2.

SG-6000(config)#ha cloud-deploy platform aliyun ////Specify the cloud

```

platform deployed by CloudEdge as Alibaba Cloud.

```
SG-6000(config)#ha cloud-deploy havip disable ////Disable the way to  
deploy HA by using HAVIP.
```

```
SG-6000(config)# ha link interface ethernet0/1 ////Specify eth0/1 as the  
HA connection interface.
```

```
SG-6000(config)# ha link ip 192.168.1.10 255.255.255.0 ////Configure the  
IP address used for HA negotiation based on the IP address assigned to  
eth0/1 by Alibaba Cloud platform.
```

```
SG-6000(config)# ha link mac 1st-interface-mac ////Specify the HA con-  
trol interface to use the real MAC of the interface.
```

```
SG-6000(config)# no ha virtual-mac enable ////Specify the HA service  
interface to use the real MAC of the interface.
```

```
SG-6000(config)# ha peer ip 192.168.5.10 gateway 192.168.1.253 ////Specify  
the address of the peer HA connection interface and the next-hop gate-  
way address.
```

5. On the vFW-A, configure the HA cluster and add a track object for HA group 0.

```
SG-6000#configure  
SG-6000(config)# ha group 0  
SG-6000(config-ha-group)# monitor track track1 ////Add the track  
object.  
SG-6000(config-ha-group)# exit  
SG-6000(config)# ha cluster 1 peer-mode node 0 ////Specify the HA  
cluster ID and node ID.
```

6. On the vFW-B, repeat the steps above to configure the following information:

```
SG-6000# configure
```

```
SG-6000(config)# ha group 1 ////Creating HA group 1.

SG-6000(config-ha-group)# exit

SG-6000(config)# ip vrouter service-vr ////Create the service VRouter,
which is used to separate service traffic and management traffic.

SG-6000(config-vrouter)# exit

SG-6000(config)# zone service ////Create the service zone.

SG-6000(config-zone-service)# vrouter service-vr ////Bind the service
zone to the service VRouter.

SG-6000(config-zone-service)# exit

SG-6000(config)# interface ethernet0/2 ////Configure the service inter-
face and its IP address of HA group 0.

SG-6000(config-if-eth0/2)# zone service

SG-6000(config-if-eth0/2)# ip address 192.168.2.10/24

SG-6000(config-if-eth0/2)# exit

SG-6000(config)# interface ethernet0/2:1 ////Configure the service inter-
face and its IP address of HA group 1.

SG-6000(config-if-eth0/2:1)# zone service

SG-6000(config-if-eth0/2:1)# ip address 192.168.6.10/24

SG-6000(config-if-eth0/2:1)# exit

SG-6000(config)#ha cloud-deploy platform aliyun ////Specify the cloud
platform deployed by CloudEdge as Alibaba Cloud.

SG-6000(config)#ha cloud-deploy havip disable ////Disable the way to
deploy HA by using HAVIP.

SG-6000(config)# ha link interface ethernet0/1 ////Specify eth0/1 as the
HA connection interface.

SG-6000(config)# ha link ip 192.168.5.10 255.255.255.0 ////Configure the
```

IP address used for HA negotiation based on the IP address assigned to eth0/1 by Alibaba Cloud platform.

SG-6000(config)# ha link mac 1st-interface-mac ////Specify the HA control interface to use the real MAC of the interface.


SG-6000(config)# no ha virtual-mac enable ////Specify the HA service interface to use the real MAC of the interface.

SG-6000(config)# ha peer ip 192.168.1.10 gateway 192.168.5.253 ////Specify the address of the peer HA connection interface and the next-hop gateway address.

SG-6000(config)# ha cluster 1 peer-mode node 1 ////Specify the HA cluster ID and node ID.

Step 9: Verifying HA Results

1. After the configuration, both vFW-A and vFW-B are master devices. vFW-A, configured as "peer-mode node 0", automatically negotiates as the Admin Master for traffic forwarding, while vFW-B, configured as "peer-mode node 1", serves as the master device for traffic backup. In the console, you can identify the Admin Master with the label 'M0D1,' while the master device is labeled 'D0M1.'

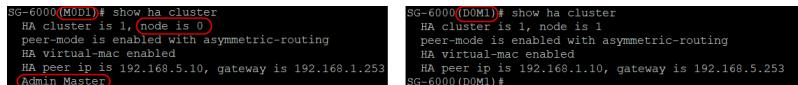

```
SG-6000(M0D0)1 show ha cluster
HA cluster is 1, node is 0
peer-mode is enabled with asymmetric-routing
HA virtual-mac enabled
HA peer ip is 192.168.5.10, gateway is 192.168.1.253
Admin Master

SG-6000(D0M1)1 show ha cluster
HA cluster is 1, node is 1
peer-mode is enabled with asymmetric-routing
HA virtual-mac enabled
HA peer ip is 192.168.1.10, gateway is 192.168.5.253
SG-6000 (D0M1) #
```

- Since the two devices have already successfully negotiated, subsequent configurations only need to be performed on the Admin Master device, vFW-A. Once configured, they will automatically synchronize to vFW-B.
- When vFW-A fails to forward traffic or ethernet0/2 of vFW-A is disconnected, vFW-B will be switched to the admin master to forward traffic.

2. When vFW-A fails or ethernet0/2 of vFW-A is disconnected, log in to the Alibaba Cloud console. In the Alibaba Cloud management console, select 'VPC > Access to Internet > Elastic IP Address.

Check if the EIP and traffic redirection route is bound to the corresponding service network interface of vFW-B. If they are automatically bound, it indicates a successful HA network deployment and normal communication is implemented. Otherwise, the deployment fails.

Step 10: Configuring Routing, NAT, and Security Policies on CloudEdge

You can configure the web-server's inbound and outbound traffic through the CloudEdge instance in the HA deployment scheme to ensure the high reliability of server's business. The configurations are as follows:

1. Configure the source NAT rule on the master device vfw-A, and the source address of the traffic in the web-server network segment will be translated into the IP of interface eth0/2, i.e., the primary private IP: 192.168.2.10.

Command:

```
SG-6000(M0D1)(config)# ip vrouter service-vr
SG-6000(M0D1)(config-vrouter)# ip route 0.0.0.0 ethernet0/2
192.168.2.253
SG-6000(M0D1)(config-vrouter)# ip route 0.0.0.0 ethernet0/2:1
192.168.6.253
SG-6000(M0D1)(config-vrouter)# snatrule from 192.168.3.0/24 to any
trans-to eif-ip mode dynamicport
SG-6000(M0D1)(config-vrouter)# snatrule from 192.168.3.0/24 to any
trans-to eif-ip mode dynamicport group 1
```

2. Configure the destination NAT rule on the vfw-A, and the destination IP address of the traffic whose destination address is the primary private IP will be translated into the IP address of web-server service-net.

Command:

```
SG-6000(M0D1)(config)# ip vrouter service-vr
```

```
SG-6000(M0D1)(config-vrouter)# dnatrule from any to 192.168.2.10 trans-  
to 192.168.3.10
```

```
SG-6000(M0D1)(config-vrouter)# dnatrule from any to 192.168.6.10 trans-  
to 192.168.3.10 group 1
```

3. Configure a security policy rule on vfw-A that allows all traffic to pass.

Command:

```
SG-6000(M0D1)(config)# policy-global
```

```
SG-6000(M0D1)(config-policy)# rule from any to any service any permit
```

4. After the configurations, web-server will not need to be bound with the elastic IP. The intranet address of web-server will be translated to the private IP of the vfw_service_net subnet of CloudEdge through DNA T rules, and Internet users can access the server by accessing the public address of private IP. At the same time, the source IP address of the traffic sent by web-server to Internet will also be translated to the private IP address of CloudEdge through SNAT rules, so as to protect web-server against external attacks.

For more information about how to use StoneOS, refer to the user manuals of StoneOS. ([Click here](#)).

Appendix

If RAM authentication is not used, that is, the RAM role is not bound to CloudEdge instance, you can apply an AccessKey for authentication.

Applying for AccessKey

1. Hover your mouse over the user avatar at the top-right corner, and click **AccessKey Management** in the pop-up box.

2. AccessKey of your cloud account is the secret key to access Alibaba Cloud APIs. It has full permissions of your cloud account, and needs to be verified via the administrator's mobile phone number. You should keep it safe.
3. Click **Create AccessKey**, and then copy and paste the AccessKey ID and Secret for use in subsequent steps.
4. Then perform the configuration in Steps 2 to 10. When configuring HA in Step 8, you need to set the AccessKey ID and Secret commands on the vFW-A and vFW-B devices. In global configuration mode, run the following command:


```
SG-6000(config)#cloud-deploy accesskeyid XXXXXXXXXXXXXXXXX accesskeysecret XXXXXXXXXXXX
```

If you do not want to assign all permissions to an AccessKey, you can create an AccessKey using a sub-user account and assign the specified permissions to the subuser account. For details , take the following steps:

1. Hover your mouse over the user avatar at the top-right corner, and click **Access Control** in the pop-up box.

2. Select **Identities > Users** and click "**Create User**".

- Logon Name : HA-peermode1; Display Name: HA-peermode1
- Access Mode: Select **Console Access** and **Open API Access** .

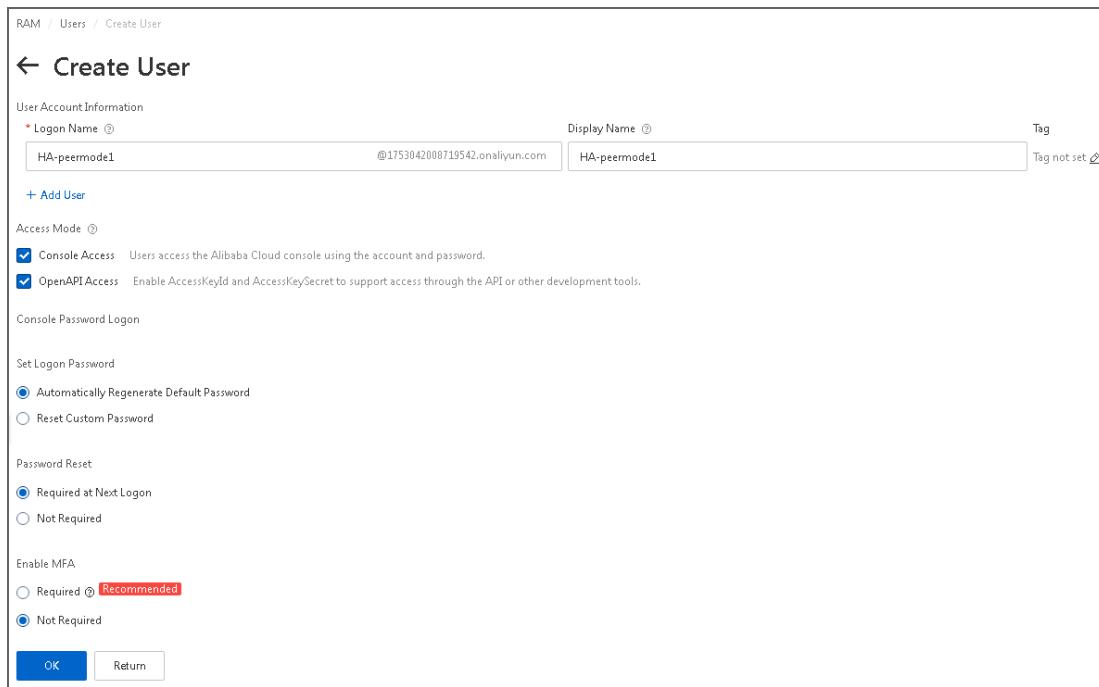

RAM / Users / Create User

← Create User

User Account Information

* Logon Name Display Name HA-peermode1 Tag

Access Mode **Console Access** Users access the Alibaba Cloud console using the account and password. **OpenAPI Access** Enable AccessKeyId and AccessKeySecret to support access through the API or other development tools.

Console Password Logon

Set Logon Password **Automatically Regenerate Default Password** Reset Custom Password

Password Reset **Required at Next Logon** Not Required

Enable MFA Required **Recommended** Not Required

3. Click **OK** and complete the SMS verification.

4. In the users list ,find the sub account "HA-peermode1 "and click the **Add Permissions** link to open the <Add Permissions>.

- Authorized Scope: Select "Specific Resource Group" and specify the resource group where the vfw-A and vfw-B are located.

- Select Policy: AliyunEIPFullAccess、AliyunVPCFullAccess和AliyunECSFullAccess

* Authorized Scope

Alibaba Cloud Account

Specific Resource Group

AliyunECSFullAccess

* Principal

* Select Policy

System Policy Custom Policy + Create Policy

Authorization Policy Name	Description
AliyunECSFullAccess	Provides full access to Elastic Compute Servi...

Selected (3)

AliyunEIPFullAccess

AliyunVPCFullAccess

AliyunECSFullAccess

- Click **OK**.

5. In the user list, find the sub account HA-peermode 1, click the user name link to enter the user details page. In the "User AccessKey" section, click Create AccessKey to create an accesskey, and then copy the AccessKey ID and Secret.
6. Then perform the configuration in Steps 2 to 10. When configuring HA in Step 8, you need to set the AccessKey ID and Secret commands on the vFW-A and vFW-B devices. In global configuration mode, run the following command:

```
SG-6000(config)#cloud-deploy accesskeyid XXXXXXXXXXXXXXXX accesskeysecret XXXXXXXXXXXX
```

Deploying CloudEdge on Array AVX

System Requirements

To deploy CloudEdge on an Array AVX platform, the host should meet the following requirements:

- Array AVX has been installed.
- Array AVX has at least 2 CPUs and 2 GB memory.

Preparations

Take the following steps to obtain and download the image file required for deploying the CloudEdge on Array AVX (an .qcow2 file).

1. Enter the access URL for the Hilstone firmware download center (<https://images.hillstonenet.com/>) in your browser to open and log in to the Hilstone firmware download center (Hilstonenet images).
2. In the left-side directory, click **StoneOS** to access the StoneOS page.
3. According to your requirements, click the corresponding version number on the right side of the page to obtain and download the CloudEdge image file.

Notes: Different deployment environments require different formats of CloudEdge system files.

Please obtain the system file format that corresponds to your current deployment scenario. See [System Files](#). If you cannot determine the required system files for your current deployment scenario, please consult Hillstone Networks technical support for assistance.


Installing CloudEdge

CloudEdge will be installed as an instance on Array AVX. After the installation, you can run the virtual StoneOS system, and access the CLI and WebUI of CloudEdge.

Step 1: Importing the Image

1. Log in to Array AVX. Click **VA Image** on the left navigation pane, and then click the **VA Image** tab.

2. On the VA Image page, click  on the upper-left corner, and the **Import a VA Image** dialog will pop up.

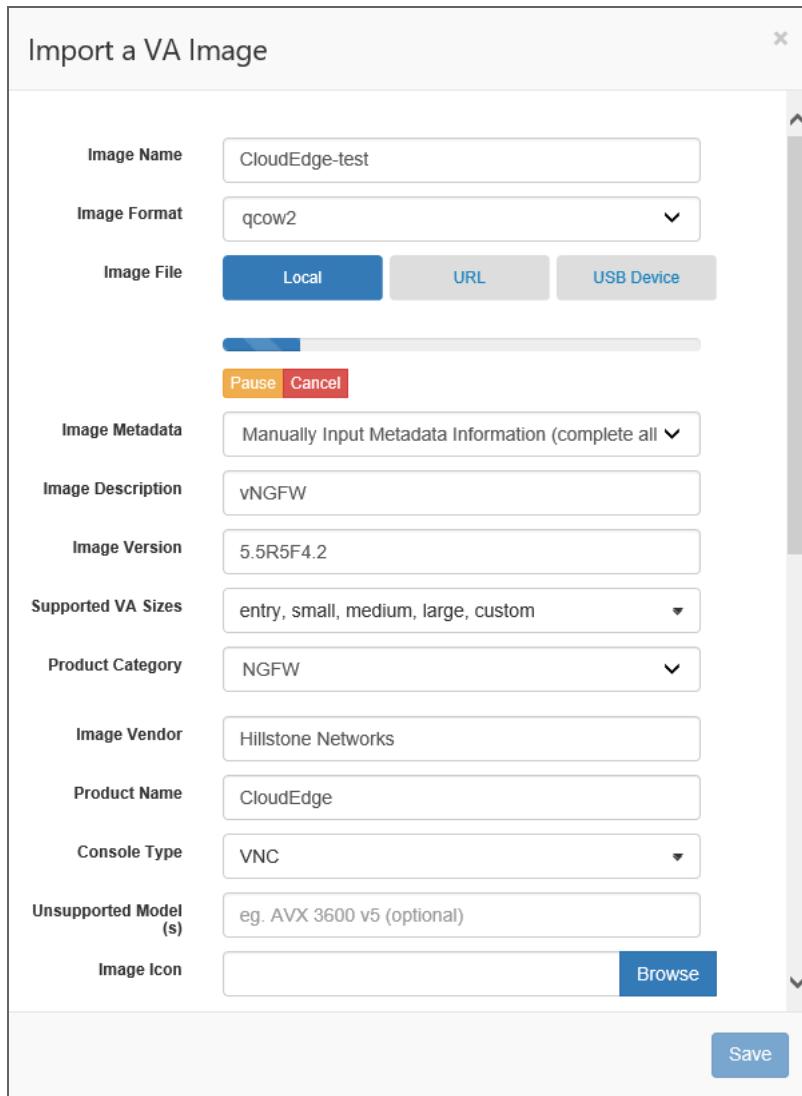

The dialog box is titled "Import a VA Image". It contains the following fields:

- Image Name:** CloudEdge-test
- Image Format:** qcow2
- Image File:** Local (selected), URL, USB Device
- Image Metadata:** Manually Input Metadata Information (complete all)
- Image Description:** vNGFW
- Image Version:** 5.5R5F4.2
- Supported VA Sizes:** entry, small, medium, large, custom
- Product Category:** NGFW
- Image Vendor:** Hillstone Networks
- Product Name:** CloudEdge
- Console Type:** VNC
- Unsupported Model (s):** eg. AVX 3600 v5 (optional)
- Image Icon:** (input field) with a **Browse** button

At the bottom right is a **Save** button.

In the Import a VA Image dialog, configure the following options.

Option	Description
Image Name	Enter the image name, such as "CloudEdge-test".
Image Format	Select qcow2 from the Image Format drop-down list.

Option	Description
Image File	Click the Local tab, click Browse , and select the image file from the local PC. The progress bar of uploading will pop up.
Image Metadata	Select Manually Input Metadata Information (Complete all fields below) from the Image Metadata drop-down list.
Image Description	Enter the description information of image.
Image Version	Enter the version information of image.
Supported VA Sizes	<p>Select the VM sizes according to requirement, including Large, Medium, Small, Entry and Shared-entry. Since the size selected here will affect the VM size of the CloudEdge instance you create later, you are suggested to select multiple sizes, such as Large, Medium, Small and Entry. The information of CPU and memory is shown as below:</p> <ul style="list-style-type: none"> • Large: 8 CPUs and 16GB memory. • Medium: 4 CPUs and 8GB memory. • Small: 2 CPUs and 4GB memory. • Entry: 1 CPU and 2GB memory.
Product Category	Select NGFW from the Product Category drop-down list.
Image Vendor	Enter the image vendor, such as "Hillstone Networks".
Product Name	Enter the product name, such as "CloudEdge".

Option	Description
Console Type	Select VNC from the Console Type drop-down list.

3. After above configurations, click **Save**. The image file will be imported successfully and displayed in the list.

VA Image									
VA Image									
No.	Image Name	Product Name	Product Category	Vendor	Version	Supported VA Sizes	Console Type	Description	Action
1	default	vAPV	ADC	Array Networks	Rel.APV.8.6.0.35	shared-entry, entry, small, medium, large			
2	ag_default	vxAG	VPN	Array Networks	Rel.AG.9.4.0.63	shared-entry, entry, small, medium, large		AVX vxAG image	
3	ubuntu	ubuntu	ADC	ubuntu	14.04	entry, small, medium, large, custom	VNC	ubuntu	
4	new_5_5R5F4.2	new_5_5R5F4.2	Firewall	hillstone	new_5_5R5F4.2	entry, small	VNC	new_5_5R5F4.2	
5	CloudEdge-test	CloudEdge	NGFW	Hillstone Networks	5.5R5F4.2	entry, small, medium, large, custom	VNC	vNGFW	

Step2: Creating the Instance

1. Click **VA** on the left navigation pane to enter the VA Management page.
2. Click **+** on the upper-left corner, and the **Create a VA Instance** dialog pops up.

Create a VA Instance

VA Name: vFW-A

Image: CloudEdge-test

VA Size: small

Domain ID: 1

Next

3. In the Create a VA Instance dialog, configure the corresponding options.

Option	Description
VA Name	Enter the VM name, such as "vFW-A".
Image	Select CloudEdge-test from the Image drop-down list.
VA Size	<p>Select the VM sizes from the VA Size drop-down list, which should meet the standard requirement. The standard requirements of three CloudEdge types are shown as below:</p> <ul style="list-style-type: none"> • VM-01: 2 CPUs and 2GB memory. • VM-02: 2 CPUs and 4GB memory. • VM-04: 4 CPUs and 8GB memory. <p>You are suggested to select Small, Medium or Large when installing VM-01 and VM-02, and to select Medium or Large when installing VM-04.</p>
Domain ID	Select 1 from the Domain ID drop-down list.

4. Click **Next** to enter the Assign Resources to VA Instance page. Click the **Manual** tab, and assign port VFs for CloudEdge as needed. When you select multiple port VFs, the xethernet interface of CloudEdge will be corresponded according to the selection order. For example, the first selected

port VF will be matched to xethernet0/1.

Assign Resources to VA Instance

Auto Manual

CPU Threads: 1 to 2

Memory: 4G to 42G

Unassign Port VFs or SSL VFs

Port VF Assignment

Port1 VFs							
Port2 VFs							
Port3 VFs							
Port4 VFs	✓	✓				○	○

SSL VF Assignment

Previous Next

- Click **Next** to enter the Confirm VA Instance Configuration page. After you confirm the configurations, click **Save**, and the created instance will be displayed in the list.

No.	VA Name	IP Address	Product Name	Product Category	VA Size	Image	Vendor	Status	Boot Time	Action
1	Router	ubuntu	ADC	small	ubuntu	ubuntu	Shutoff	N/A		...
2	vFW-A	CloudEdge	NGFW	small	CloudEdge-test	Hillstone Networks	Running	2018-10-09T10:12:02		...

Step 3: Configuring CloudEdge

After you create the CloudEdge instance, ethernet0/0 will be assigned as the management interface. By default, Array AVX will assign IP address for eth0/0 automatically with SSH, HTTPS and Ping enabled. The default route will also be set automatically. If Array AVX cannot provide the DHCP server, you need to configure as below:

1. By default, the created CloudEdge is powered off. Click , and then click  when the status of CloudEdge changes to  **Running**.
2. Select **>_VNC Console** in the pop-up dialog, and enter the CLI of CloudEdge. Enter the default username and password: hillstone/hillstone.
3. Disable the DHCP function of ethernet0/0 and configure the IP address.

```
login: hillstone
password:
SG-6000# configure
SG-6000(config)# interface ethernet0/0
SG-6000(config-if-eth0/0)# no ip add dhcp
SG-6000(config-if-eth0/0)# ip address 10.180.37.230/16
SG-6000(config-if-eth0/0)# exit
```

4. Configure the static route.

```
SG-6000(config)# ip vrouter trust-vr
SG-6000(config-vrouter)# ip route 0.0.0.0/0 10.180.0.1
SG-6000(config-vrouter)# exit
```


5. After above configurations, you can visit CloudEdge through SSH and HTTPS.

About how to use StoneOS, refer to StoneOS related documents ([click here](#)).

Deploying HA Scenarios of CloudEdge on Array AVX

HA Typical Scenarios

The following topology introduces how to deploy HA scenarios of CloudEdge on Array AVX. You should deploy vFW-A on AVX-A, and deploy vFW-B on AVX-B. After the deployment, vFW-A will be selected as the master device to forward traffic and vFW-B will be selected as the backup device. vFW-A will synchronize its configurations and status data to the backup device vFW-B. When the master device vFW-A fails to forward traffic, the backup device vFW-B will switch to the master device to forward traffic without interrupting user's communication, which can ensure network stability.

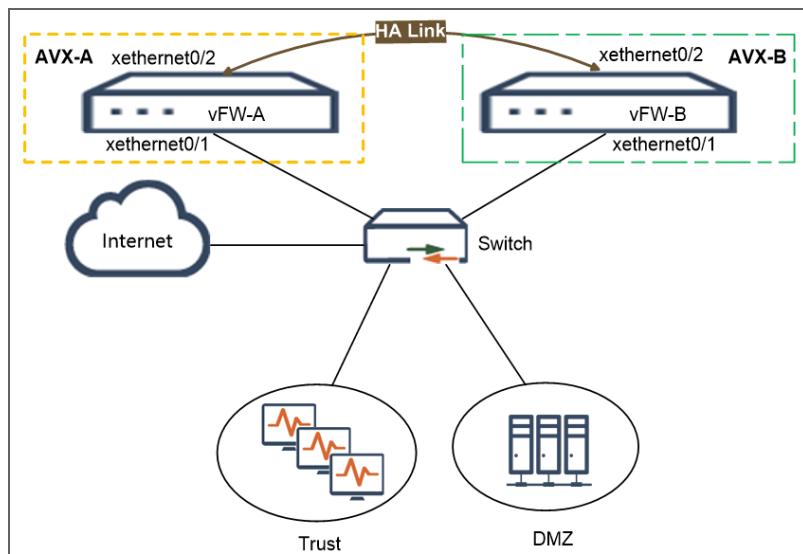

To deploy CloudEdge on an Array AVX platform, the host should meet the following requirements:

- Two Array AVXs have been installed.
- Each Array AVX has at least 2 CPUs and 2 GB memory.

Preparations

Take the following steps to obtain and download the image file required for deploying the CloudEdge on Array AVX (an .qcow2 file).

1. Enter the access URL for the Hillstone firmware download center (<https://images.hillstonenet.com/>) in your browser to open and log in to the Hillstone firmware download center (Hillstonenet images).
2. In the left-side directory, click **StoneOS** to access the StoneOS page.
3. According to your requirements, click the corresponding version number on the right side of the page to obtain and download the CloudEdge image file.

Notes: Different deployment environments require different formats of CloudEdge system files.

Please obtain the system file format that corresponds to your current deployment scenario. See [System Files](#). If you cannot determine the required system files for your current deployment scenario, please consult Hillstone Networks technical support for assistance.


Installing CloudEdge

Installing CloudEdge on AVX-A

Step 1: Importing the Image

1. Log in to Array AVX-A.
2. Click **VA Image** on the left navigation pane, and then click the **VA Image** tab.

3. On the VA Image page, click  on the upper-left corner, and the **Import a VA Image** dialog will pop up.

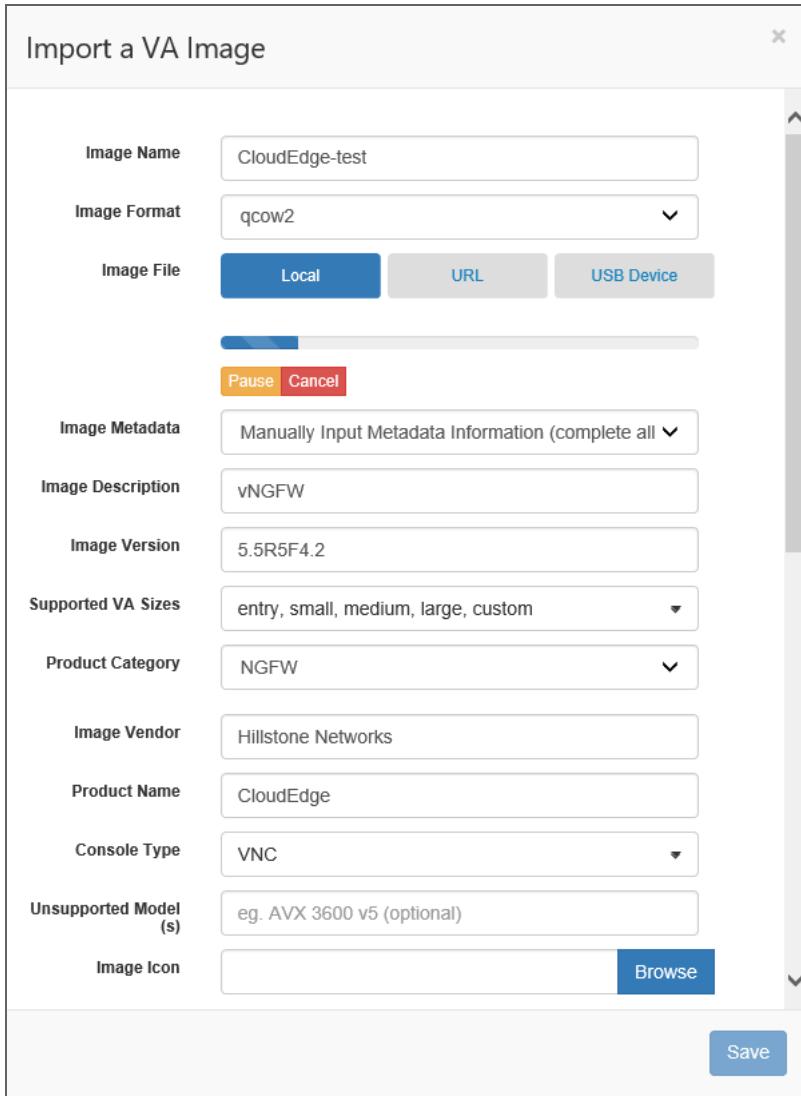

The dialog box is titled "Import a VA Image". It contains the following fields:

- Image Name:** CloudEdge-test
- Image Format:** qcow2
- Image File:** Local (selected), URL, USB Device
- Image Metadata:** Manually Input Metadata Information (complete all)
- Image Description:** vNGFW
- Image Version:** 5.5R5F4.2
- Supported VA Sizes:** entry, small, medium, large, custom
- Product Category:** NGFW
- Image Vendor:** Hillstone Networks
- Product Name:** CloudEdge
- Console Type:** VNC
- Unsupported Model (s):** eg. AVX 3600 v5 (optional)
- Image Icon:** (input field with a "Browse" button)

At the bottom right is a "Save" button.

In the Import a VA Image dialog, configure the corresponding options.

Option	Description
Image Name	Enter the image name, such as "CloudEdge-test".
Image Format	Select qcow2 from the Image Format drop-down list.

Option	Description
Image File	Click the Local tab, click Browse , and select the image file from the local PC. The progress bar of uploading will pop up.
Image Metadata	Select Manually Input Metadata Information (Complete all fields below) from the Image Metadata drop-down list.
Image Description	Enter the description information of image.
Image Version	Enter the version information of image.
Supported VA Sizes	<p>Select the VM sizes according to requirement, including Large, Medium, Small, Entry and Shared-entry.</p> <p>Since the size selected here will affect the VM size of the CloudEdge instance you create later, you are suggested to select multiple sizes, such as Large, Medium, Small and Entry. The information of CPU and memory is shown as below:</p> <ul style="list-style-type: none"> • Large: 8 CPUs and 16GB memory. • Medium: 4 CPUs and 8GB memory. • Small: 2 CPUs and 4GB memory. • Entry: 1 CPU and 2GB memory.
Product Category	Select NGFW from the Product Category drop-down list.
Image Vendor	Enter the image vendor, such as "Hillstone Networks".
Product Name	Enter the product name, such as "CloudEdge".

Option	Description
Console Type	Select VNC from the Console Type drop-down list.

- After above configurations, click **Save**. The image file will be imported successfully and displayed in the list.

VA Image									
VA Image									
No.	Image Name	Product Name	Product Category	Vendor	Version	Supported VA Sizes	Console Type	Description	Action
1	default	vAPV	ADC	Array Networks	Rel.APV.8.6.0.35	shared-entry, entry, small, medium, large			
2	ag_default	vxAG	VPN	Array Networks	Rel.AG.9.4.0.63	shared-entry, entry, small, medium, large		AVX vxAG image	
3	ubuntu	ubuntu	ADC	ubuntu	14.04	entry, small, medium, large, custom	VNC	ubuntu	
4	new_5_5R5F4.2	new_5_5R5F4.2	Firewall	hillstone	new_5_5R5F4.2	entry, small	VNC	new_5_5R5F4.2	
5	CloudEdge-test	CloudEdge	NGFW	Hillstone Networks	5.5R5F4.2	entry, small, medium, large, custom	VNC	vNGFW	

Step 2: Creating the Instance

- Click **VA** on the left navigation pane to enter the VA Management page.
- Click **+** on the upper-left corner, and the **Create a VA Instance** dialog pops up.

Create a VA Instance

VA Name	vFW-A
Image	CloudEdge-test
VA Size	small
Domain ID	1
Next	

3. In the **Create a VA Instance** dialog, configure the following options.

Option	Description
VA Name	Enter the VM name, such as "vFW-A".
Image	Select CloudEdge-test from the Image drop-down list.
VA Size	<p>Select the VM sizes from the VA Size drop-down list, which should meet the standard requirement. The standard requirements of three CloudEdge types are shown as below:</p> <ul style="list-style-type: none"> VM-01: 2 CPUs and 2GB memory. VM-02: 2 CPUs and 4GB memory. VM-04: 4 CPUs and 8GB memory. <p>You are suggested to select Small, Medium or Large when installing VM-01 and VM-02, and to select Medium or Large when installing VM-04.</p>
Domain ID	Select 1 from the Domain ID drop-down list.

4. Click **Next** to enter the **Assign Resources to VA Instance** page. Click the **Manual** tab, and assign port VFs for CloudEdge as needed. When you select multiple port VFs, the xethernet interface of CloudEdge will be matched according to the selection order. For example, the first selected port

VF will be matched to xethernet0/1.

Assign Resources to VA Instance

Auto Manual

CPU Threads: 1 to 2

Memory: 4G to 42G

Unassign Port VFs or SSL VFs

Port VF Assignment

Port1 VFs							
Port2 VFs							
Port3 VFs							
Port4 VFs	✓	✓				○	○

SSL VF Assignment

Previous Next

- Click **Next** to enter the Confirm VA Instance Configuration page. After you confirm the configurations, click **Save**, and the created instance will be displayed in the list.

No.	VA Name	IP Address	Product Name	Product Category	VA Size	Image	Vendor	Status	Boot Time	Action
1	Router		ubuntu	ADC	small	ubuntu	ubuntu	Shutoff	N/A	...
2	vFW-A		CloudEdge	NGFW	small	CloudEdge-test	Hillstone Networks	Running	2018-10-09T10:12:02	...

Step 3: Configuring CloudEdge

After you create the CloudEdge instance, ethernet0/0 will be assigned as the management interface. By default, Array AVX will assign IP address for eth0/0 automatically with SSH, HTTPS and Ping enabled.

The default route will also be set automatically. If Array AVX cannot provide the DHCP server, you need to configure as below:

1. By default, the created CloudEdge is powered off. Click , and then click  when the status of CloudEdge changes to  **Running**.
2. Select **>_VNC Console** in the pop-up dialog, and enter the CLI of CloudEdge to enter the default username and password: hillstone/hillstone.
3. Disable the DHCP function of ethernet0/0 and configure the IP address.

```
login: hillstone
password:
SG-6000# configure
SG-6000(config)# interface ethernet0/0
SG-6000(config-if-eth0/0)# no ip add dhcp
SG-6000(config-if-eth0/0)# ip address 10.180.37.230/16
SG-6000(config-if-eth0/0)# exit
```

4. Configure the static route.

```
SG-6000(config)# ip vrouter trust-vr
SG-6000(config-vrouter)# ip route 0.0.0.0/0 10.180.0.1
SG-6000(config-vrouter)# exit
```

5. After above configurations, you can visit CloudEdge through SSH and HTTPS.

Installing CloudEdge on AVX-B

To install CloudEdge on AVX-B, see [Installing CloudEdge on AVX-A](#).

Configuring HA on CloudEdge.

1. Configure the IP address of xethernet0/1 on the vFW-A (the master device of HA).

```
SG-6000# configure
SG-6000(config)# interface xethernet0/1
SG-6000(config-if-xe0/1)# zone untrust
SG-6000(config-if-xe0/1)# ip address 192.168.10.254/24
SG-6000(config-if-xe0/1)# exit
```

2. On vFW-A, create a track object to monitor the status of xethernet0/1, Once the interface fails to work, the backup device will take over. At the same time, configure the interface xethernet0/2 for HA, as well as the related information of IP and MAC.

```
SG-6000#configure
SG-6000(config)# track track1 //Create a track object with the name
"track1".
SG-6000(config-trackip)# interface xethernet0/1 weight 255 //Monitor
the status of xethernet0/1 for HA.
SG-6000(config)# ha link interface xethernet0/2 // The xethernet0/2
is used for HA.
SG-6000(config)# ha link ip 10.1.1.1/28 //This address is the IP
address of xethernet0/2.
SG-6000(config)# ha link mac 1st-interface-mac //Configure the real
MAC of HA control interface as the MAC address of HA heartbeat.
SG-6000(config)# no ha link virtual-mac enable //Device will use the
real MAC address of interface for communication instead of virtual
MAC.
SG-6000(config)# ha peer ip 10.1.1.2 mac 0050.56b5.b06c //Configure
the IP and MAC address of vFW-B's HA interface. You can view the MAC
address via the command "show interface" on vFW-B.
```

3. On the vFW-A, configure the HA group.

```
SG-6000(config)# ha group 0 //Add to HA group 0.
SG-6000(config-ha-group)# priority 50 //Specify the value of
priority. The smaller the value is set, the higher the priority. The
device of higher priority will be selected as the master device.
SG-6000(config-ha-group)# preempt 3 //Specify the preemption time as
3 seconds.
SG-6000(config-ha-group)# monitor track track1 // Add the track object
in HA group.
SG-6000(config)# ha cluster 1 //Add the device to the HA cluster to
make the HA function take effect.
```

4. Repeat the above steps to configure relevant information on vFW-B.

```
SG-6000#configure
SG-6000(config)# ha link interface ethernet0/1
SG-6000(config)# ha link ip 10.168.1.11/24
SG-6000(config)# ha link mac 1st-interface-mac
SG-6000(config)# no ha link virtual-mac enable
SG-6000(config)# ha peer ip 10.168.1.10/24 mac 0050.56b5.b051
SG-6000(config)# ha group 0
SG-6000(config-ha-group)# priority 100
SG-6000(config)# ha cluster 1
```

HA Results

After completing the above configuration, the vFW-A with high priority will automatically negotiate to be the master device, and the vFW-B with low priority will become the backup device. The master device and the backup device are marked with the letter "M" and letter "B" respectively in the console.

- When the two devices have been successfully negotiated, you only need to configure the master device and the configurations will automatically synchronize to the backup device.
- When vFW-A fails to forward traffic or its xethernet0/1 is disconnected, vFW-B will switch to the main device and start to forward traffic without interrupting user's communication.

About how to use StoneOS, refer to StoneOS related documents ([click here](#)).

DeployingCloudEdge on HuaweiCloud

System Requirements


To deploy Hillstone's virtual firewall(vFW) on HuaweiCloud, the host should meet the following requirements:

- CloudEdge virtual machine(VM) requires at least 2 vCPUs, and 2 GB memory. For the specification of product models, see [Product Information](#).
- Subscribe HuaweiCloud.

Installation Steps


Step 1: Creating a Virtual Private Cloud(VPC)

1. Log in to HuaweiCloud and click **Console**. Hover your mouse over the **Service List** navigation bar and select **Networking > Virtual Private Cloud**.

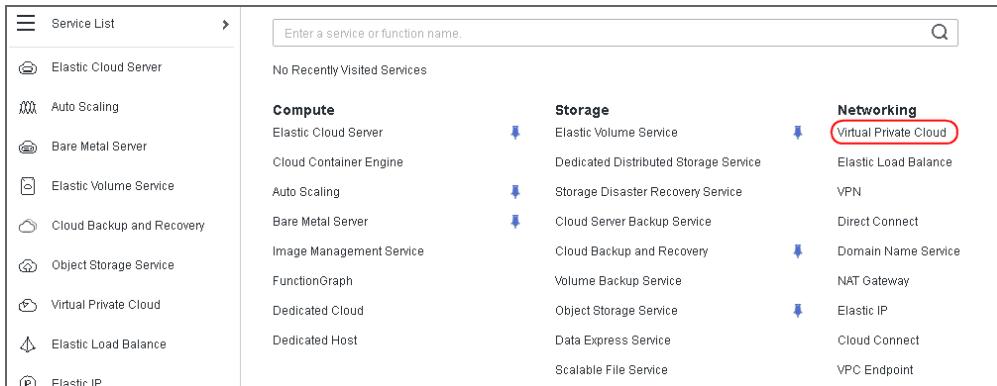

2. On the Virtual Private Cloud page, click **Create VPC** in the upper-right corner.

3. On the Create VPC page, configure parameters such as the name of the VPC, the CIDR block, and the default subnet. Click **Create Now**.

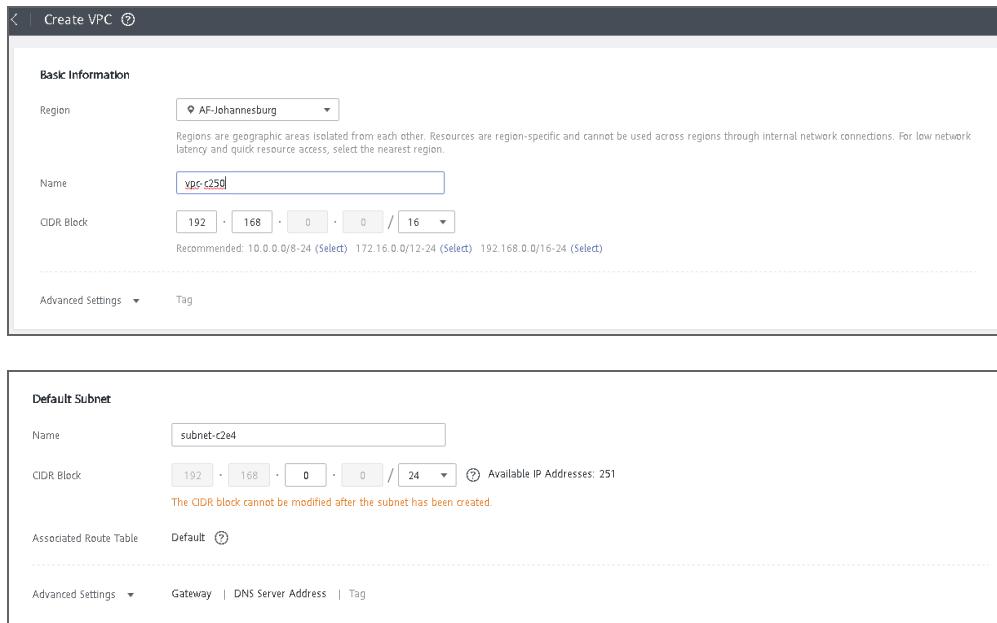

The image contains two screenshots of a cloud provider's interface for creating a VPC and a subnet.

Create VPC (Basic Information):


- Region:** AF-Johannesburg
- Name:** vpc-c250
- CIDR Block:** 192.168.0.0/16 (192.168.0.0 - 192.168.255.255)
- Advanced Settings:** Tag

Default Subnet:

- Name:** subnet-c2e4
- CIDR Block:** 192.168.0.0/24 (192.168.0.1 - 192.168.0.254) | Available IP Addresses: 254
- Associated Route Table:** Default
- Advanced Settings:** Gateway | DNS Server Address | Tag

4. Wait a few seconds, then you can view the created virtual private cloud on the VPC list.

5. Click **Subnets** in the left **Network Console** column. On the Subnets page, click **Create Subnet** in the upper-right corner to go to the pop-up **Create Subnet** dialog box.

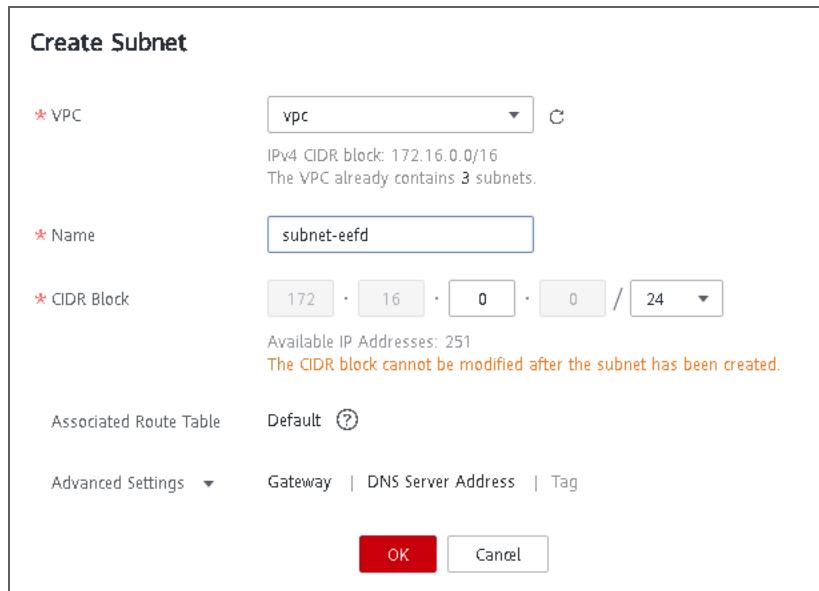


On the Create Subnet dialog box, configure the following options.

Option	Description
VPC	Specifies the VPC of the subnet.
Name	Specifies the name of the subnet.
IPv4 CIDR Block	Specifies the IPv4 CIDR block, which should be in the available range.
AZ	Specifies the AZ of the subnet.

Step 2: Creating a Cloud Server/ Deploying the CloudEdge

1. Hover your mouse over the **Service List** navigation bar and select **Compute > Elastic Cloud Server**.

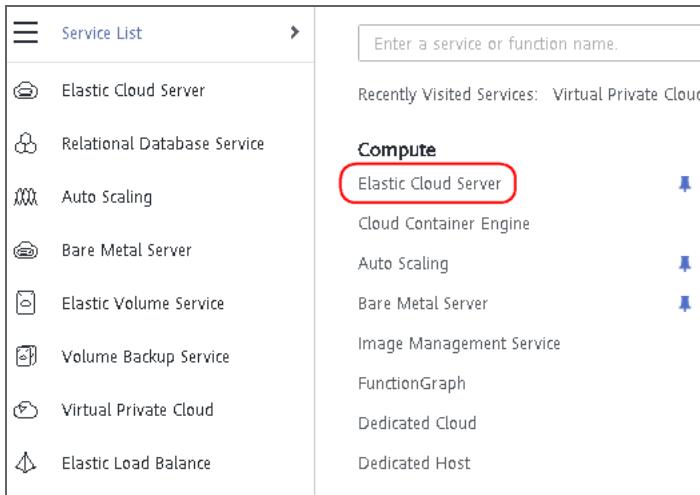

2. Click **Buy ECS** in the upper-right corner and configure the following options.

Billing Mode Yearly/Monthly Pay-per-use

Region AF-Johannesburg For low network latency and quick resource access, select the region nearest to your target users. [Learn how to select a region](#).

AZ Random AZ1 AZ2

Specifications Latest generation vCPUs All Memory All Flavor Name

Flavor Name	vCPUs Memory	CPU	Assured / Maximum Bandwidth	Packets Per Second (PPS)
s6.medium.4	1 vCPU 4 GiB	Intel Cascade Lake 2.6GHz	0.1 / 0.8 Gbit/s	100,000
<input checked="" type="radio"/> s6.large.2	2 vCPUs 4 GiB	Intel Cascade Lake 2.6GHz	0.2 / 1.5 Gbit/s	150,000
s6.large.4	2 vCPUs 8 GiB	Intel Cascade Lake 2.6GHz	0.2 / 1.5 Gbit/s	150,000
s6.xlarge.2	4 vCPUs 8 GiB	Intel Cascade Lake 2.6GHz	0.35 / 2 Gbit/s	250,000
s6.xlarge.4	4 vCPUs 16 GiB	Intel Cascade Lake 2.6GHz	0.35 / 2 Gbit/s	250,000
s6.2xlarge.2	8 vCPUs 16 GiB	Intel Cascade Lake 2.6GHz	0.75 / 3 Gbit/s	500,000
s6.2xlarge.4	8 vCPUs 32 GiB	Intel Cascade Lake 2.6GHz	0.75 / 3 Gbit/s	500,000

Selected specifications: General computing | s6.large.2 | 2 vCPUs | 4 GiB

Image Public image Private image Shared image Marketplace image AF-Johannesburg Select Image To use third-party images purchased on the Marketplace, ensure that you read and agree to [Marketplace Terms](#) and [Marketplace EULA](#).

System Disk General Purpose SS... 40 GiB IOPS limit: 2,280, IOPS burst limit: 8,000

Disks you can still add: 23

On the Configure Basic Settings page, configure the following options:

Option	Description
Billing Mode	You can select the billing mode according to your own needs.
Region	Specifies the geographic region of the elastic cloud server. The

Option	Description
	region specified here should conform to the region of the VPC.
AZ	Specifies the AZ of the elastic cloud server. The AZ specified here should conform to the AZ of the subnet.
CPU Architecture	Select "X86".
Specifications	CloudEdge vFW requires at least 2 vCPUs, 2 GB memory, and a 4 GB hard drive. The General computing s6.large.2 2vCPUs 4GiB here is used as an example.
Image	Click Marketplace image to go to the Select Marketplace Image page. Select Infrastructure Software > Security , and then select "Hillstone CloudEdge Virtual-Firewall (BYOL)". Click OK .
System Disk	You can select the system disk according to your own needs. "General Purpose SSD, 40 GiB" is recommended.

3. Click **Next: Configure Network** and configure the following options.

Network: vpc(172.16.0.0/16) | Subnet: subnet-1.0(172.16.1.0/24) | IP Assignment: Automatically assign IP address | Available private IP addresses: 249

Extension NIC: Add NIC

Security Group: default (739209e-ff92-4e92-9340-d58cd8de98e...) | Create Security Group

Security Group Rules:

Security Group Name	Protocol & Port	Type	Source	Description
default	All	IPv4	0.0.0.0/0	..

EIP: Auto assign | Use existing | Not required

EIP Type: Dynamic BGP

Billed By: Bandwidth | Traffic | Shared bandwidth

Bandwidth Size: 1, 2, 5, 10, 100, 200, Custom, 1, + | The bandwidth can be from 1 to 2,000 Mbit/s

Free Anti-DDoS protection

On the Configure Network page, configure the following options.

Option	Description
Network	Select the VPC and the subnet created in Sept 1, such as "vpc-test" and its subnet.
Security Group	You can select the security group according to your own needs. The security group selected here should be permitted by both inbound and outbound rules.
EIP	You should select Auto assign if you need to access CloudEdge from the Internet.
EIP Type	You can select the EIP type according to your own needs. "Static BGP" is used as an example here.
Billed By and Bandwidth Size	You can select the billing method according to your own needs. "Billed by Bandwidth, 1 Mbit/s" is recommended.

4. Click **Next: Configure Advanced Settings** to configure the following options.

The screenshot shows the 'Configure Advanced Settings' page with the following configuration:

- ECS Name:** ecs-8ac9
- Login Mode:** Password (selected)
- Key pair:** (dropdown menu)
- Username:** root
- Password:** (password field)
- Confirm Password:** (password field)
- Cloud Backup and Recovery:**
 - To use CBR, you need to purchase a backup vault. A vault is a container that stores backups for servers.
 - Options: Create new, Use existing, Not required (selected)
- ECS Group (Optional):**
 - Anti-affinity (selected)
 - Create ECS Group (button)
 - Select ECS group... (dropdown menu)
- Advanced Options:** Configure now (checkbox)

On the Configure Advanced Settings page, configure the following options.


Option	Description
ECS Name	Specifies the name of the ECS, such as "vfw-test".
Login Mode	You can select the login mode according to your own needs. If you select the password mode, you need to configure and confirm the password according to the password policy.
Cloud Backup and Recovery	You can decide whether to use the Cloud Backup and Recovery service or not.

5. Click **Next: Confirm**. On the **Confirm** page, select "default" for **Enterprise Project** and tick the **I have read and agree to the Image Disclaimer** check box.
6. Click **Submit**. Click **Pay**. You will see a message indicating that the cloud server is successfully created. That is to say, the deployment of CloudEdge is completed.

Step 3: Accessing CloudEdge

To access the firewall after the creation of the elastic cloud server, take the following steps:

1. Log in to HuaweiCloud and go to the Console page. Select **Cloud Server Console > Elastic Cloud Server**.
2. Click the ECS on the ECS list to go to its details page.

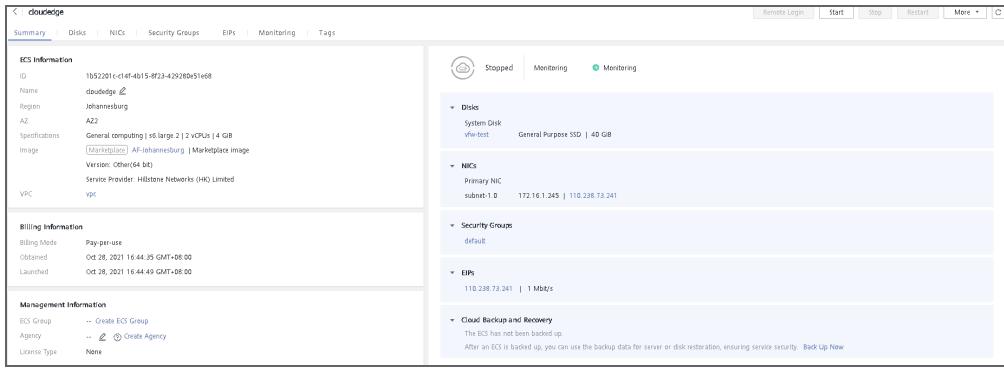

- Click **Remote Login** in the upper-right corner to go to the CLI interface of CloudEdge.

Accessing CloudEdge from the Internet

By default, the SSH and HTTPS protocols are enabled. You can access CloudEdge by using the elastic IP bound to the ECS through these two protocols.

Logging in via SSH2

- Open the remote terminal login software. Here, SecureCRT is taken as an example.
- Click **File > Quick Connect**, and then select SSH2 in Protocol drop-down list.
- Enter the elastic public IP in the **Hostname** text box.
- Enter the name of the VPC created in Step 1 in the **Username** text box.
- Click **Connect**.
- Enter the password configured in Step 1 and then click **OK** to log in.

Logging in via HTTPS

- Open the browser and enter the `https://` elastic IP address.
- Enter the name and password configured in Step 1 on the login page.


3. Press the Enter key to log in.

For more information on the operation of the firewall, see StoneOS User Guide ([Click here](#)).

Allowing Remote Users to Access VPC via SSL VPN

This example shows how to use SSL VPN to provide remote users with access to servers in own VPC.

The topology describes a remote user trying to visit the Server1 within a VPC located in a public cloud platform. Using SSL VPN tunnel, the connection between remote users and server in VPC is encrypted and safe.

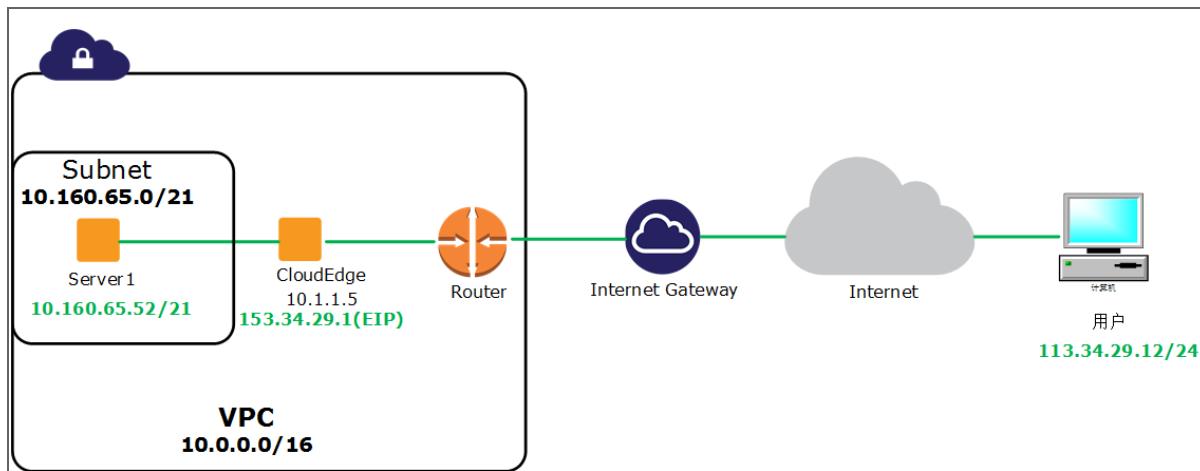

Step 1: Creating a User

Select **Object > User**. In the Local User tab, under Local Server, click **New > User**.

Name:	<input type="text" value="user1"/>
Password:	<input type="password" value="*****"/>
Confirm Password:	<input type="password" value="*****"/>

- Name: user1
- Password: 123456
- Confirm Password: 123456

Note: You can choose other types of AAA server to create new users according to your actual requirements.

Step 2: Configuring SCVPN Address Pool

Select **Network > VPN > SSL VPN**, and click **Address Pool**. In the prompt, click **New**.

Address Pool Name:	poo1
Start IP:	10.1.1.2
End IP:	10.1.1.200
Reserved Start IP:	
Reserved End IP:	
Mask:	255.255.255.0
DNS1:	10.160.65.60
DNS2:	
DNS3:	
DNS4:	
WINS1:	10.160.65.61
WINS2:	

- Address Pool Name: pool1
- Start IP: 10.1.1.2
- End IP: 10.1.1.200
- Mask: 255.255.255.0
- DNS1: 10.160.65.60
- WINS1: 10.160.65.61

Step 3: Creating Tunnel Interface

Select Network > Zone, and click New.

Basic			
Zone:	VPN <input type="text"/> (1-31) characters		
Description:	<input type="text"/> (0-63) characters		
Type:	<input type="radio"/> Layer 2 Zone	<input checked="" type="radio"/> Layer 3 Zone	<input type="radio"/> TAP

- Zone: VPN
- Type: Layer 3 Zone

Select Network > Interface, and click New > Tunnel Interface.

Basic			
Interface Name:	tunnel 1 <input type="text"/> (1-128)		
Description:	<input type="text"/> (0-63) characters		
Binding Zone:	<input type="radio"/> Layer 2 Zone	<input checked="" type="radio"/> Layer 3 Zone	<input type="radio"/> TAP
Zone:	VPN <input type="button" value="▼"/>		
IP Configuration			
Type:	<input checked="" type="radio"/> Static IP	<input type="radio"/> Dhcp	
IP Address:	10.1.1.1 <input type="text"/>		
Netmask:	24 <input type="text"/>		

- Interface Name: tunnel1
- Binding Zone: Layer 3 Zone
- Zone: VPN
- Type: Static IP
- IP Address: 10.1.1.1
- Netmask: 24

Note: Tunnel interface must be of the same network segment of SSL VPN address pool and not in the pool.

Step 4: Configuring SCVPN

Select Network > VPN > SSL VPN, and click **New**.

Welcome to the SSL VPN Configuration Wizard

Secure Connect VPN(SSL VPN) is a simple and easy-to-use remote connection method integrated in the device. It is based on the SSL login technique and provides a secure visit to private networks.

SSL VPN Name: (1-31)characters

Assigned Users

Select the AAA server for user authentication.

AAA Server: [View AAA Server](#)

Domain: (1-31)characters

Verify User Domain Name: Enable

<input type="checkbox"/>	AAA Server	Domain	Verify User Domain Name
<input type="checkbox"/>	local		<input type="checkbox"/>

In the Name/Access User tab:

- SSL VPN Name: ssl1
- AAA Server: select **local**, and click **Add**

In the Interface tab:

Access Interface								
Egress Interface1:	ethernet0/0	The interface where SSL VPN server listens the request from SSL VPN client Configured for optimal path detection (1-65535)TCP port of VPN service						
Egress Interface2:	-----							
Service Port:	4433							
Tunnel Interface								
Tunnel Interface:	tunnel1	Edit						
Information:	<table border="1"> <thead> <tr> <th>Zone</th> <th>IP Address</th> <th>Mask</th> </tr> </thead> <tbody> <tr> <td>VPN</td> <td>10.1.1.1</td> <td>255.255.255.0</td> </tr> </tbody> </table>		Zone	IP Address	Mask	VPN	10.1.1.1	255.255.255.0
Zone	IP Address	Mask						
VPN	10.1.1.1	255.255.255.0						
Address Pool								
Address Pool:	pool1	Edit						
Information:	<table border="1"> <thead> <tr> <th>Start IP</th> <th>End IP</th> <th>Mask</th> </tr> </thead> <tbody> <tr> <td>10.1.1.2</td> <td>10.1.1.100</td> <td>255.255.255.0</td> </tr> </tbody> </table>		Start IP	End IP	Mask	10.1.1.2	10.1.1.100	255.255.255.0
Start IP	End IP	Mask						
10.1.1.2	10.1.1.100	255.255.255.0						

- Egress Interface 1: ethernet0/0
- Service port: 4433
- Tunnel Interface: tunnel1
- Address Pool: pool1

In the Tunnel Route tab:


Tunnel Route	
IP:	10.160.65.0
Mask:	255.255.248.0

- IP: 10.160.65.0
- Netmask: 255.255.248.0

Note: Tunnel route must be of the same network segment of internal server ("Server1").

Step 5: Creating Policy from VPN to trust

Select Policy > Security Policy, and click New.

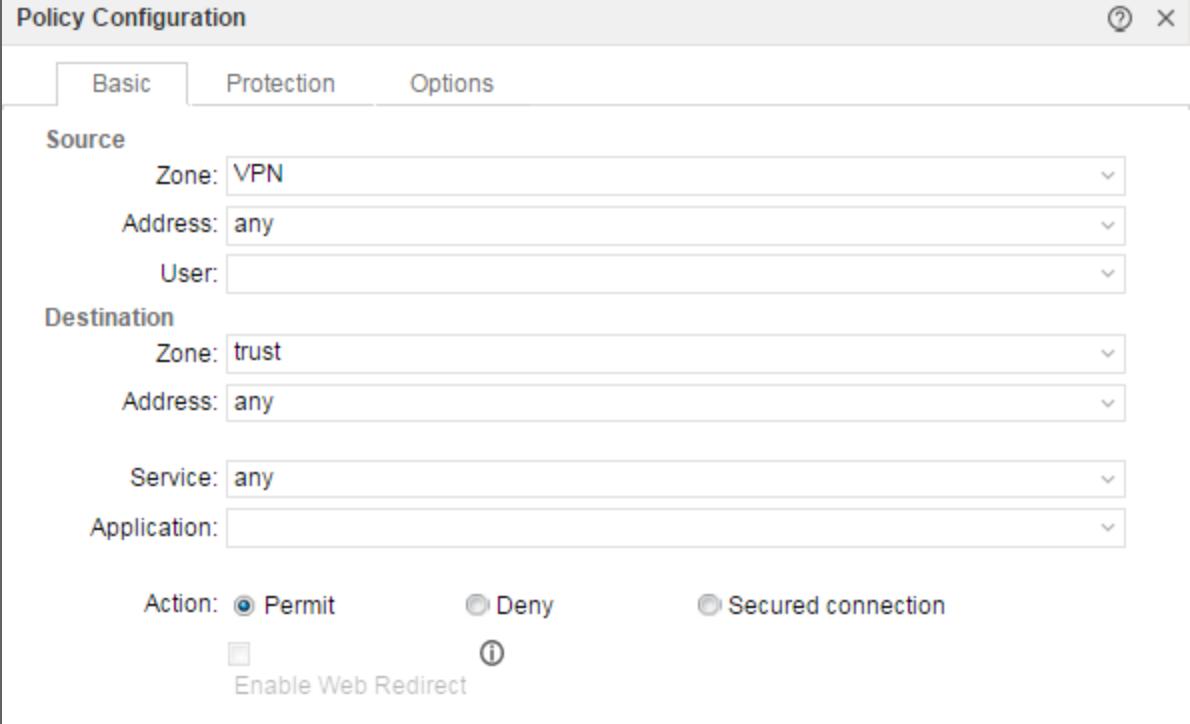

The screenshot shows the 'Policy Configuration' dialog box with the 'Basic' tab selected. The configuration is as follows:

- Source:**
 - Zone: VPN
 - Address: any
 - User: (empty)
- Destination:**
 - Zone: trust
 - Address: any
 - Service: any
 - Application: (empty)
- Action:** Permit Deny Secured connection
- Enable Web Redirect

- Source Information
 - Zone: VPN
 - Address: Any
- Destination Information
 - Zone: trust
 - Address: Any
- Other Information
 - Service: Any

- Action: Permit

Step 6: Accessing the Resources in VPC

After configuration, the remote user enters address "https://153.34.29.1:4433" in a browser. The browser will show login page. Enter username and password ("user1" and "123456"), and then click **Login**. The browser will prompt to hint you to download the VPN client. Follow the steps to download and install the scvpn client. The remote user click open the Hillstone Secure Connect client, and enter information below:



- Server: 153.34.29.1
- Port: 4433
- Username: user1
- Password: 123456

When the icon in the taskbar becomes green, the client is connected. Then, the remote user can access the Server1 via SSL VPN.

Change History

Version 3.3

Release Date: May 2025

This release primarily revises the VMware ESXi version compatibility for "Deploying CloudEdge on VMware ESXi."

Version 3.2

Release Date: November 2024

This release mainly changes the configuration commands for "Deploying HA Scenarios of CloudEdge via HAVIP on Alibaba Cloud".

Version 3.1

Release Date: November 2024

The main update in this release is the change of the download address for the CloudEdge image file:
<https://images.hillstonenet.com/>

Version 3.0

Release Date: June 2024

The deployment manual for the first release of the CloudEdge virtual firewall (vFW) version 5.5R11 was published.

Version 2.0

Release Date: September 2023

This release is the deployment manual for version 5.5R10F3 of the CloudEdge virtual firewall (vFW). The main new addition is "Deploying the HA Peer Mode of CloudEdge on Alibaba Cloud".

Version 1.0

The deployment manual for the first release of the CloudEdge virtual firewall (vFW) version 5.5R10 was published.